



## INTELLIGENT FACILITY SOLUTIONS

Electric Works, 3 Concourse Way, Sheffield, S1 2BJ

United Kingdom: +44 (0) 114 354 0047

Eire: +353 190 36387

[sales@ihdryers.co.uk](mailto:sales@ihdryers.co.uk)

[www.intelligenthanddryers.com](http://www.intelligenthanddryers.com)

# Hand dryer Troubleshooting Guide

## Speedflow Plus

PROBLEM	POSSIBLE CAUSE	SOLUTION
The dryer does not work	No electricity supply	<ul style="list-style-type: none"><li>✓ Check if the master switch has not been triggered</li><li>✓ Check that the equipment is correctly plugged</li><li>✓ Make sure it has the proper power</li></ul>
	Faulty installation	<ul style="list-style-type: none"><li>✓ Check if all the wiring connections to the terminal block are OK</li></ul>
	The LED sensor is dirty	<ul style="list-style-type: none"><li>✓ Make sure the LED sensor visor is completely clean</li></ul>
	Other possible causes	<ul style="list-style-type: none"><li>✓ Check if the cover fits well with the base, is fixed with the screws and does not interfere with the detectors</li></ul>
		<ul style="list-style-type: none"><li>✓ Check the coal motor brushes condition and make sure the motor is working properly</li></ul>
		<ul style="list-style-type: none"><li>✓ Check whether any external object is blocking the rotor</li></ul>
		<ul style="list-style-type: none"><li>✓ Make sure that the ECU is feeding the motor and no component is damaged</li></ul>
The dryer starts automatically	The LED sensor is dirty	<ul style="list-style-type: none"><li>✓ Make sure the LED sensor visor is completely clean</li></ul>
	Over-sensitivity	<ul style="list-style-type: none"><li>✓ Adjust the detection distance in the ECU by turning the potentiometer</li></ul>
	Cover not properly fixed	<ul style="list-style-type: none"><li>✓ Check if the cover fits neatly on the base, is fixed with the screws and does not interfere with the detectors. Note: to fix the cover to the base, tighten the screws from within.</li></ul>
The dryer runs continuously (non-stop)	Over-sensitivity	<ul style="list-style-type: none"><li>✓ Adjust the detection distance in the ECU by turning the potentiometer</li></ul>
	The LED sensor is dirty	<ul style="list-style-type: none"><li>✓ Make sure the LED sensor visor is completely clean</li></ul>
	Other possible causes	<ul style="list-style-type: none"><li>✓ Make sure that the ECU is feeding the motor and no component is damaged</li></ul>
		<ul style="list-style-type: none"><li>✓ Check if the cover fits neatly on the base fixed with the screws and does not interfere with the detectors. Note: to fix the cover to the base, tighten the screws from within.</li></ul>
The dryer works on and off	The ECU does not work properly	<ul style="list-style-type: none"><li>✓ Make sure that the ECU is feeding the motor properly and no component is damaged</li></ul>
		<ul style="list-style-type: none"><li>✓ Check if all the wiring connections are right</li></ul>
The dryer blows cold air	The heating element is disconnected	<ul style="list-style-type: none"><li>✓ Move the switch to connect the heating element</li></ul>
	The internal temperature exceeded the maximum	<ul style="list-style-type: none"><li>✓ Wait for a couple of minutes and then restore the thermal protection of the heating element</li></ul>
	Damaged heating element	<ul style="list-style-type: none"><li>✓ Check the heating element and replace it if necessary</li></ul>

# Hand dryer Troubleshooting Guide

## Speedflow Plus

PROBLEM	POSSIBLE CAUSE	SOLUTION
The dryer makes a weird noise	Faulty hand dryer fixation	✓ Check if the silent blocks in the rear part of the base are properly fixed and if the base is correctly fixed to the wall. Also check whether the cover is properly fixed to the base
	Damaged motor	✓ Check the coal motor brushes condition and make sure the motor is working properly
	External solids	✓ Check whether any external solid is moving freely inside the motor or inside the cover
	Damaged ECU	✓ Make sure that the ECU is feeding the motor properly and that no component is damaged. ✓ If not, replace the ECU
The motor does not work but the heating element does and it's red	The coal motor brushes are over	✓ Check if the coal motor brushes are well assembled and in good condition. If not, replace the motor
	The motor is not properly wired	✓ Check if the motor is properly wired to the ECU
	Other motor faults	✓ Check if the motor works properly and if any component is damaged. If necessary, replace the damaged component
The dryer blows a low airflow	The motor speed is set up to a minimum	✓ Check the speed adjustment potentiometer and set it to a higher speed
	Insufficient voltage value	✓ Make sure the ECU is supplied with the proper power and the hand dryer is properly grounded
	The filter is dirty	✓ Clean the filter or replace it
	In other cases	✓ Check if the motor is working properly. If yes, replace the ECU
The dryer produces sparks or burning smell	The coal motor brushes are over	✓ Check if the coal motor brushes are well assembled and in good condition. If not, replace the motor
	The motor is damaged	✓ Check if the motor works properly and if any component is damaged. If necessary, replace the motor

ECU: Electronic Control Unit

These tasks must be performed by a qualified technician