

LED L3
(Auto)

LED L4
(Door Open)

8 9 10



JUMPER OFF

JUMPER ON




Switch
excluded



Switch
enabled

White

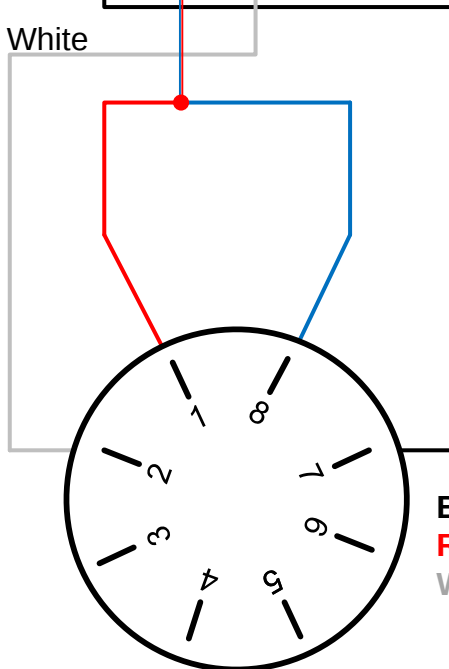

NOTE: Switch Exclusion Jumper
This Jumper must be removed for the external key switch to function correctly.

Black – Terminal 8
Red & Blue – Terminal 9
White – Terminal 10

Position 3

Close Digiway
terminals 8 & 9

Position 1

All terminals open

Position 2

Close Digiway
terminals 9 & 10

