

Quick programming guide

The system has been setup at the factory to provide a minimum amount of setup.

1. Make sure the GT8 Controller has started up (bottom PCB red LEDs have finished flashing).
2. Set the 6-digit Security code, used for all programming operations. This has a default of 000000 and requires changing before other programming is enabled, see page 23, e.g. send SMS text 000000?026?723457# to set it to 723457. Note this step has to be done first and is a security measure to avoid misuse of the system.
3. Check the signal strength is ok, referring to page 29, e.g. send SMS test 723457?202?#, when using a Security code of 723457, and check the value returned is between 20 and 31.
4. Program at least 1 phone number to ring for each call button used, see pages 24 and 26, e.g. send SMS text 723457?101?07955542327# to set call button 1 to phone 07955542327 when using Security code 723457.

In most applications only the above steps will be required, but the following additional features maybe required.

5. If required, add phone numbers to automatically unlock when ringing in with a caller ID, see pages 11 and 27, e.g. Send SMS text 723457?198?01234567890# to recognise phone no. 01234567890 when using Security code 723457.
6. If required, set the Call-in code number to allow remote dial in calls and access, see pages 11 and 22.
7. If more than 1 phone number is to be rung from a single call button, set the call divert option required (see page 17), as well as, the Aux input mode required (see page 18).
8. If there are 2 entrances to be controlled, refer to pages 37 and 38.
9. If anti-tailgating is to be used, refer to page 37.
10. If the system alive automated text/SMS feature is required set the System alive days and phone no., see pages 23 and 24.

IMPORTANT: Use the space provided at the back of this manual to record the Security code, important settings and phones numbers allocated.