

COMELIT ADVANCE VMS



Please read this manual thoroughly before use and keep it for future reference

Install and uninstall the software

Install the software


There are three setups:

- mysql-installer-community
- Advance VMS Server
- Advance VMS client


Install MySQL

Double click MySQL.exe to install.


- 1) Select "I accept the license terms", Click [Next], select "Custom" and then click [Next];

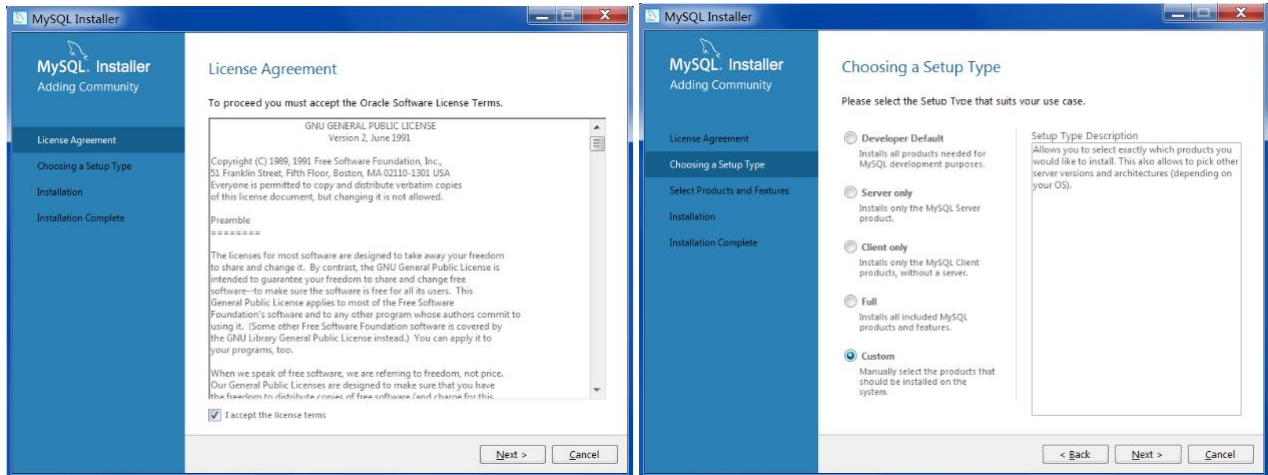


- 2) Select MySQL Servers, unfold it and select "MySQL Server 5.7". Click ➡ to add it. Then click [Next] ➡ [Execute];

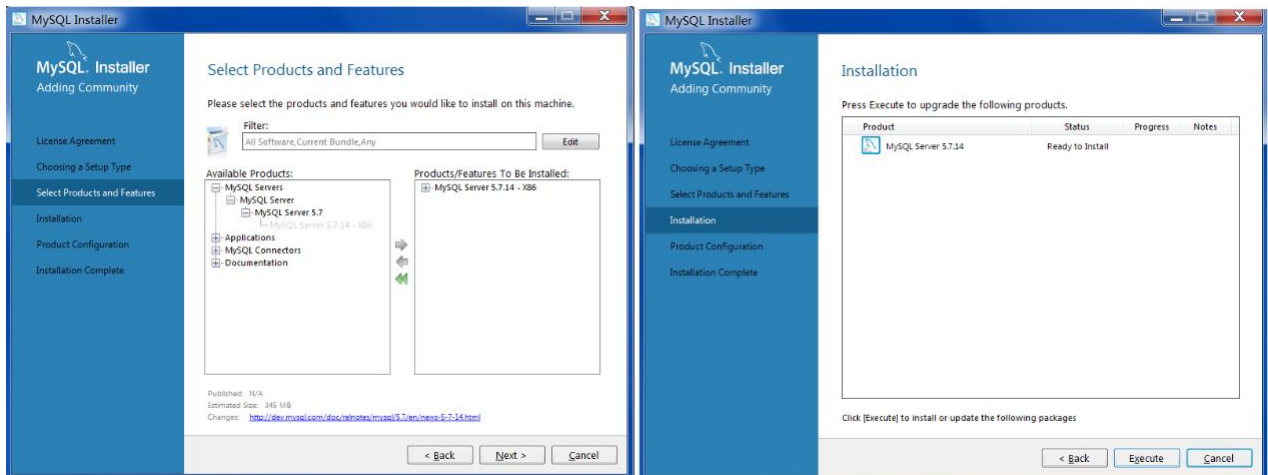


- 3) Click [Next] ➡ [Next], as shown below.

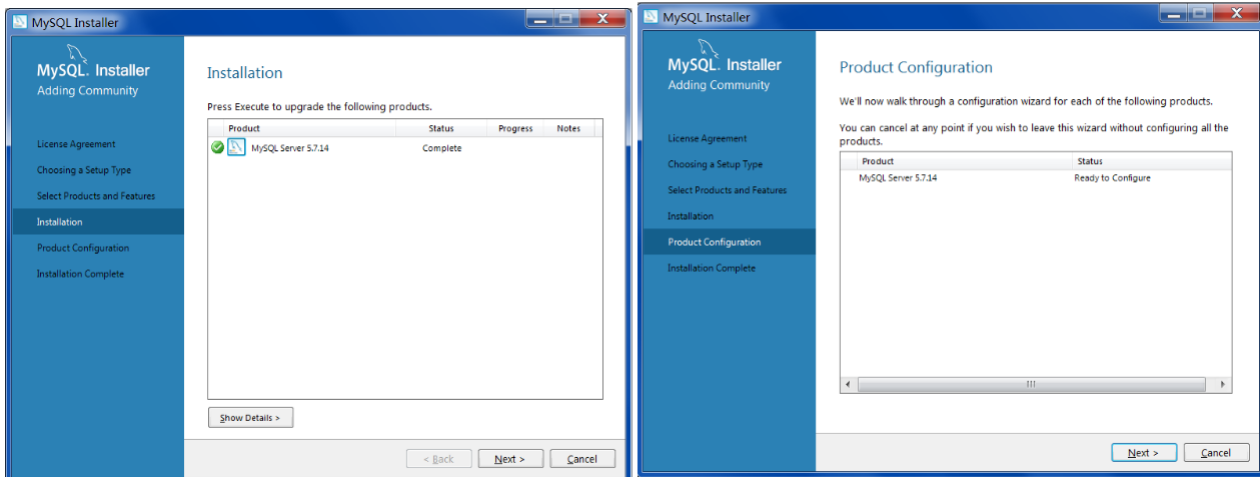


- 4) Check "TCP/IP", "Open Firewall port for network access" and "Show Advanced Options" as shown below. Then enter MySQL Root Password (minimum of 4 characters).

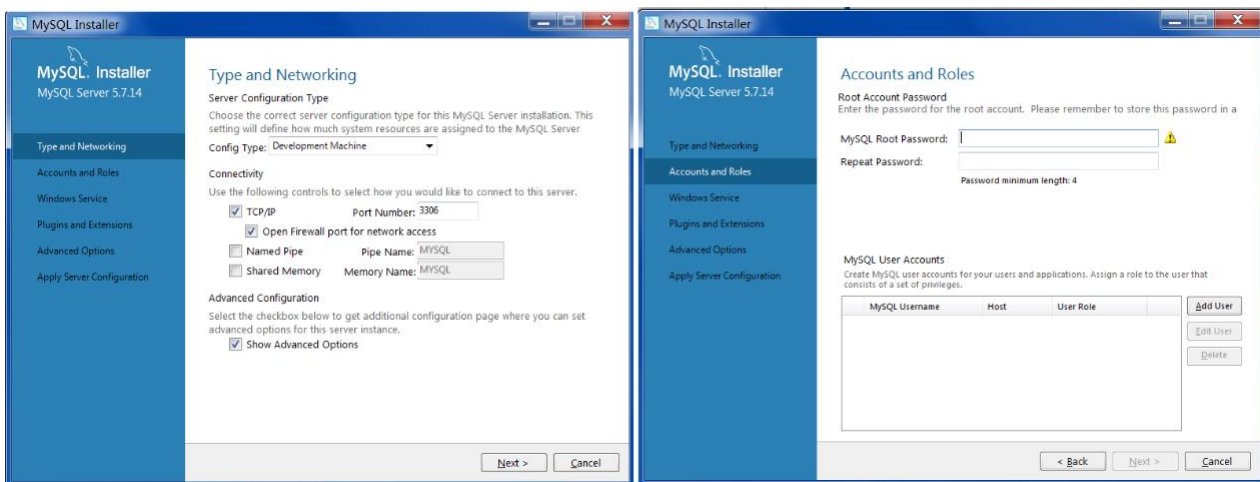


- 5) Click [Add User] to set username and password. To avoid forgetting, please enter "root" and the password. Then click [OK] ➡ [Next];

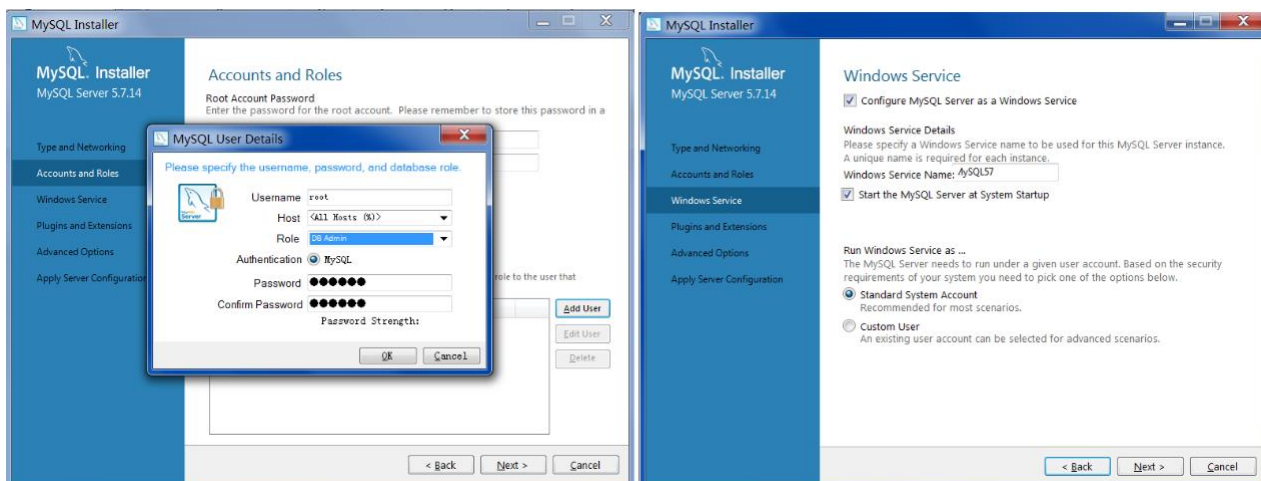


- 6) Click [Next] to go to “Advanced Options” interface. Please set according to the following picture. Then Click [Next];

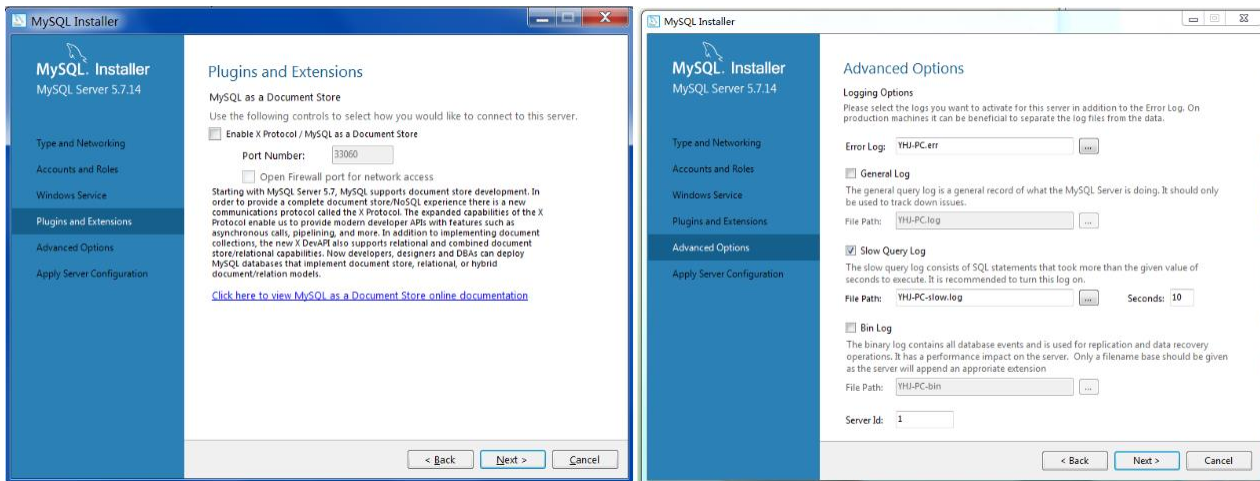

- 7) Click [Execute] → [Finish]

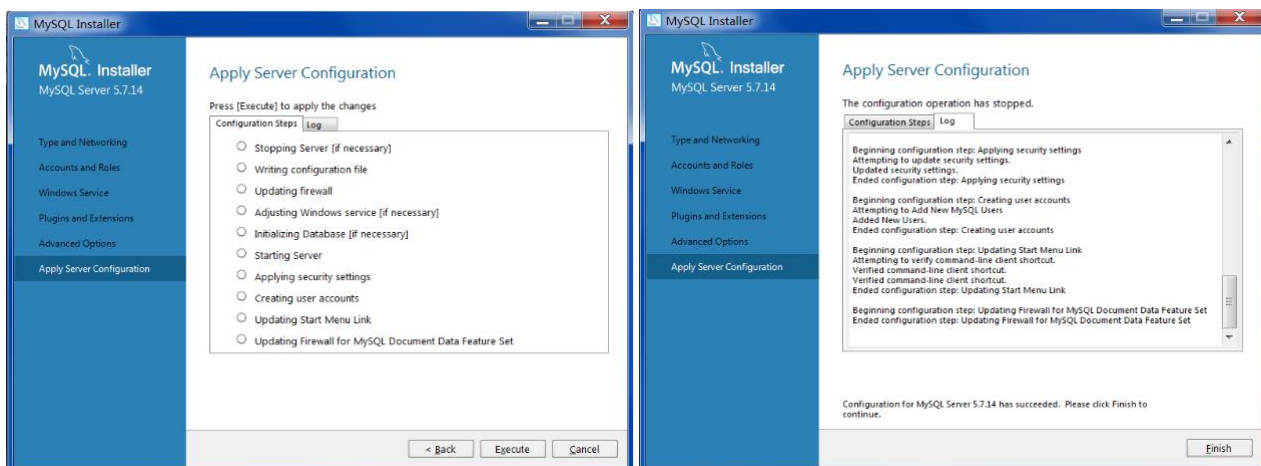


- 8) Click [Next] → [Finish].

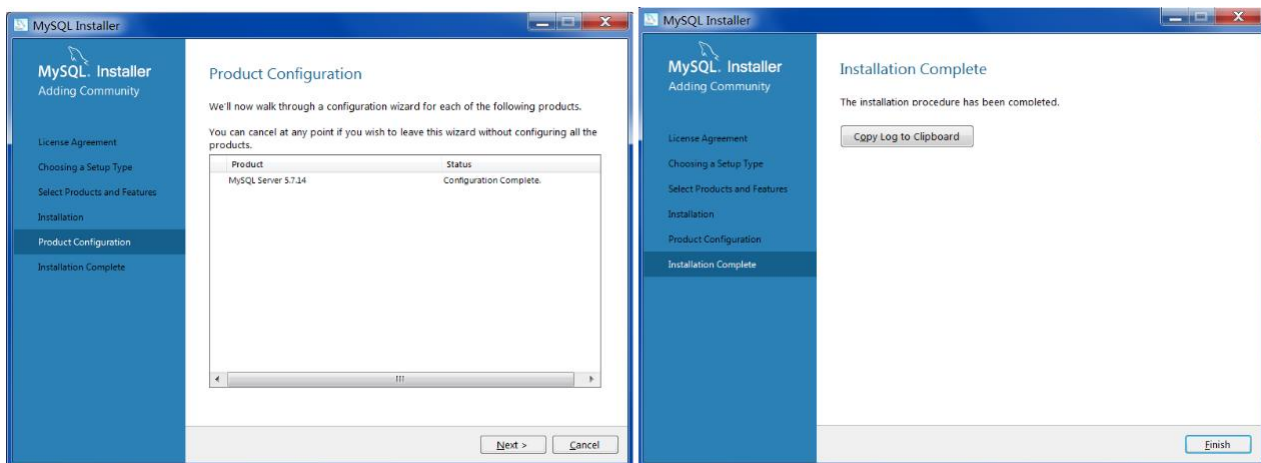


Install the Server


- 1) Double click “Advance VMS server.exe”. Select the desired GUI language.

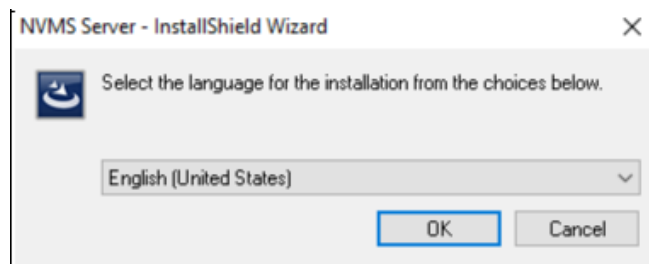


- 2) A tip will popup to suggest you to close the antivirus software.

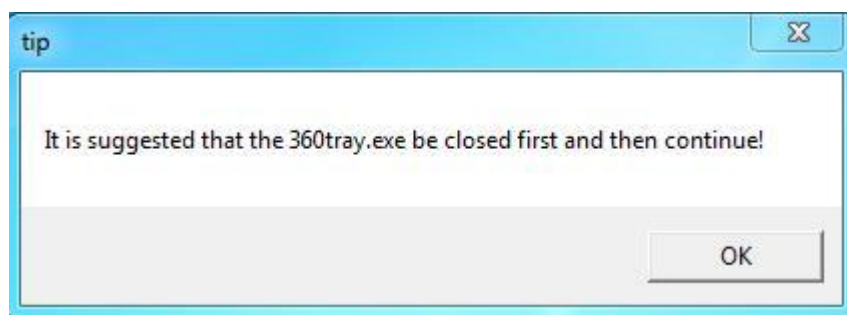


- 3) Click “I accept the terms of the license agreement” and then click [Next].

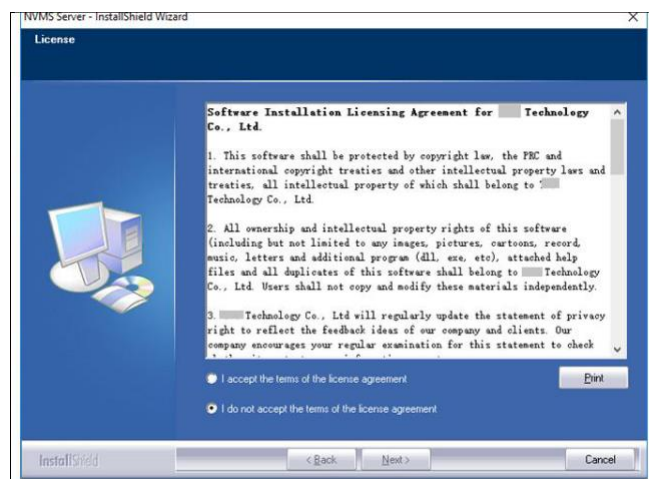


- 4) Click [Browse] to select the installation location and then click [Next].

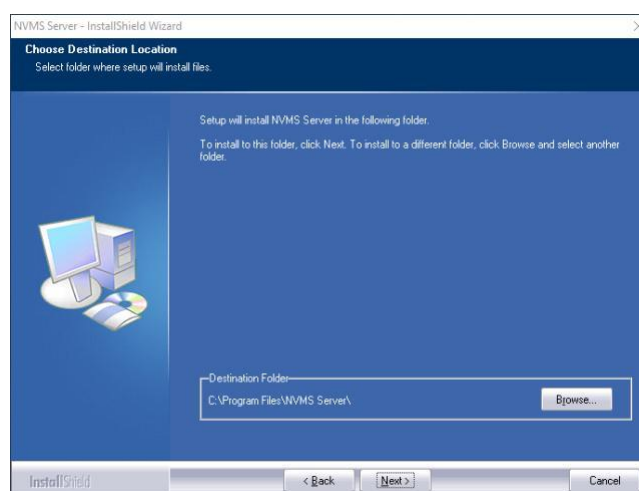

- 5) Click [Next].

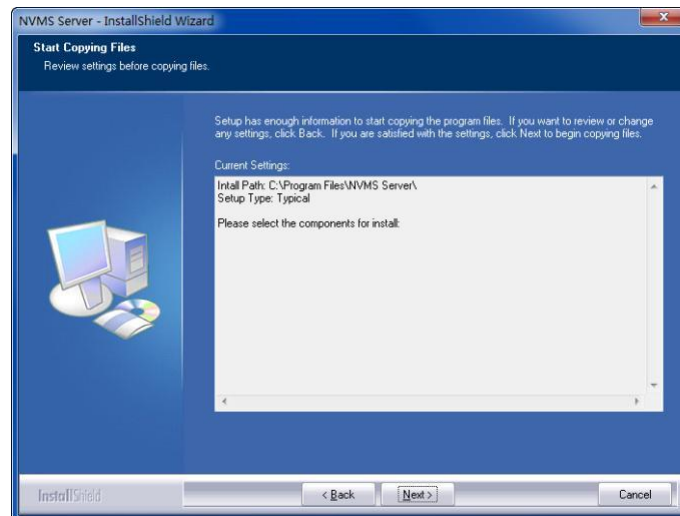


- 6) Check "Launch Software" as needed and then click [Finish].

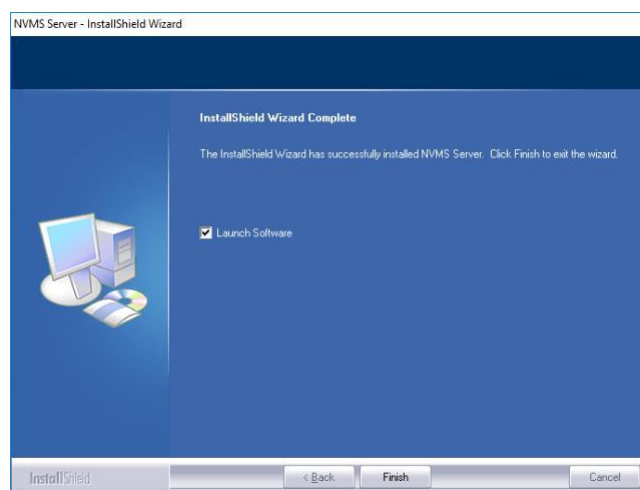


Install the Client


- 1) Double click "Advance VMS Client setup.exe". Select the desired GUI language.

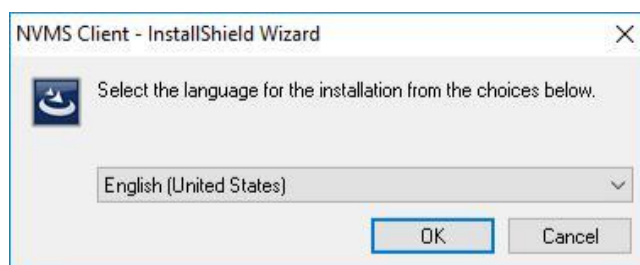


- 2) A tip will popup to suggest you to close the antivirus software.

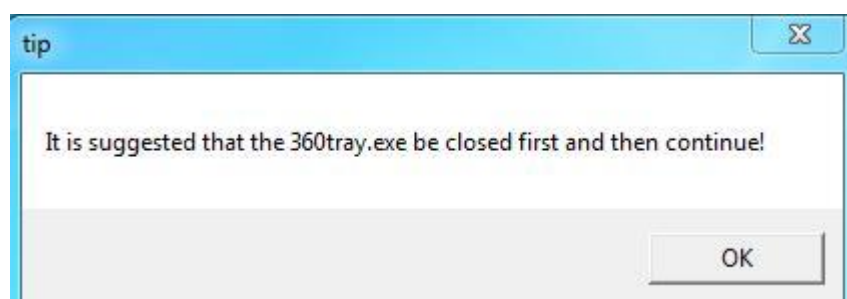


- 3) Click “I accept the terms of the license agreement” and then click [Next].

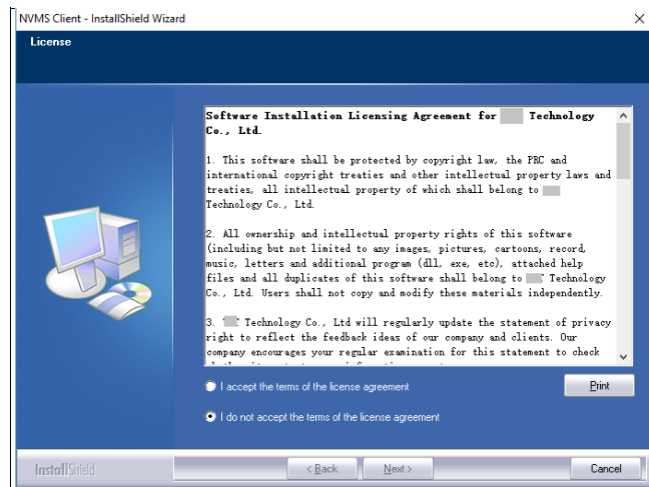

- 4) Click [Browse] to select the installation location and then click [Next].

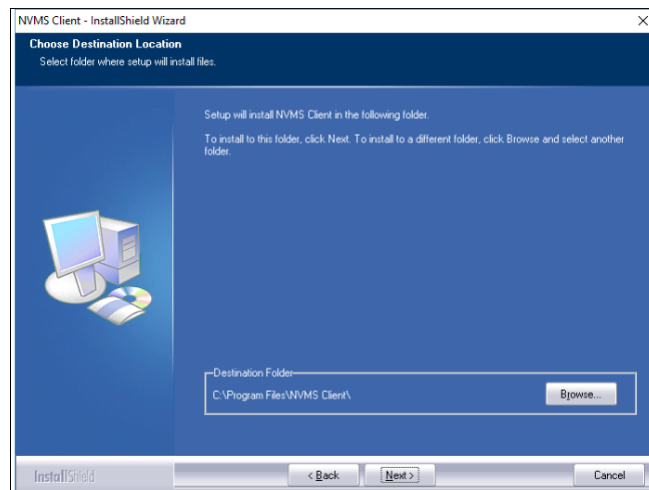

- 5) Check “Launch Software” as needed and then click [Finish].

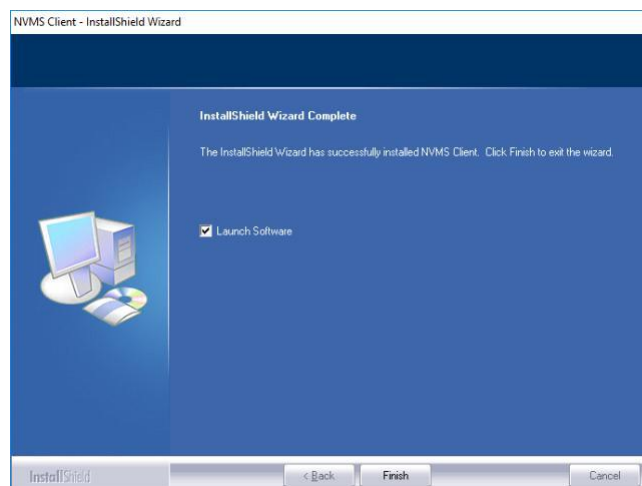


Uninstall the Software

It is strongly recommended to backup the configuration data before installing the new version of Comelit Advance VMS. The uninstallation steps of the Server are similar to the uninstallation of the client.

Click “Start” ➡ All Programs ➡ Advance VMS Server ➡ Uninstall to popup the following wizard. Click “Yes” to confirm.




Then click “Finish” button to completely uninstall Authentication Server.

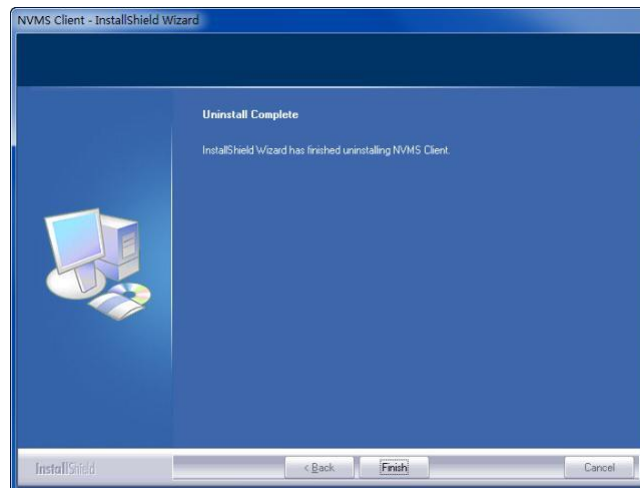


Login

Run Servers

Before logging onto the client, please ensure that all the servers are working normally. Having been installed successfully for the first time, the server tray will minimize on the taskbar of the computer. Double click the server tray icon to popup the server tray interface. You can also right click the server tray icon and select "Display main interface to popup the server tray interface as shown below.

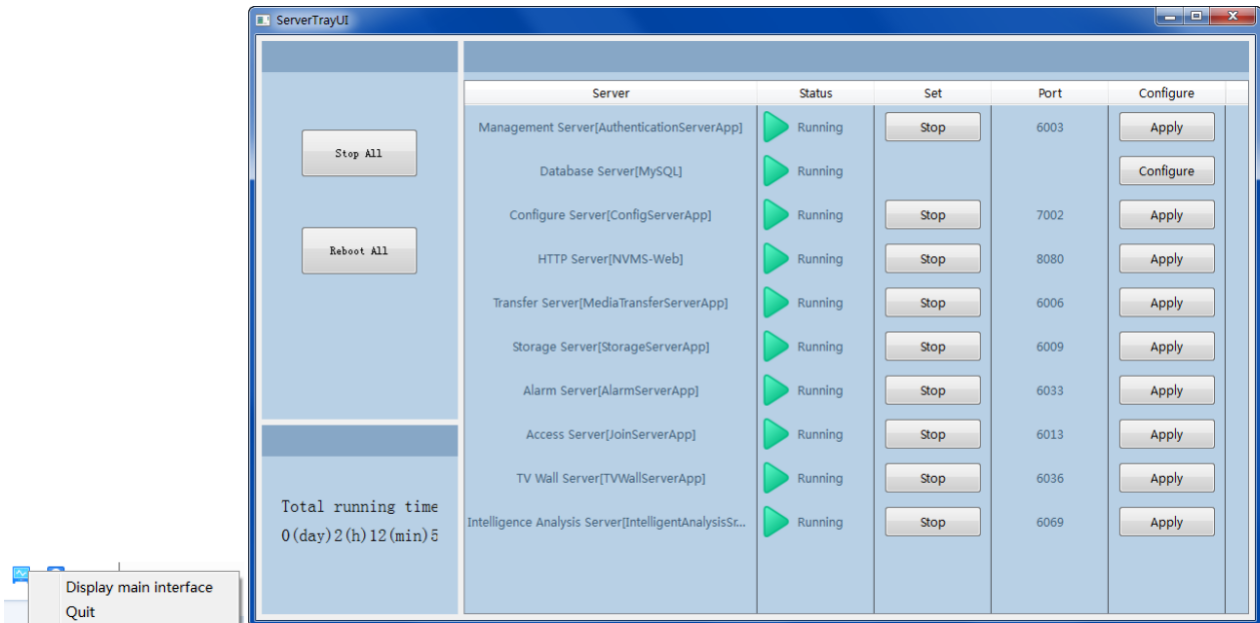


The working status and port can be checked from the server tray. All servers can be stopped and restarted. All server ports can be modified. Click the corresponding port number to modify it. The modified port will be saved automatically after you move your mouse to other place. The database can also be configured by clicking [Configure].

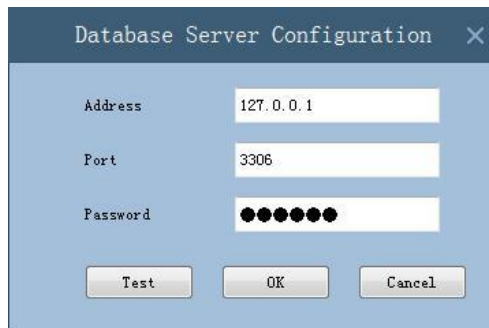

Login

Double click the shortcut icon of "MonitorClient" to run the software as shown below.

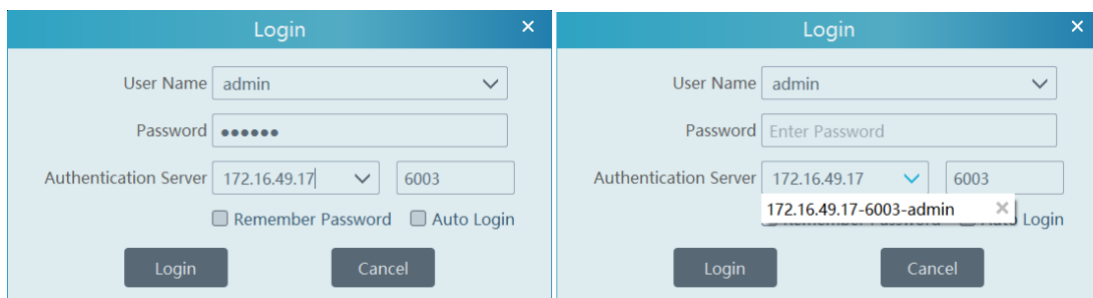

- ① Enter Username and Password (the default **Username** is **admin**; the default **Password** is **123456**).
- ② Enter the IP address and port (the default **Port** is **6003**) of the authentication server.
Check "Remember Password" or "Auto Login" as needed.
- ③ Click [Login].