

The KP1 / KP2 / KP4 / KP5 are end push panic buttons complete with tamper detection. Latching units will hold alarm status when pushed until reset with the supplied key. **Non-latching units are not supplied with a key.**

VARIANTS

CODE	DESCRIPTION	SECURITY GRADE	CODE	DESCRIPTION	SECURITY GRADE
KP1	Latching, Single push, White	1	KP1S	Latching, Single push, S/steel fascia	1
KP1B	Latching, Single push, Brass fascia	1	KP2	Non-latching, Single push, White	1
KP2S	Non-latching, Single push, S/steel fascia	1	KP2B	Non-latching, Single push, Brass fascia	1

KP4	Latching, Double push, White	2	KP4S	Latching, Double push, S/steel fascia	2
KP4B	Latching, Double push, Brass fascia	2	KP5	Non-latching, Double push, White	2
KP5S	Non-latching, Double push, S/steel fascia	2	KP5B	Non-latching, Double push, Brass fascia	2

INSTALLATION

Remove the lid from the unit, remove the key from the base internals (if supplied) and screw the base to the mounting surface.

Connect the tamper terminals as shown opposite. Removing the lid will break this tamper circuit.

Connect the reed terminals to alarm circuit. When the button is pushed, the alarm circuit will be broken (reed is normally closed). For KP4 & KP5 variants, both buttons must be pushed simultaneously.

Two spare terminals are provided for any additional wiring.

When wiring is complete, carefully fit the lid to the base ensuring that no snagging occurs.

Screw the lid into place & test operation.

