

MxPro⁵

Spares and Accessories

A range of spares and accessories for the MxPro 5 Series Control Panels and ancillaries.

Spare PCBs

- Spare 1-, 2-, 4-Loop Panel Basecards mounted on Chassis Plates to fit Small, Medium, Large or Deep, and Extended Enclosures.
- Spare 1-, 2-, 4-Loop Panel Basecards as 'PCB only', i.e. without a power supply unit.
- Spare 1-, 2-, 4-Loop Panel Power Supply Units, i.e. without printed circuit board. PSU ratings are 3A, 4A, 5A respectively.
- Spare LCD Display Card
- Spare Remote Terminal Cards, and Fault Tolerant options.
- Spare Peripheral Fault Tolerant Network Card.

Spare Accessories

- Panel Door Keys
- Panel Spares Kits
- Fascia plates and membranes
- PC Connection Leads



Order Codes and Options

MXS-501-CP-S	Spare MX-5100 Basecard w Small Chassis - No Loop cards. Programmed
MXS-501-CP-M	Spare MX-5100 Basecard w Medium Chassis - No Loop cards. Programmed
MXS-502-CP	Spare MX-5200 Basecard w Medium Chassis - No Loop cards. Programmed
MXS-503-CP	Spare MX-5400 Basecard w Large Chassis - No Loop cards. Programmed
MXS-503-CP-E	Spare MX-5400 Basecard w Extended Chassis - No Loop cards. Programmed
MXS-501-PCB	Spare MX-5100 Basecard PCB only - No Loop cards. Programmed
MXS-502-PCB	Spare MX-5200 Basecard PCB only - No Loop cards. Programmed
MXS-503-PCB	Spare MX-5400 Basecard PCB only - No Loop cards. Programmed
MXS-501-PSU	Spare MX-5100 Basecard PSU only - 3A
MXS-502-PSU	Spare MX-5200 Basecard PSU only - 4A
MXS-503-PSU	Spare MX-5400 Basecard PSU only - 5A
MXS-504	Spare MX-5000 Display Card
MXS-506	Spare MX-5010 Card only
MXS-506/FT	Spare MX-5010 Card only - Fault -Tolerant
MXS-507	Spare MX-5020 Card Only
MXS-507/FT	Spare MX-5020 Card Only - Fault -Tolerant
MXS-508	Spare MX-5030 Card Only
MXS-508/FT	Spare MX-5030 Card Only - Fault - Tolerant

MXS-028	Spare Peripheral Fault Tolerant Network Card
MXS-011	Spare Panel Door Key
MXS-013	Spare Panel Lock and Key
MXS-505	Spare Glazed Door Key
MXS-518	MX-5000 Control Panels Spares Kit
MXS-519	MX-5000R Rack Mount Spares Kit
MXS-520	MX-5000 Remote Terminals Spares Kit
MXS-521	MX-5000 Battery Leads
MXS-522	MX-5000R Battery Leads
MXS-5-FP-S	Spare Fascia Plate and Membrane
MXS-5-FP-ML	Spare Fascia Plate and Membrane
UP-001	RS232 Cable (9-way D female to 3-way Plug) - 2 metres
UP-006	USB convertor with RS232 Cable

[Check if this document is up to date](#) | [Give us feedback](#)

Advanced, The Bridges, Balliol Business Park, Newcastle upon Tyne, NE12 8EW, UK **T:** +44 (0)345 894 7000, **E:** enquiries@advancedco.com,
W: www.advancedco.com

As our policy is one of constant product improvement the right is therefore reserved to modify product specifications without prior notice.