



OE-MM Gen 2 Hardware Manual - Features and Contents

[Important Safeguards](#)

[Warranty](#)

[Controls and Connections](#)

[Features](#)

[Box Contents](#)

[Default Administrator Username and Password](#)

[Recorder Installation](#)

Important Safeguards


View [Important Safeguards](#) before installing the recorder.

Warranty

View the [Product Warranty](#) for the recorder.

Controls and Connections

MM Gen 2 Back Panel

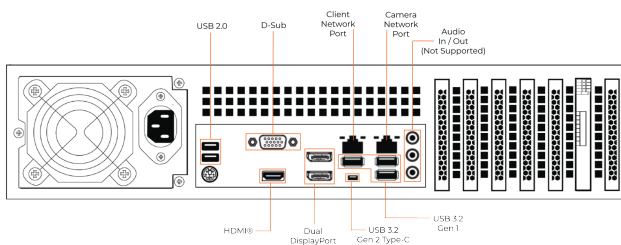

Features

OpenEye MM-Series recorders include the following features:

- Fully integrated with OpenEye Web Services (OWS)
- Complete remote operation and administration
- Record up to 128 channels of IP video per server (requires upgrades)
- Up to 96TB on-board storage
- Front mounted removable hard drives
- Optional RAID 5 storage upgrade
- Solid state OS drive for improved reliability and fast boot times
- Optional Linux or Windows OS
- Dual GbE for Dedicated Client and Camera Networks
- Locking front bezel for added security

Box Contents

OpenEye MM-Series recorders come with a power cord, a mouse, and a rack mount installation kit. Identify the following components to make sure everything has been properly included with your new recorder. If any of the following items are missing, contact the dealer to arrange a replacement.



OE-MM Recorder



Power Cord



Mouse

Default Administrator Username and Password

When the server software is launched, the user will be prompted to log in. On Linux systems, this will launch automatically after powering on the recorder. On Windows systems, users will need to sign in to Windows, then launch

Apex Server Home from the desktop.

The default Administrator usernames and passwords for are listed below:

NOTE: Once registered to OWS, a user's OWS credentials can be used to log in, in addition to the default credentials listed below.

LINUX SYSTEM LOG IN

Username: admin

Password: 1234

WINDOWS SYSTEM LOG IN

Administrative User

Username: NVRAdmin

Password: The server serial number is used as the default password for both accounts

Standard User

Username: NVRUser Password: The server serial number is used as the default password for both accounts

Additional Notes:

- It is strongly recommended to change the password during setup.
- The serial number can be found on the product label located on the side of the server.

Related Links

[OE-MM Gen 2](#)

[MM Gen 2 Cloud Managed Server Quick Start Guide](#)

[Recorder Installation](#)