



INSTALLATION & MAINTENANCE MANUAL

FLHLxxx

GENERAL INSTRUCTIONS

INSTALLATION & MAINTENANCE MANUAL

These instructions should be read carefully and retained after installation by the end user for future reference and maintenance.

**These instructions should be used to aid the installation of the following products:
FLHL100 / FLHL200 / FLHLASxx / FLHLPCxx / FLHLPM / FLHLSMxx**

SAFETY

- This product must be installed in accordance with the latest edition of the IEE Wiring Regulations (BS7671) and current Building Regulations. If in any doubt, consult a qualified electrician
- Please isolate mains prior to installation or maintenance
- Check the total load on the circuit (including when this luminaire is fitted) does not exceed the rating of the circuit cable, fuse, or circuit breaker
- Please note the IP (Ingress Protection) rating of this product when deciding the location for installation
- This product is Class I and must be earthed
- This product is IP66 rated

INSTALLATION

Note - If this luminaire is being used in conjunction with an external PIR or sensor, please confirm with the manufacturer of the sensors that they are compatible with LED luminaires.

- Provide power to the required point of installation (refer to BS7671 for correct cabling methods). Suitable IP rated junction boxes should be used where required
- The power source connections should be local and accessible via a suitable IP rated enclosure
- Using the bracket as a template, mark the location for, and drill the fixing holes ensuring not to infringe with any gas/water pipes or electrical cables
- Fix the luminaire using suitable fixings (not provided) to the surface (see Fig.1)

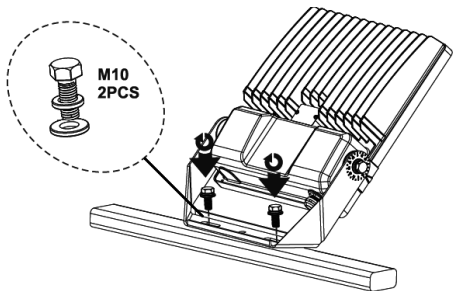 


Fig. 1

- The angle of the luminaire can be adjusted, depending on the installation method, using the bolts on the side of the bracket (see Fig. 2)

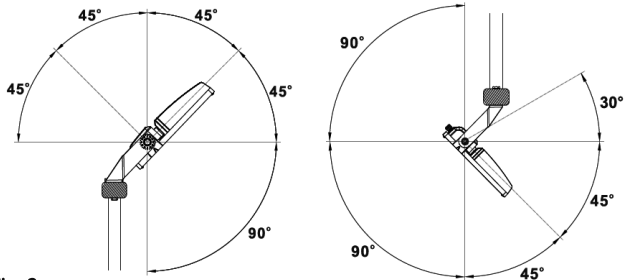 


Fig. 2

- Connect the luminaire to the mains supply ensuring the correct polarity is observed: Live (brown), Earth (green/yellow), Neutral (blue)
- Switch on and check for correct operation

ACCESSORIES

*Accessories are sold separately

POLE MOUNT BRACKET, FLHLPM

- Insert the pole bracket on top of the pole and fix using the provided fixings. Fix the luminaire to the bracket using suitable fixings (not provided) (see Fig. 3)

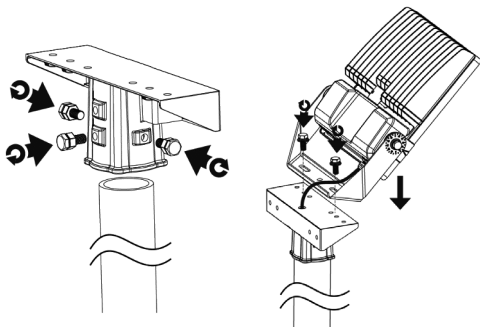 


Fig. 3


Note – Please note that the cable entry point on the bracket is not IP rated. Depending on the installation, the installer must ensure that suitable means are used to prevent water ingress into the pole

POLE CLAMP BRACKET, FLHLPC100 / FLHLPC200

- Suitable pole diameters:

Product	Diameter
FLHLPC100	40 – 90mm
FLHLPC200	40 – 150mm

 - Insert the threaded bars through one of the brackets and fix the luminaire to it using the provided fixings. Add the other bracket to the opposite side of the pole and tighten. If needed, two luminaires can be fixed on opposite sides of the bracket (see Fig. 4)

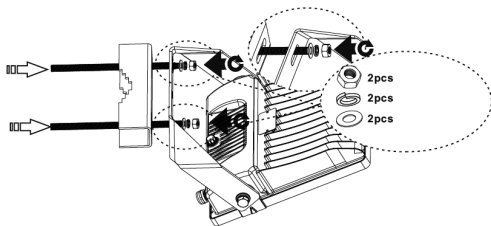

One luminaire

Two luminaires

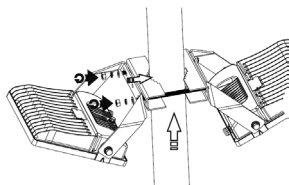 
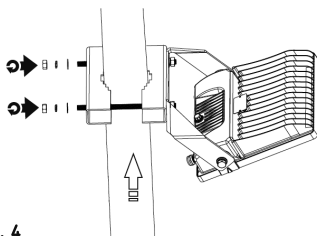 


Fig. 4

**SYMMETRICAL AND ASYMMETRICAL LENSES,
FLHLAS100 / FLHLAS200 / FLHLSM100 / FLHLSM200**

- Remove the diffuser by unscrewing the 4 corner screws
- Remove the LED array screws
- Add the lens ensuring the arrow printed in the top middle of the lens is pointing upwards
- Fix the lens with the LED array screws
- Reattach the diffuser

WARNING

 
This product must be disconnected from the circuit if subjected to any high voltage or insulation resistance testing. Irreparable damage will occur if this instruction is not followed.

This product is not suitable for installation in or near a coastal or marine environment.

GENERAL

This product contains a light source of energy efficiency class D to Regulation (EU) No. 2019/2015 and (UK) 2021 No. 1095.

This product contains a non-replaceable light source and a non-replaceable control gear



Clean the external surfaces with a damp cloth using a mild solution of detergent and warm water only, do not use aggressive cleaning products or solvents that may damage the product.

This product is non-dimmable.

The external supply cable of this luminaire cannot be replaced; if the cable is damaged, the luminaire should be destroyed.

This product should be dismantled for disposal when it reaches the end of its life. Please see website for dismantling instructions.

This product should be recycled in the correct manner when it reaches the end of its life. Check local authorities for where facilities exist.

WARRANTY

This product has a warranty of 5 years from the date of purchase. Failure to install this product in accordance with the current edition of the IEE Wiring Regulations (BS7671), improper use, or removal of the batch code will invalidate the warranty. If this product should fail within its warranty period, it should be returned to the place of purchase for a free of charge replacement. ML Accessories does not accept responsibility for any installation costs associated with the replacement product. Your statutory rights are not affected. ML Accessories reserve the right to alter product specification without prior notice.

Supplied By:

(UK) Manufacturer

ML Accessories Ltd, Unit E Chiltern Park, Boscombe Road, Dunstable LU5 4LT,
www.mlaccessories.co.uk

(EU) Authorised Representative

nnuks Holding GmbH, Niederkasseler Lohweg 18,
40547 Düsseldorf, Germany,
Email: eprel@nnuks.com

