

**Knightsbridge**

These instructions should be read carefully and retained after installation by the end user for future reference and maintenance.

**SAFETY**

- This product must be installed in accordance with the latest edition of the IEE Wiring Regulations (BS7671) and current Building Regulations. If in any doubt, consult a qualified electrician.
- Please isolate mains prior to installation or maintenance.
- Check the total load on the circuit including when this product is fitted does not exceed the rating of the circuit cable, fuse or circuit breaker.
- Do not overload this accessory or subject it to conditions outside its rating.
- Please note the IP (Degree Protection) rating of this product when deciding the location for installation.
- This product is for indoor use only.

**WARRANTY** Knightsbridge Wiring Accessories have a warranty of 25 years for mechanical operation from date of purchase with the exception of products containing electronic components such as dimmers and USB chargers, which have a 2-year warranty. Failure to install this product in accordance with the current edition of the IEE Wiring Regulations (BS7671), improper use, or removal of the back cover will invalidate the warranty. If this product should fail within its warranty period, it should be returned to the place of purchase for a free of charge replacement. ML Accessories does not accept responsibility for any installation costs associated with the replacement product. Your statutory rights are not affected. ML Accessories reserve the right to alter product specification without prior notice.

Supplied By:  
 (UK) Manufacturer ML Accessories Ltd, Unit E  
 Chiltern Park,  
 Boscombe Road, Dunstable, LUS 4LT,  
 www.mlaccessories.co.uk

(EU) SILV Lighting Group, Daimlerstraße 21-23,  
 52533 Libach-Palmborg, Germany  
 Email: core@silv.com

Made in China

DCAUG22\_V3

**INSTALLATION**

- Connect the accessory as per the diagram in this manual, ensuring the correct polarity is observed (terminal positions may vary).
- L - LIVE - Brown
- N - NEUTRAL - Blue
- EARTH - Green and yellow
- All earth connections must be made and maintained. Use green/yellow sleeving on earth conductors that are not insulated.
- Check all electrical connections are secure with all exposed copper within the terminal and no loose strands of cable. If using the flex outlet, secure the flex with the cord grip provided.
- Fit the unit into a suitable wall box taking care not to compress, damage or trap any cables, and secure with the screws provided. If using metal mounting boxes with four legs, remove the top and bottom legs or bend fully back.

**FLAT PLATE, SCREWLESS AND RATCHED EDGE FIXING**

- Always ensure the wall surface is flat and smooth.
- This unit is fitted with a gasket - this MUST NOT be removed. This gasket is to stop discoloration of the plate due to natural moisture in some wall finishes.
- This product must be fitted only after painting and decorating is complete.
- Schroto products only - remove the front plate by placing a medium size flat-head screwdriver in the notch at the side and lever off gently. After wiring and fitting to the wall box as per the instructions in this document, clip the front plate onto the main assembly ensuring the screwdriver notch is at the side.

**METAL CLAD FIXING**

- Remove front facelate and mount rear box in a suitable location. The back box has multiple 20mm cable entry points to aid installation.
- Wire as per the instructions in this document, and fix plate to back box using the screws provided.

**OUTLETS WITH USB CHARGING FUNCTION**

These products are designed for charging portable USB devices only, and contain a short circuit and overload protection feature. If there is no power from the USB socket supply the connected device. Check to ensure the USB socket and USB device have not come into contact with water, liquid or debris and the cable to the device is not damaged. With no device connected to the USB socket it will automatically reset and be ready for use.

**WARNING!**

This unit should NOT be subject to any insulation resistance testing, failure to follow this instruction could cause damage to the USB circuit and void the warranty.

**GENERAL**

This product should be recycled in the correct manner when it reaches the end of its life. Check local authorities for where facilities exist.

ML Accessories Limited Unit E, Chiltern Park, Boscombe Road, Dunstable, LUS 4LT www.mlaccessories.co.uk

**13A SOCKET WITH USB CHARGER**

Clean with a soft dry cloth only, do not use aggressive cleaning products or solvents which may damage the product and invalidate the warranty.

**13A SWITCHED SOCKET**

**13A SOCKET WITH QUAD USB CHARGER / QUAD USB CHARGER**

**13A SOCKET WITH USB AND BLUETOOTH SPEAKER / STAND ALONE BLUETOOTH SPEAKER**

**DUAL VOLTAGE SHAVER SOCKET**

 
**5A UNSWITCHED ROUND PIN SOCKET**

**BLUETOOTH AUDIO SPECIFICATION**

- Output Power: Max. 3W RMS
- Sensitivity: 1.0V 380mV
- SNR: -85dB
- Speaker Frequency Range: 200Hz - 20kHz


**BLUETOOTH CONNECTION**

- Press the power button directly under the speaker.
- Bluetooth indicator will begin to flash.
- Activate Bluetooth pairing on your mobile device and scan for Bluetooth device.
- Connect to the device named: SPEAKER, SPEAKER1, SPEAKER2 etc.
- Once a connection has been established you will hear a "beep" sound and the Bluetooth indicator will flash at a different frequency to confirm.

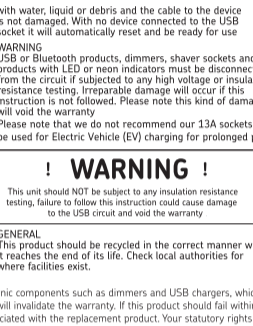


**CHARGING INDICATOR**

 Products with LED charge indicator will change colour depending on the level of current drawn by the connected device. The Red/Green status indicator gives an approximate charge reading - please refer to device battery level for true reading.

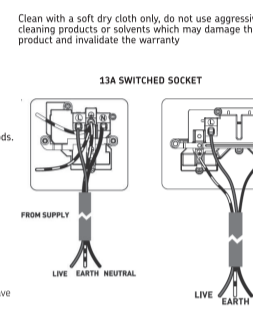

**2-WAY SWITCH**

 **2-WAY DIMMER**

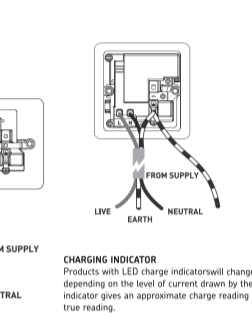


**13A FUSED SPUR**

**20A SWITCH**


**4SA SWITCHES**

 **COOKER CONTROL UNIT**

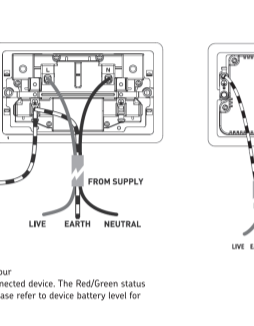

**2-WAY SWITCH**

 **2-WAY DIMMER**

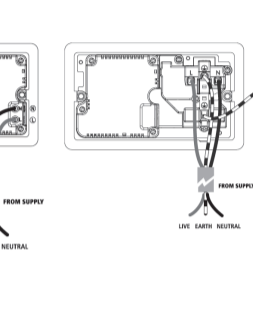


**13A FUSED SPUR**

**20A SWITCH**


**4SA SWITCHES**

 **COOKER CONTROL UNIT**

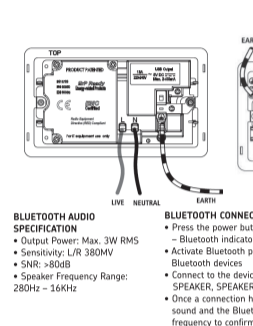

**2-WAY SWITCH**

 **2-WAY DIMMER**

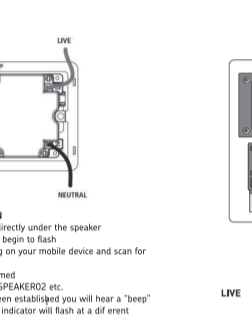


**13A FUSED SPUR**

**20A SWITCH**

**4SA SWITCHES**

 **COOKER CONTROL UNIT**

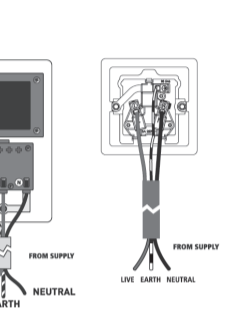

**2-WAY SWITCH**

**2-WAY DIMMER**



**13A FUSED SPUR**

**20A SWITCH**

**4SA SWITCHES**

**COOKER CONTROL UNIT**



**2-WAY SWITCH**

**2-WAY DIMMER**



**13A FUSED SPUR**

**20A SWITCH**

**4SA SWITCHES**

**COOKER CONTROL UNIT**

These products have no cable entry and should only be used for "hard wired" installations.