

INSTALLATION & MAINTENANCE MANUAL

SL6USBC / SL6USBW / SL6USBMB

GENERAL INSTRUCTIONS

These instructions should be read carefully and retained after installation by the end user for future reference and maintenance.

**These instructions should be used to aid installation of the following products:
SL6USBC / SL6USBW / SL6USBMB**

SAFETY

- This product must be installed in accordance with the latest edition of the IEE Wiring Regulations (BS7671) and current Building Regulations. If in any doubt, consult a qualified electrician
- Please isolate mains prior to installation or maintenance
- Check the total load on the circuit (including when this luminaire is fitted) does not exceed the rating of the circuit cable, fuse or circuit breaker
- Please note the IP (Ingress Protection) rating of this luminaire when deciding the location for installation
- This product is Class II double insulated
- This product series is IP20 rated

INSTALLATION

Note - If this luminaire is being used in conjunction with an external PIR or sensor, please confirm with the manufacturer of the sensors that they are compatible with LED luminaires

- Provide power to the required point of installation
- Remove the diffuser by gently squeezing inwards top and bottom at both ends then pull away from the luminaire, (see Fig. 1)

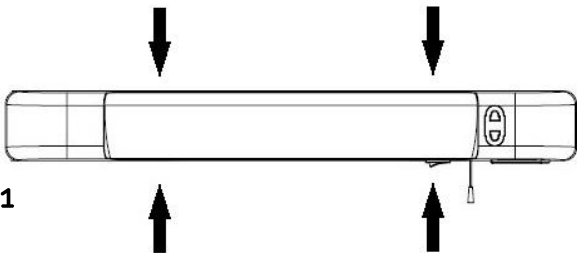


Fig. 1

- Remove the LED tube by pushing it at one end and gently pulling out of the lamp holders
- Using the luminaire as a template, mark the location for, and drill the fixing holes ensuring not to infringe with any gas / water pipes or electrical cables
- Remove the two screws at the rear of the fitting and remove the access plate to expose the terminal block, see (Fig. 2)



Fig. 2

- Feed the mains cable through the access plate and ensuring correct polarity is observed, carefully wire as shown in Fig. 3

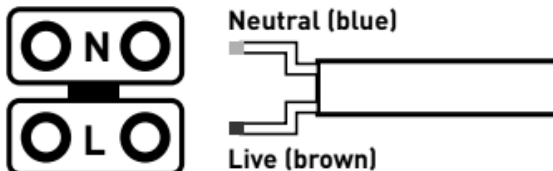


Fig. 3

- Re-fit the access plate to the luminaire
- Align the luminaire with the previously drilled holes and attach to the surface
- Insert the LED lamp and re-fit the diffuser
- Switch on and check for correct operation

Note – The pullcord is for light operation only. Shaver and USB Charger remain permanently live

WARNING

This luminaire must be disconnected from the circuit if subjected to any high voltage or insulation resistance testing. Irreparable damage will occur if this instruction is not followed.

GENERAL

This product should be recycled in the correct manner when it reaches the end of its life. Check local authorities for where facilities exist.

Clean with a soft dry cloth only, do not use aggressive cleaning products or solvents which may damage the product.

This product is non-dimmable.

WARRANTY

This product has a warranty of 2 years from date of purchase. Failure to install this product in accordance with the current edition of the IEE Wiring Regulations (BS7671), improper use, or removal of the batch code will invalidate the warranty. If this product should fail within its warranty period, it should be returned to the place of purchase for a free of charge replacement. ML Accessories does not accept responsibility for any installation costs associated with the replacement product. Your statutory rights are not affected. ML Accessories reserve the right to alter product specification without prior notice.



ML
ACCESSORIES LTD



**CE UK
CA**



11

ML Accessories Limited LU5 4LT
www.mlaccessories.co.uk

AVJAN21_V2