

INSTALLATION & MAINTENANCE MANUAL

LWR2G / LWR2W / LWR4G / LWR4W LWS2G / LWS2W / LWS4G LWS4W

GENERAL INSTRUCTIONS

These instructions should be read carefully and retained after installation by the end user for future reference and maintenance.

These instructions should be used to aid installation of the following products: LWR2G / LWR2W / LWR4G / LWR4W / LWS2G / LWS2W / LWS4G / LWS4W

SAFETY

- This product must be installed in accordance with the latest edition of the IEE Wiring Regulations (BS7671) and current Building Regulations. If in any doubt, consult a qualified electrician
- · Please isolate mains prior to installation or maintenance
- Check the total load on the circuit (including when this luminaire is fitted) does not exceed the rating of the circuit cable, fuse or circuit breaker
- · Please note the IP (Ingress Protection) rating of this product when deciding the location for installation
- · This product is Class II double insulated
- This product is IP44 rated

INSTALLATION

Note - If this product is being used in conjunction with an external PIR or sensor, please confirm with the manufacturer of the sensors that they are compatible with LED luminaires.

- Provide power to the required point of installation (refer to BS7671 for correct cabling methods). Suitable IP rated junction boxes should be used where required
- Remove the mounting bracket from the luminaire with the aid of the Allen key supplied
- Using the mounting bracket as a template, mark the location for, and drill the fixing holes ensuring not to infringe with any gas/water pipes or electrical cables
- Remove the backplate from the luminaire to access the PCB and mains terminals

- Feed the mains cable through the rubber grommet to retain IP rating, and secure the backplate to the surface
- Connect the luminaire to the mains supply ensuring the correct polarity is observed (see Fig. 1):
 L Live (brown), N Neutral (blue)

 


Fig. 1

- · Replace the backplate ensuring the gasket is in place and not damaged
- · Secure the luminaire to the mounting bracket
- Switch on and check for correct operation

WARNING

This luminaire must be disconnected from the circuit if subjected to any high voltage or insulation resistance testing. Irreparable damage will occur if this instruction is not followed.

This product is not suitable for installation in or near a coastal or marine environment.

GENERAL

This product contains a light source of energy efficiency class G to Regulation (EU) No 2019/2015 and (UK) 2021 No. 1095. This product contains an LED light source and a control gear which can be replaced by a professional.



Clean the external surfaces with a damp cloth using a mild solution of detergent and warm water only, do not use aggressive cleaning products or solvents which may damage the product.

Do not use any source of high-pressure washers to maintain or clean this luminaire.

It is recommended to add a bead of clear silicone around the product to aid the IP rating if installed in an exposed outdoor location.

This product is non-dimmable.

This product should be dismantled for disposal when it reaches the end of its life. Please see website for dismantling instructions.

This product should be recycled in the correct manner when it reaches the end of its life. Check local authorities for where facilities exist.

WARRANTY

This product has a warranty of 3 years from date of purchase. Failure to install this product in accordance with the current edition of the IEE Wiring Regulations (BS7671), improper use, or removal of the batch code will invalidate the warranty. If this product should fail within its warranty period, it should be returned to the place of purchase for a free of charge replacement. ML Accessories does not accept responsibility for any installation costs associated with the replacement product. Your statutory rights are not affected. ML Accessories reserve the right to alter product specification without prior notice.















ML Accessories Limited LU5 4LT www.mlaccessories.co.uk