

IP CAMERA WITH LIGHT AND SOUND ALARM ART. IPBCAMA05Z02A IPTCAMA05Z02A



Please read this manual thoroughly before use and keep it for future reference

www.comelitgroup.com



Via Don Arrigoni, 5 - 24020 Rovetta (BG) - Italy

WARNING

- This product is intended to be supplied by a Listed Power Unit, marked with 'Limited Power Source', 'LPS' on unit, output rated minimum 12VDC/2 A or POE 48VDC/ 350mA or 24VAC (depending on models), no more than 2000m altitude of operation and Tma= 60°C.
- Do not attempt to disassemble the camera; in order to prevent electric shock, do not remove screws or covers.
- There are no user-serviceable parts inside. Please contact the nearest service center as soon as possible if there is any failure.
- Avoid incorrect operation, shock vibration, heavy pressing which can cause damage to product.
- Do not use corrosive detergent to clean main body of the camera. If necessary, please use soft dry cloth; for hard contamination, use neutral detergent.
- Avoid aiming the camera directly towards extremely bright objects, such as sun, because this may damage the image sensor.
- Please follow the instructions to install the camera.
- Do not operate if temperature, humidity and power supply are beyond the limits.
- Keep away from heat sources such as radiators, heat registers, etc.
- Do not expose the product to the direct airflow from air conditioner.
- This manual is for using and managing the product. We reserve the rights of amending the errors, software upgrades and product improvements, interpretation and modification. These changes will be published in the latest version without special notification.
- All pictures, charts, images in this manual are only for description and explanation of our products. The ownerships of trademarks, logos and other intellectual properties related to Microsoft, Apple and Google belong to the above-mentioned companies.
- **The instruction is for guidance only. Detailed information is in accordance with the product.**
- **Screenshots used in the instruction are only for indications and explanations.**
- **Some features are only available on certain camera models**
- This manual is suitable for perimeter alert network cameras.

Table of Contents

1	Network Connection	1
1.1	LAN.....	1
1.1.1	Access through Comelit Advance IP Tool	Errore. Il segnalibro non è definito.
1.1.2	Access through Internet Explorer	3
1.2	WAN	4
2	Live View.....	8
3	Network Camera Configuration	10
3.1	System Configuration	10
3.1.1	Basic Information.....	10
3.1.2	Date and Time.....	10
3.1.3	Local Config	11
3.1.4	Storage.....	11
3.2	Image Configuration	14
3.2.1	Display Configuration	14
3.2.2	Video / Audio Configuration.....	16
3.2.3	OSD Configuration	17
3.2.4	Video Mask	18
3.2.5	ROI Configuration.....	19
3.2.6	Lens Control.....	20
3.3	Alarm Configuration	20
3.3.1	Motion Detection	20
3.3.2	Other Alarms	22
3.3.3	Alarm In.....	24
3.3.4	Alarm Out.....	25
3.3.5	Alarm Server	26
3.3.6	Audio Alarm.....	26
3.3.7	Light Alarm	27
3.4	Event Configuration	27
3.4.1	Exception	28
3.4.2	Line Crossing	29
3.4.3	Intrusion	31
3.4.4	Region Entrance	33
3.4.5	Region Exiting	35
3.5	Network Configuration	37
3.5.1	TCP/IP.....	37
3.5.2	Port.....	38
3.5.3	Server Configuration	38
3.5.4	DDNS	38
3.5.5	SNMP	39

3.5.6	802.1x	40
3.5.7	RTSP	41
3.5.8	UPNP	42
3.5.9	Email	42
3.5.10	FTP	43
3.5.11	HTTPS	44
3.5.12	P2P (Optional)	45
3.5.13	QoS	46
3.6	Security Configuration	46
3.6.1	User Configuration	46
3.6.2	Online User	47
3.6.3	Block and Allow Lists	48
3.6.4	Security Management	48
3.7	Maintenance Configuration	48
3.7.1	Backup and Restore	48
3.7.2	Reboot	49
3.7.3	Upgrade	49
3.7.4	Operation Log	50
4	Search	51
4.1	Image Search	51
4.2	Video Search	53
4.2.1	Local Video Search	53
4.2.2	Micro-SD Card Video Search	54
	Appendix	56
	Appendix 1 Troubleshooting	56
	Appendix 2 Installation of waterproof rubber plug	58

1 Network Connection


Connect the IP Camera (IPC) via LAN or WAN through Internet Explorer browser.

1.1 LAN


In LAN, there are two ways to access IPC: 1. through the software Comelit Advance IP Tool; 2. through Internet Explorer browser.

1.1.1 Access through Comelit Advance IP Tool

Network connection:

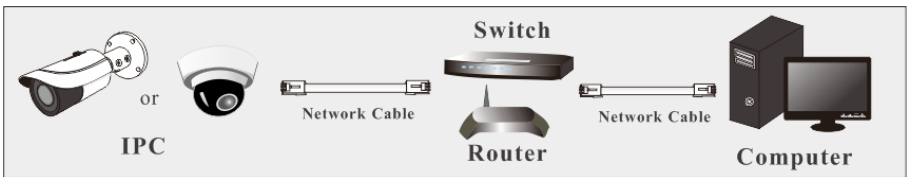

- ① Make sure the PC and IPC are connected to the LAN and the Comelit Advance IP Tool is installed in the PC.
- ② Double click the Comelit Advance IP Tool icon on the desktop to run this software as shown below:

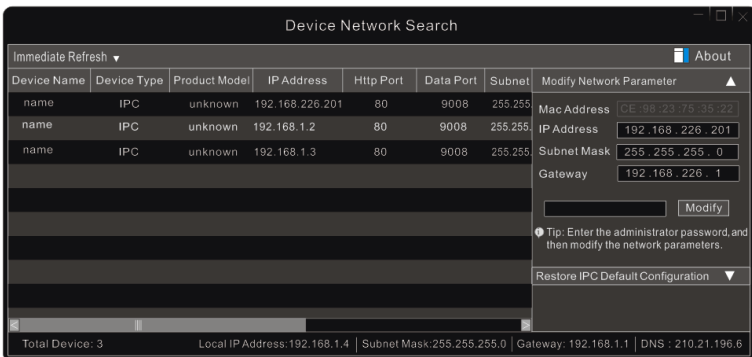

- ③ Modify the IP address. The default **IP address** of the camera is **192.168.1.150**. Click the information of the camera listed in the above table to show the network information on the right hand. Modify the IP address and gateway of the camera and make sure that its network address is in the same local network segment as the computer's.

Modify Network Parameter ▲

Mac Address

IP Address

Subnet Mask

Gateway

For example, the IP address of your computer is 192.168.1.4. Therefore, the IP address of the camera shall be changed to 192.168.1.X. After modification, please enter the password of the administrator and click the “Modify” button to modify the setting.



The **default Password** of the administrator is **admin**.

④ Double click on the IP address and the system will pop up the IE browser to connect the IPC. Follow instructions to download, install and run the ActiveX control.

Comelit

Name:

Password:

Stream Type: ▼


Language: ▼

☐ Remember me

Enter the username and password in the login window.



The **default Username** is **admin**; the **default Password** is **admin**.

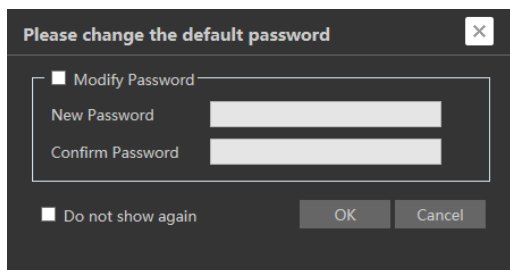

The system will pop up the above textbox to ask you to change the default password. It is strongly recommended to change the default password for account security. If “Do not show again” is checked, the textbox will not appear the next time.

1.1.2 Access through Internet Explorer

The **default** network settings are shown below:

IP address: **192.168.1.150**


Subnet Mask: **255.255.255.0**

Gateway: **192.168.1.1**


HTTP: **80**

Data port: **9008**


Use the above default settings when logging in the camera for the first time. Connect the camera to the computer directly through network cable.

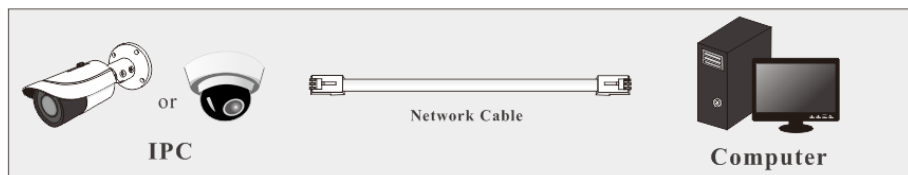

① Manually set the IP address of the PC, the network segment should be the same as the default settings of the IP camera. Open the network and share center. Click “Local Area Connection” to pop up the following window:.

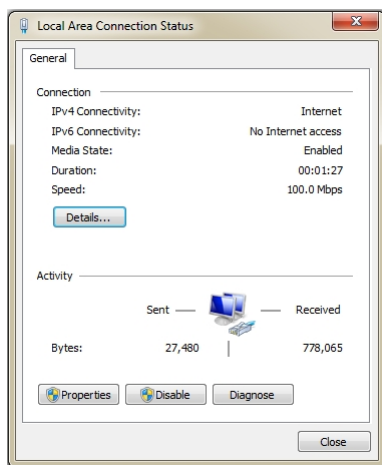

Select “Properties” and then select internet protocol (for example: IPv4). Next, click the “Properties” button to set the network of the PC.

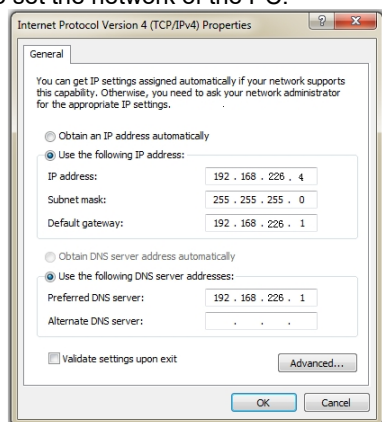

- ② Open the Internet Explorer browser, enter the default address of the IPC and confirm.
- ③ Follow instructions to download and install the ActiveX control.
- ④ Enter the default username and password in the login window and then enter to Live view.

1.2 WAN

- Access through the router or virtual server



- ① Make sure the camera is connected to the local network and then log in the camera via LAN and go to Config→Network→Port menu to set the port number.

HTTP Port	80
HTTPS Port	443
Data Port	9008
RTSP Port	554

Port Setup

- ② Go to Config →Network→TCP/IP menu to modify the IP address.

IPv4	IPv6	PPPoE Config	IP Change Notification Config
☐ Obtain an IP address automatically			
☒ Use the following IP address			
IP Address	192.168.1.150	Test	
Subnet Mask	255.255.255.0		
Gateway	192.168.1.1		
Preferred DNS Server	8.8.8.8		
Alternate DNS Server	8.8.8.8		

IP Setup

- ③ Go to the router's management interface through Internet Explorer browser to forward the IP address and port of the camera in the "Virtual Server".


Port Range					
Application	Start	End	Protocol	IP Address	Enable
1	9007	to 9008	Both	192.168.1.201	☒
2	80	to 81	Both	192.168.1.201	☒
3	10000	to 10001	Both	192.168.1.166	☐
4	21000	to 21001	Both	192.168.1.166	☐

Router Setup

④ Open the Internet Explorer browser and enter its WAN IP and http port to access. (for example, if the http port is changed to 81, please enter “192.198.1.150:81” in the address bar of web browser to access).

➤ Access through PPPoE dial-up

Network connection

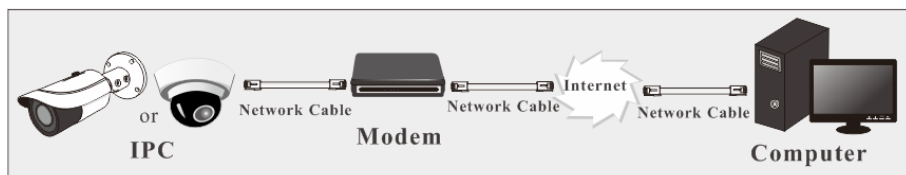

Access the camera through PPPoE auto dial-up. The setup steps are as follow:

- ① Go to Config→Network→Port menu to set the port number.
- ② Go to Config →Network→TCP/IP→PPPoE Config menu. Enable PPPoE and then enter the user name and password from your internet service provider.


IPv4	IPv6	PPPoE Config	IP Change Notification Config
☒ Enable			
User Name		xxxxxxxx	
Password		•••••	
Save			

③ Go to Config →Network→DDNS menu. Before configuring the DDNS, please apply for a domain name first. Please refer to DDNS configuration for detail information.

④ Open the Internet Explorer browser and enter the domain name and http port to access.

➤ Access through static IP

Network connection

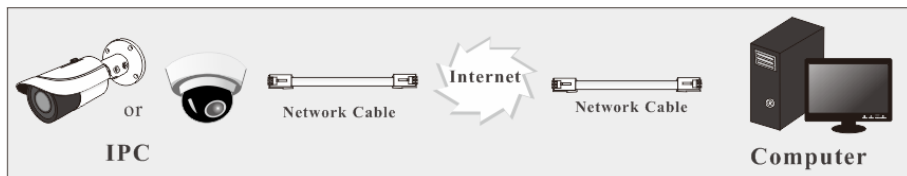


The setup steps are as follow:

- ① Go to Config→Network→Port menu to set the port number.
- ② Go to Config →Network→TCP/IP menu to set the IP address. Check “Use the following IP address” and then enter the static IP address and other parameters.
- ③ Open the Internet Explorer browser and enter its WAN IP and http port to access.

2 Live View

After logging in, the following window will be shown.

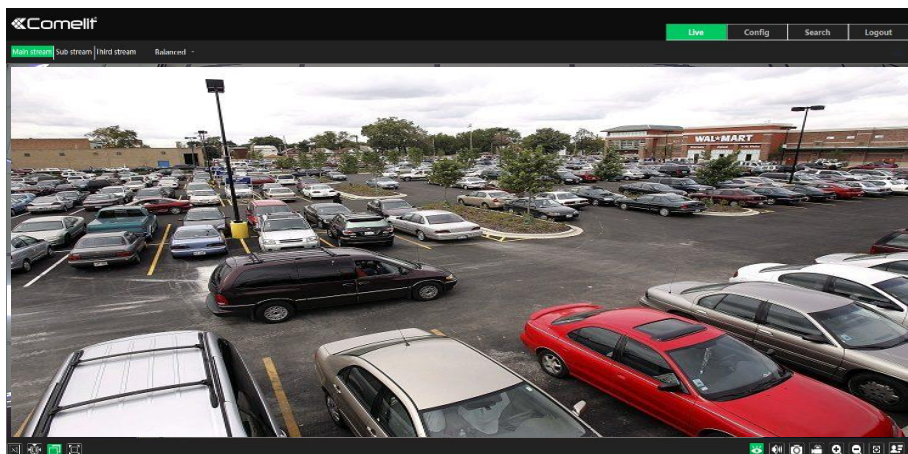

The following table is the instructions of the icons on the live view interface.

Icon	Description	Icon	Description
	Original size		Focus/Zoom adjustment
	Fit correct scale		SD card recording indicator
	Auto (fill the window)		Color abnormal indicator
	Full screen		Abnormal clarity indicator
	Start/stop live view		Scene change indicator
	Start/stop two-way audio		Sensor alarm indicator
	Enable/disable audio		Motion alarm indicator
	Snapshot		Line crossing indicator
	Start/stop local recording		Region entrance indicator
	Zoom in		Region exiting indicator
	Zoom out		Intrusion indicator

Those smart alarm indicators will flash only if the camera supports those functions and the corresponding events are enabled.

In full screen mode, double click with the mouse to exit or press the ESC key on the keyboard.

Click AZ control button to show AZ control panel. The descriptions of the control panel are as follows:

Icon	Description	Icon	Description
	Zoom -		Zoom +
	Focus -		Focus +
	One key focus (used when image is out of focus after manual adjustment)		

3 Network Camera Configuration

In the Webcam client, choose “Config” to go to the configuration interface.


Note: wherever applicable, click the “Save” button to save the settings.

3.1 System Configuration

3.1.1 Basic Information

In the “Basic Information” interface, the information of the device are listed.

Device Name	IPC
Product Model	IPTCAMA02ZA
Brand	Cornelit
Software Version	5.0.1.0(3913)
Software Build Date	2019-10-29
Kernel Version	20190906
Hardware Version	1.3
Onvif Version	19.06
Video Structured Version	1.1.7
Face Detection Version	1.1.25
OCX Version	2.0.7.3
MAC	00:18:ae:ad:63:7a
Device ID	XXXXXXXXXXXX

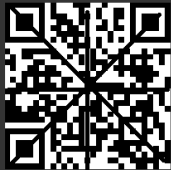

Some versions may support device ID and QR code. If P2P is enabled (see Network Configuration-P2P), the network camera can be quickly added to mobile surveillance client, by scanning the QR code or entering device ID.

3.1.2 Date and Time

Go to Config→System→Date and Time. Please refer to the following interface.

Zone Date and Time

Zone GMT+01 (Amsterdam, Berlin, Rome, Stockholm, Warsaw) ▼

☒ DST

☐ Auto DST

☒ Manual DST

Start Time January ▼ First ▼ Sunday ▼ 00 ▼ Hour

End Time February ▼ First ▼ Monday ▼ 00 ▼ Hour

Time Offset 120 Minutes ▼

Select the time zone and DST as required.
Click the “Date and Time” tab to set the time mode.

Zone

Date and Time

Time Mode:

☐ Synchronize with NTP server

NTP server: Update period: Minutes

☒ Synchronize with computer time

Date: Time:

☐ Set manually

Date: Time:

3.1.3 Local Configuration

Go to Config→System→Local Config to set up the storage path of captured pictures and recorded videos on the local PC. There is also an option to enable or disable the bitrate display in the recorded files.

Save snapshots to	C:\Program Files\NetAtIPCamera	Browse
Save recording files to	C:\Program Files\NetAtIPCamera	Browse
Audio Recording	☒ Open	☐ Close
Bitrate Overlay	☒ Open	☐ Close
Local Smart Snapshot Storage	☒ Open	☐ Close
Save		

Additionally, the Local Smart Snapshot Storage can be enabled or disabled here.

3.1.4 Storage

Go to Config→System→Storage to go to the interface as shown below.

Management

Record

Snapshot

Total picture capacity

Picture remaining space

Total recording capacity

Record remaining space

State

Snapshot Quota

%

Video Quota

%

Changes in the quota ratio need to be formatted before they become effective.

● Micro-SD Card Management

Click the “Format” button to format the micro-SD card. All data will be erased by clicking this button.

Click the “Eject” button to stop writing data to micro-SD card. Then the micro-SD card can be removed safely.

Snapshot Quota: set the capacity of captured pictures on the micro-SD card.

Video Quota: set the capacity of record files on the micro-SD card.

● Schedule Recording Settings

1. Go to Config→System→Storage→Record to go to the interface as shown below.

The screenshot shows the 'Record' tab in a configuration menu. Under 'Record Parameters', there are three dropdown menus: 'Record Stream' set to 'Main stream', 'Pre Record Time' set to 'No Pre Record' (with '(H264,H265,MJPEG)' in parentheses), and 'Cycle Write' set to 'Yes'. Below this is a 'Timing' section with a checkbox labeled 'Enable Schedule Record' which is currently unchecked.

2. Set record stream, pre-record time, cycle writing.

Pre Record Time: Set the time to record before the actual recording begins.

3. Set schedule recording. Check “Enable Schedule Record” and set the schedule.

The screenshot shows the 'Week Schedule' and 'Holiday Schedule' configuration interface. The 'Week Schedule' section has a header with 'Erase' and 'Add' buttons. Below it, there are seven rows for the days of the week (Sun. to Sat.). Each row has a 24-hour timeline (0 to 24) and a 'Manual Input' field. The 'Holiday Schedule' section has a header with 'Date' and 'Add' buttons, and a 'Delete' button. Below it, there is a 24-hour timeline (0 to 24) and a 'Manual Input' field.

Weekly schedule

Set the alarm record time from Monday to Sunday for a single week. Each day is divided in one hour. Green means scheduled. Blank means unscheduled.

“Add”: add the schedule for a specific day. Drag the mouse to set the time on the timeline.

“Erase”: delete the schedule. Drag the mouse to delete the time on the timeline.

Manual Input: click it on a specific day to enter specific start and end time.

Day schedule

Set the alarm record time for a specific day, such as a holiday.

Note: Holiday schedule takes priority over weekly schedule.

● **Snapshot Settings**

Go to Config→System→Storage→Snapshot to go to the interface as shown below.

ManagementRecordSnapshot

Snapshot Parameters

Image Format

JPEG

Resolution

704x576

Image Quality

Low

Event Trigger

Snapshot Interval

1

Second

Snapshot Quantity

5

Timing

☐ Enable Timing Snapshot

Snapshot Interval

5

Second

Set the format, resolution and quality of the image saved on the micro-SD card, the snapshot interval and quantity and the timing snapshot here.

Snapshot Quantity: is the maximum quantity of snapshots. The actual quantity of snapshots may be less than this number. Supposing the occurrence time of an alarm event is less than the time of capturing pictures, the actual quantity of snapshots is less than the set quantity of snapshots.


Enable Timing Snapshot: enable timing snapshot first and then set the snapshot interval and schedule. The setup steps of schedule are the same as the schedule recording.

3.2 Image Configuration

Image Configuration includes Display, Video/Audio, OSD, Video Mask and ROI Config.

3.2.1 Display Configuration

Go to Image→Display Settings interface as shown below. The image's brightness, contrast, hue and saturation and so on for common, day and night mode can be set up separately. The image effect can be quickly seen by switching the configuration file.

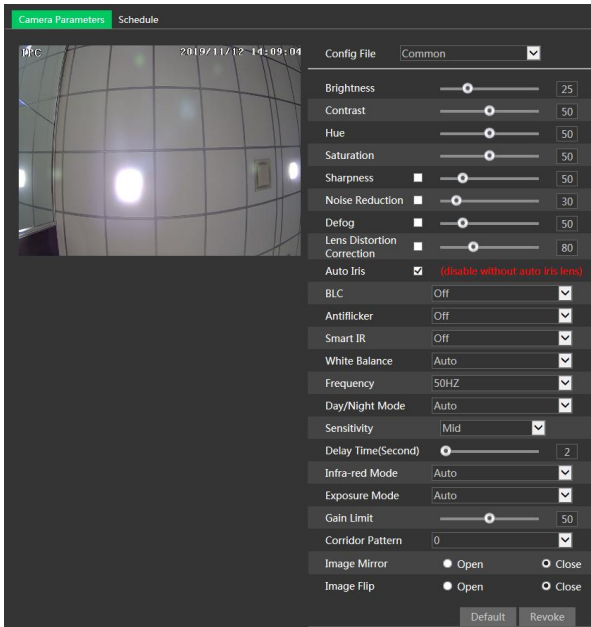

Brightness: set the brightness level.

Contrast: set the contrast.

Hue: set the hue.

Saturation: set the saturation.

Sharpness: set the sharpness.

Noise Reduction: decrease the noise to make the image more thorough. Increasing the value will make the noise reduction effect better but it will reduce the image resolution.

Defog: activate this function and set an appropriate value as needed in foggy, dusty, smoggy or rainy environment to get clear images.

Backlight Compensation (BLC):

- Off: disables the backlight compensation function (default).

- **HWDR:** WDR can adjust the camera to provide a better image when there are both very bright and very dark areas simultaneously in the field of the view by lowering the brightness of the bright area and increasing the brightness of the dark area. Recording will be stopped for a few seconds while the mode is changing from non-WDR to WDR mode.
 - **HLC:** lowers the brightness of the entire image by suppressing the brightness of the image's bright area and reducing the size of the halo area.
 - **BLC:** If enabled, the auto exposure will activate according to the scene so that the object of the image in the darkest area will be seen clearly.
- HFR:** High Frame Rate. If "ON" is selected, the system will restart and then the maximum value of the frame rate of the main stream can be set to 60 fps /50fps.

Antiflicker:

- **Off:** disables the anti-flicker function. This is used in outdoor installations.
- **50Hz:** reduces flicker in 50Hz lighting conditions.
- **60Hz:** reduces flicker in 60Hz lighting conditions.

Smart IR: ON or OFF. This function can effectively avoid image overexposure and underexposure by controlling the brightness of the IR lights according to the conditions.

White Balance: adjust the color temperature according to the environment automatically.

Frequency: 50Hz or 60Hz.

Day/Night Mode: Auto, Day, Night or Timing.

Exposure Mode: Auto or Manual. If manual is chosen, the digital shutter speed can be adjusted.

Corridor Pattern: corridor viewing modes can be used for situations such as long hallways. 0°, 90°, 180° and 270° are available. The default value is 0°. The video resolution should be 1080p or below if this function is used.


Image Mirror: turn the current video image horizontally.

Image Flip: turn the current video image vertically.

Schedule Settings of Image Parameters.
Click the "Schedule" tab as shown below.

Camera Parameters	Schedule
Schedule	Full Time
Config File	Common


Set full time schedule for common, day, night mode and specific time schedule for day and night mode. Choose "Schedule" in the drop-down box as shown below.

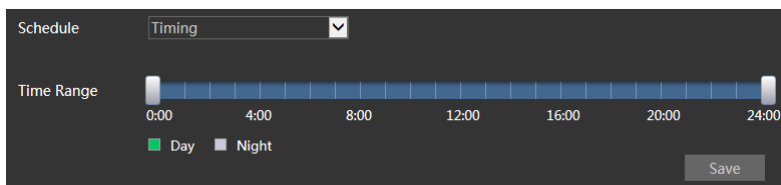


Drag “☀️” icons to set the time of day and night. Blue means day time and blank means night time. If the current mode of camera parameters is set to schedule, the image configuration mode will automatically switch between day and night according to the schedule.

3.2.2 Video / Audio Configuration

Go to Image→Video / Audio interface as shown below. In this interface, set the resolution, frame rate, bitrate type, video quality and so on.

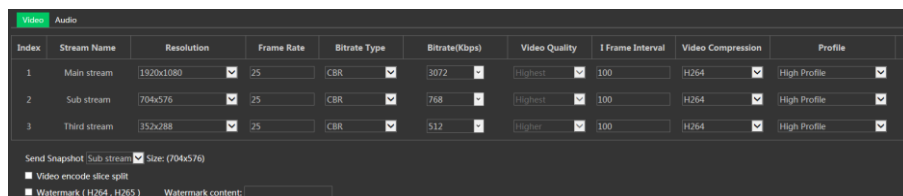

Click the “Audio” tab to go to the interface as shown below.

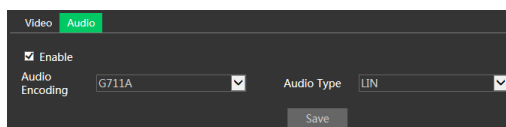

Three video streams can be adjustable.

Resolution: image resolution.

Frame rate: the higher the frame rate, the video is smoother.

Bitrate type: CBR or VBR. Bitrate is related to image quality. CBR means that no matter how much change is seen in the video scene, the bitrate will be kept constant. VBR means that the bitrate will be adjusted according to scene changes.

Bitrate: it can be adjusted when the mode is set to CBR. The higher the bitrate, the better the image quality will be.

Video Quality: it can be adjusted when the mode is set to VBR. The higher the image quality, more bitrate will be required.

I Frame interval: it determines how many frames are allowed between a “group of pictures”. When a new scene begins in a video, until that scene ends, the entire group of frames (or pictures) can be considered as a group of pictures. If there is not much movement in the scene, setting the value higher than the frame rate is fine, potentially

resulting in less bandwidth usage. However, if the value is set too high, and there is a high frequency of movement in the video, there is a risk of frame skipping.

Video Compression: MJPEG, H264+, H264, H264S (Smart H.264), H265, H265+ or H265S (Smart H.265). If H.265/H.265+/ H.265S is chosen, make sure the client system is able to decode H.265/H.265+/ H.265S. Compared to H.265+/H.265, when there is no human or vehicle detected, the bitrate will be automatically reduced with no effect on image quality by using H.265S.

Profile: for H.264, Baseline, Main and High profiles are selectable.

Send Snapshot: set how many snapshots to generate for an event.

Video encode slice split: if this function is enabled, smooth image can be gotten even though using the low-performance PC.

Watermark: when playing back the local recorded video in the search interface, the watermark can be displayed. To enable it, check the watermark box and enter the watermark text.

Audio Encoding: G711A or G711U.


Audio Type: LIN or MIC.

Audio Output: Talkback or Warning. If “Talkback” is selected, the external audio output device will be used for two-way communication. If “Warning” is selected, the external audio output device will be used to play the pre-defined audio alarm.


Speaker: Talkback or Warning. If “Talkback” is selected, the built-in speaker will be used for two-way communication. If “Warning” is selected, the built-in speaker will be used to play the pre-defined audio alarm.

3.2.3 OSD Configuration

Go to Image→OSD interface as shown below.

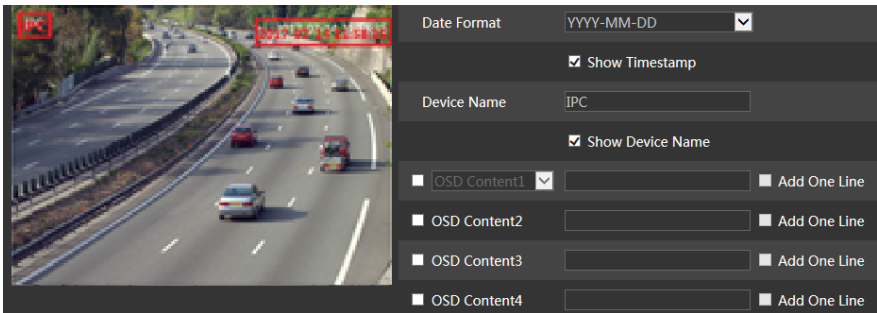

Set timestamp, device name, OSD content and picture overlap here. After enabling, entering the content and drag them to change their position. Then click the “Save” button to save the settings.

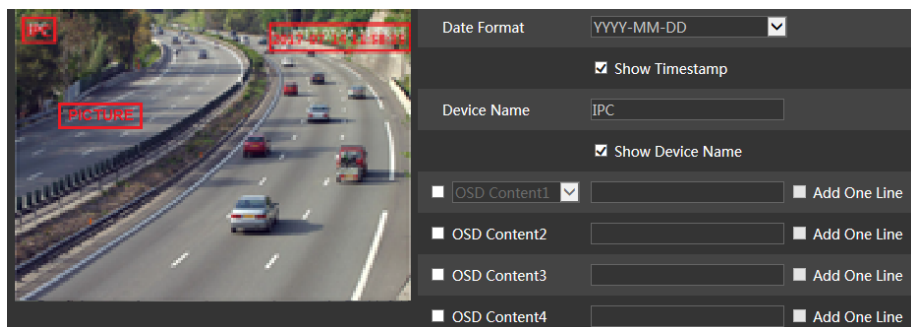


Picture Overlay settings.

Check “OSD Content1”, choose “Picture Overlay” and click “Browse” to select the overlap picture. Then click “Upload” to upload the overlap picture. The size of the image shall not exceed 200x200 pixels or it cannot be uploaded.

3.2.4 Video Mask

Go to Image→Video Mask interface as shown below. A maximum of 4 zones can be setup.

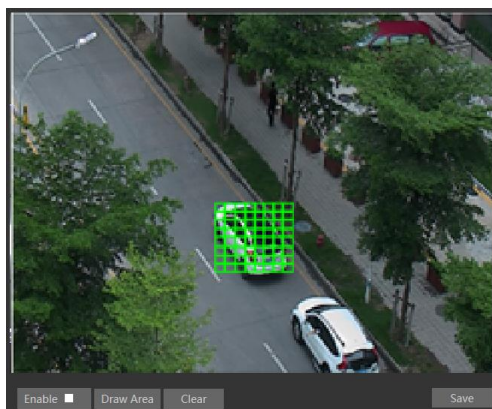

To set up video mask.


1. Enable video mask.
2. Click the “Draw Area” button and then drag the mouse to draw the area.
3. Click the “Save” button to save the settings.
4. Return to the live to verify the area.




Click the “Clear” button to delete the current video mask area.

3.2.5 ROI Configuration

Go to Image→ROI Config interface as shown below. An area in the image can be set as a Region Of Interest. This area will have a higher bitrate than the rest of the image, resulting in better image quality for the identified area.

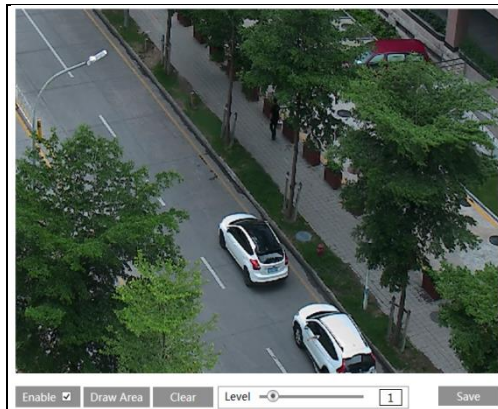


1. Check “Enable” and then click the “Draw Area” button.
2. Drag the mouse to set the ROI area.
3. Set the level.
4. Click the “Save” button to save the settings.

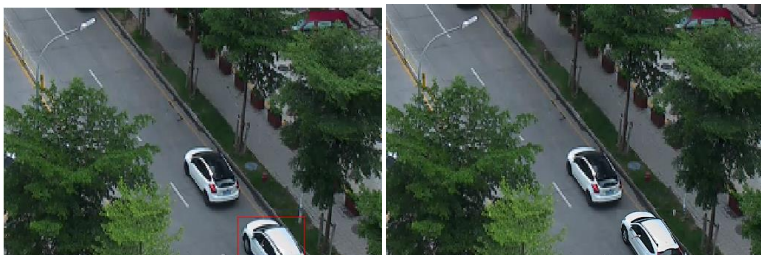

3.2.6 Lens Control

In this section, zoom and focus can be controlled. If the image is out of focus after a manual adjustment, one key focus can be used to set the focus automatically. Go to Config→Image→ Zoom/Focus interface to set.

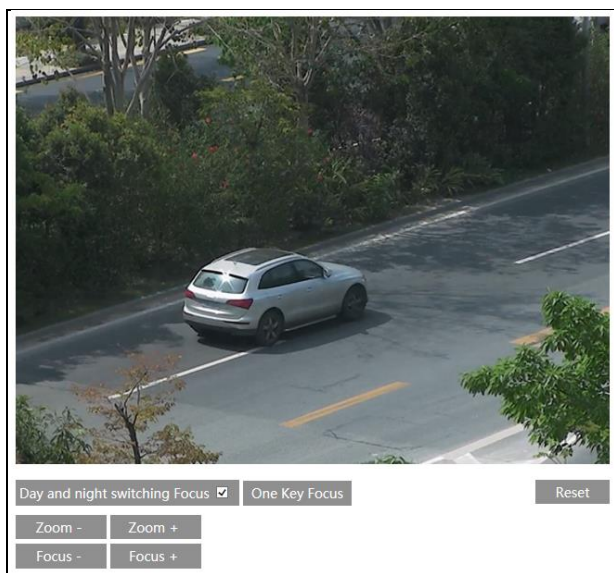

3.3 Alarm Configuration

3.3.1 Motion Detection

Go to Alarm→Motion Detection to set motion detection alarm.

The screenshot shows a configuration window with three tabs: 'Alarm Config' (highlighted in green), 'Area and Sensitivity', and 'Schedule'. In the 'Alarm Config' section, the 'Enable' checkbox is checked. Below it, 'Alarm Holding Time' is set to '20 Seconds' with a dropdown arrow. The 'Trigger Alarm Out' section contains a large checkbox labeled 'Alarm Out' which is checked. Below this are five more checkboxes, all unchecked: 'Trigger Audio Alarm', 'Trigger Snap', 'Trigger SD Recording', 'Trigger Email', and 'Trigger FTP'. A 'Save' button is located at the bottom right of the window.

1. Check “Enable” check box to activate the function.

Alarm Out: if selected, this would trigger an external relay output that is connected to the camera on detecting a motion based alarm.

Trigger Audio Alarm: if selected, the warning audio will be uttered on detecting a motion based alarm. (Please set the warning voice first. See [Audio Alarm](#) for details).


Trigger Snap: if selected, the system will capture images on motion detection and save the images on the micro-SD card.

Trigger SD Recording: if selected, video will be recorded on the micro-SD card on motion detection.

Trigger Email: if “Trigger Email” and “Attach Picture” are checked (email address must be set first in the Email configuration interface), the captured pictures and triggered event will be sent via e-mail.

Trigger FTP: if “Trigger FTP” and “Attach Picture” are checked, the captured pictures will be sent into FTP server address. Please refer to FTP configuration chapter for more details.

2. Set motion detection area and sensitivity. Click the “Area and Sensitivity” tab to go to the interface as shown below.

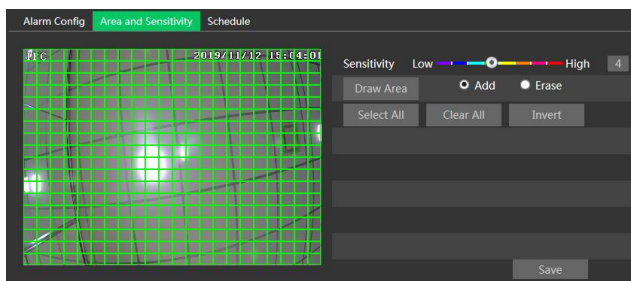


Move the “Sensitivity” scroll bar to set the sensitivity. Higher sensitivity value means that motion alarm will be triggered more easily.
 Select “Add” and click “Draw Area”. Drag the mouse to draw the motion detection area;
 Select “Erase” and drag the mouse to clear motion detection area.
 After that, click the “Save” to save the settings.

3. Set the "Schedule" for motion detection. The schedule setup steps of the motion detection are the same as the schedule recording setup.

3.3.2 Other Alarms

● Micro-SD card full

1. Go to Config→Alarm→Anomaly→SD Card Full.

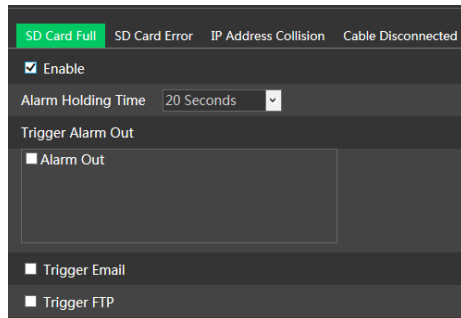


2. Click “Enable” and set the Alarm Holding Time.
 3. Set alarm trigger options. The setup steps are the same as motion detection.
 Please refer to motion detection chapter for details.

● Micro-SD card error

When there are some errors in writing the micro-SD card, the corresponding alarms will be triggered.


1. Go to Config→Alarm→Anomaly→SD Card Error as shown below.

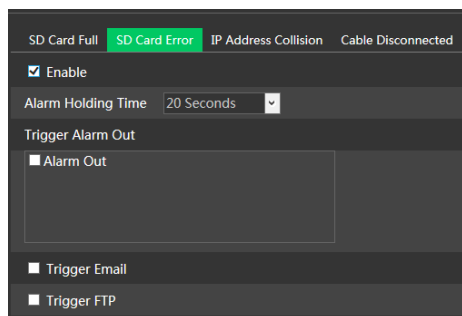

2. Click “Enable” and set the Alarm Holding Time.
3. Set alarm trigger options. Trigger alarm out, Email and FTP. The setup steps are the same as motion detection. Please refer to motion detection chapter for details.

● IP Address Conflict


1. Go to Config→Alarm→Anomaly→IP Address Collision as shown below.

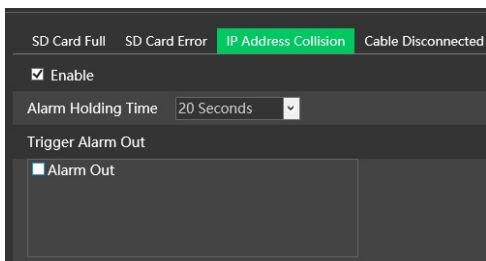

2. Click “Enable” and set the Alarm Holding Time.
3. Trigger Alarm Out. When the IP address of the camera is in conflict with the IP address of other devices, the system will trigger the alarm out.

● Cable disconnected

1. Go to Config→Alarm→Anomaly→Cable Disconnected as shown below.

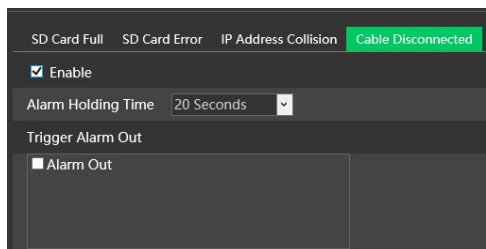

2. Click “Enable” and set the Alarm Holding Time.

3. Trigger Alarm Out. When the camera is disconnected, the system will trigger the alarm out.

3.3.3 Alarm In

To set sensor alarm (Alarm In): go to Config→Alarm→Alarm In interface as shown below.

The screenshot shows the 'Alarm Config' interface. At the top, there are two tabs: 'Alarm Config' (highlighted in green) and 'Schedule'. Below the tabs, there is a section with a checked checkbox for 'Enable'. This is followed by three rows: 'Alarm Type' with a dropdown menu showing 'NO', 'Alarm Holding Time' with a dropdown menu showing '30 Seconds', and 'Sensor Name' with an empty text input field. Below these is a section titled 'Trigger Alarm Out' which contains a large, empty rectangular area. Underneath this are seven rows, each with a checkbox and a label: 'Alarm Out', 'Trigger Audio Alarm', 'Trigger Light Alarm', 'Trigger Snap', 'Trigger SD Recording', 'Trigger Email', and 'Trigger FTP'. All these checkboxes are currently unchecked. At the bottom right of the interface is a 'Save' button.

1. Click “Enable” and set the Alarm Type, Alarm Holding Time and Sensor Name.
2. Set alarm trigger options.

Alarm Out: if selected, this would trigger an external relay output that is connected to the camera when the sensor alarm is triggered.

Trigger Audio Alarm: if selected, the warning voice will be uttered when the sensor alarm is triggered (please set the warning voice first).

Trigger Light Alarm: if selected, the light of the camera will flash when the sensor alarm is triggered (please set the light flashing time and frequency first).

Trigger Snap: If selected, the system will capture images when the sensor alarm is triggered and save the images on the micro-SD card.

Trigger SD Recording: if selected, the video will be recorded on the micro-SD card when the sensor alarm is triggered.

Trigger Email: if “Trigger Email” and “Attach Picture” are selected (email address must be set first in the Email configuration interface), the captured pictures and triggered event will be sent to those addresses.

Trigger FTP: if “Trigger FTP” and “Attach Picture” are selected, the captured pictures

will be sent into FTP server address. Please refer to FTP configuration chapter for more details.

3. Click “Save” button to save the settings.

4. Set the schedule of the sensor alarm. The setup steps of the schedule are the same as the schedule recording setup.

3.3.4 Alarm Out

Go to Config→Alarm→Alarm Out.

Alarm Out Mode

Alarm Linkage

Alarm Out Name

alarmOut1

Alarm Holding Time

20 Seconds

Alarm Type

NC

Save

Alarm Out Mode: Alarm linkage, Manual Operation, Day/Night Switch Linkage or Timing.

- **Alarm Linkage:** after selecting this mode, set the Alarm Out Name, the Alarm Holding Time in the “Alarm Holding Time” pull down list box and the Alarm Type.
- **Manual Operation:** after selecting this mode, set the Alarm Type and click “Open” to trigger the alarm out immediately. Click “Close” to stop alarm output.

Alarm Out Mode

Manual Operation

Alarm Type

NC

Manual Operation

Open

Close

Save

- **Day/Night Switch Linkage:** after selecting this mode, set the Alarm Type and then choose to Open or Close the alarm output when the camera switches to day mode or night mode.

Alarm Out Mode

Day/night switch linkage

Alarm Type

NC

Day

Close

Night

Close

- **Timing**: select the alarm type. Select “Add” and drag the mouse on the timeline to set the schedule of alarm out. Select “Erase” and drag the mouse on the timeline to delete the set time schedule. After the schedule is saved, the alarm out will be triggered in the specified time.


3.3.5 Alarm Server

Go to Alarm→Alarm Server interface as shown below.
 Set the server address, port, heartbeat and heartbeat interval. When an alarm occurs, the camera will transfer the alarm event to the alarm server.

3.3.6 Audio Alarm

Go to Alarm→Audio Alarm interface as shown below.

① Select the language. If you want to customize the voice content, you can choose “Customize”. Click “Browse” to choose the audio file you want to upload and then enter the audio name. Click “Upload” to upload the audio file. Note that the format of the audio file must meet the requirement (WAV, 8000Hz, monophonic, 16bit, less than 200K), or it will not be uploaded. After you upload the audio file, you can select the audio name from the audio list and click “Listen” to listen to it. Click “Delete” to delete the audio.

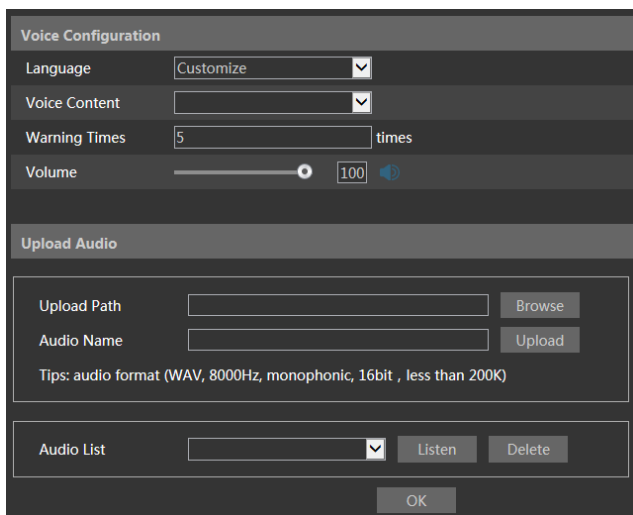

The image shows a software interface for configuring voice alerts. It is divided into two main sections: 'Voice Configuration' and 'Upload Audio'.

Voice Configuration:

- Language:** A dropdown menu currently set to 'Customize'.
- Voice Content:** A dropdown menu.
- Warning Times:** A text input field containing '5', followed by the unit 'times'.
- Volume:** A slider control with a numeric input field set to '100' and a speaker icon.

Upload Audio:


- Upload Path:** A text input field with a 'Browse' button next to it.
- Audio Name:** A text input field with an 'Upload' button next to it.
- Tips:** A line of text stating: 'audio format (WAV, 8000Hz, monophonic, 16bit , less than 200K)'.
- Audio List:** A dropdown menu with 'Listen' and 'Delete' buttons next to it.
- OK:** A large button at the bottom center of the interface.

- ② Select the voice content, then set the warning times (1÷50) and the volume.
- ③ Click “OK” to save the settings.

3.3.7 Light Alarm

Go to Alarm→Light Alarm interface as shown below.

Set the flashing time and frequency.

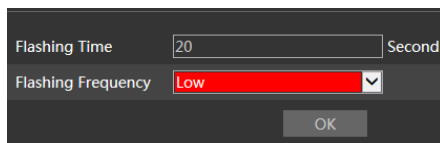

The image shows a 'Light Alarm' configuration window. It contains two main settings:

- Flashing Time:** A text input field containing '20', followed by the unit 'Second'.
- Flashing Frequency:** A dropdown menu currently set to 'Low'.
- OK:** A button at the bottom center.

Flashing time: from 1 second to 60 seconds.

Flashing Frequency: low, middle or high

3.4 Event Configuration


For more accuracy, here there are some recommendations for installation.

- Camera should be installed on stable surface, the vibrations can affect the accuracy of detection.
- Avoid pointing the camera at the reflective surfaces (like shiny floors, mirrors, glass, lake surfaces and so on).
- Avoid places that are narrow or have too much shadowing.
- Avoid scenario where the object's color is similar to the background color.
- At any time of day or night, please make sure the image of the camera is clear and with adequate light, avoiding overexposure or too much darkness on both sides.

3.4.1 Exception

This function can detect changes in the surveillance environment affected by the external factors.

To set exception detection go to Config→Event→Exception interface as shown below.

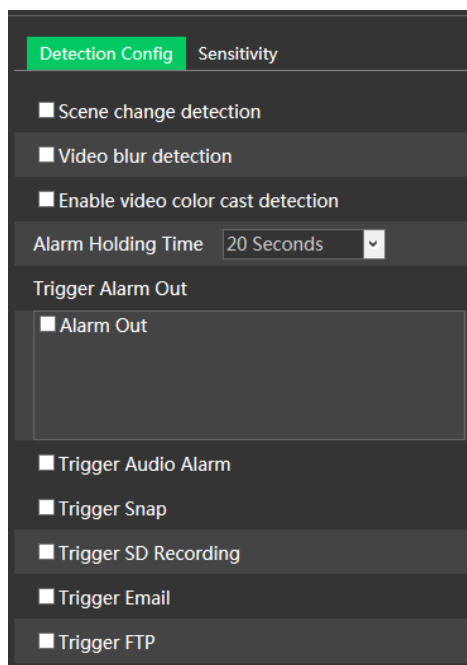

The screenshot shows the 'Exception' configuration window. It has two tabs: 'Detection Config' (active) and 'Sensitivity'. Under 'Detection Config', there are several checkboxes: 'Scene change detection', 'Video blur detection', and 'Enable video color cast detection'. Below these is a dropdown menu for 'Alarm Holding Time' set to '20 Seconds'. A section titled 'Trigger Alarm Out' contains a checkbox for 'Alarm Out'. At the bottom, there are checkboxes for 'Trigger Audio Alarm', 'Trigger Snap', 'Trigger SD Recording', 'Trigger Email', and 'Trigger FTP'.

1. Enable the detection desired.

Scene Change Detection: alarm will be triggered if the scene change.


Video Blur Detection: alarm will be triggered if the video becomes blurry.

Enable Video Color Cast Detection: alarm will be triggered if the video becomes obscured.

2. Set the alarm holding time and alarm trigger options. The setup steps are the same as motion detection. Please refer to motion detection chapter for details.

3. Click “Save” button to save the settings.

4. Set the sensitivity of the exception detection. Click “Sensitivity” tab to go to the interface as shown below.

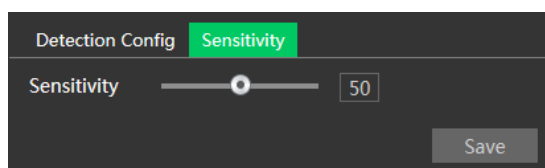

The screenshot shows the 'Sensitivity' configuration window. It has two tabs: 'Detection Config' and 'Sensitivity' (active). Under 'Sensitivity', there is a slider control for 'Sensitivity' with a value of 50 displayed next to it. A 'Save' button is located at the bottom right.

Drag the slider to set the sensitivity value or directly enter the sensitivity value in the textbox. Click “Save” button to save the settings.

※ **Camera configuration and surrounding area**

- 1. Auto-focus function should not been enabled for exception detection.
- 2. Not enable exception detection when light changes greatly in the scene.

3.4.2 Line Crossing

Line Crossing: alarm will be triggered if the target crosses the pre-defined alarm lines.

Go to Config→Event→Line Crossing interface as shown below.

Detection ConfigAreaSchedule

☒ Enable

☐ Save Panoramic Picture

☐ Save Target Cutout

Detection Target

☒ HumanSensitivity50

☒ Motor VehicleSensitivity50

☒ Motorcycle/BicycleSensitivity50

Alarm Holding Time20 Seconds

Trigger Alarm Out

☐ Alarm Out

☐ Trigger Audio Alarm

☐ Trigger Light Alarm

☐ Trigger Snap

☐ Trigger SD Recording

☐ Trigger Email

☐ Trigger FTP

Save

- 1. Enable line crossing alarm and select the snapshot type and the detection target.

Save Panoramic Picture: if it is enabled, the detected panoramic pictures will be captured and saved to the local PC or micro-SD card when there are targets detected.

Save Target Cutout: if it is enabled, the detected target cutout pictures will be captured and saved to the local PC or micro-SD card when there are targets detected.

Note: saving snapshots to the local PC shall enable “Local Smart Snapshot Storage” in the local config interface first. Saving snapshots to the micro-SD card shall install a micro-SD card and enable “Trigger Snap” first.

Detection Target


Human: select it and the alarm will be triggered if someone crosses the pre-defined alarm lines.

Motor Vehicle: select it and the alarm will be triggered if a vehicle with four or more wheels (eg. a car, bus or truck) cross the pre-defined alarm lines.

Motorcycle/Bicycle: select it and the alarm will be triggered if a vehicle with two wheels (eg. a motorcycle or bicycle) cross the pre-defined alarm lines.

All of the three types of objects can be selected simultaneously. If no object/target is selected, alarm will not be triggered even if line crossing detection is enabled.

2. Set the alarm holding time.
3. Set alarm trigger options. The setup steps are the same as alarm in (sensor alarm) detection.
4. Click “Save” button to save the settings.
5. Set the area and the sensitivity of the line crossing alarm. Click the “Area” tab to go to the interface as shown below.

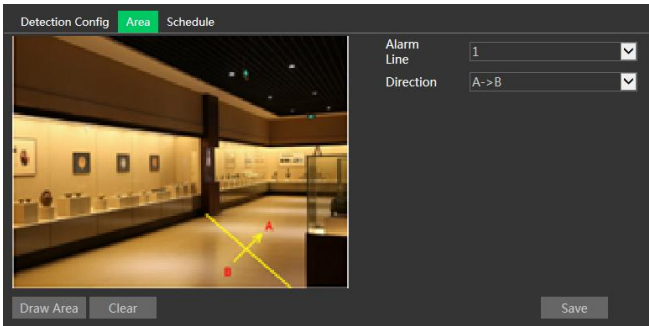

Set the alarm line number and direction. Up to 4 lines can be added.

Direction: $A \leftrightarrow B$, $A \rightarrow B$ or $A \leftarrow B$. This indicates the direction of the intruder/vehicle that crossover the alarm line.

$A \leftrightarrow B$: the alarm will be triggered when the intruder/vehicle crossover the alarm line from B to A or from A to B.

$A \rightarrow B$: the alarm will be triggered when the intruder/vehicle crossover the alarm line from A to B.

$A \leftarrow B$: the alarm will be triggered when the intruder/vehicle crossover the alarm line from B to A.

Click the “Draw Area” button and then drag the mouse to draw a line in the image. Click the “Stop Draw” button to stop drawing. Click the “Clear” button to delete the lines. Click the “Save” button to save the settings.

6. Set the schedule of the line crossing alarm. The setup steps of the schedule are the same as the schedule recording setup

※ Camera configuration and surrounding area

1. Auto-focus function should not be enabled for line crossing detection.
2. Avoid the scenes with many trees or the scenes with various light changes (like many flashing headlights). The environment brightness of the scenes shouldn't be too low.
3. Cameras should be mounted at a height of 2.8 meters or above.
4. Keep the mounting angle of the camera at about 45°.
5. The detected objects should not be less than 1% of the entire image and the largest sizes of the detected objects should not be more than 1/8 of the entire image.
6. Make sure cameras can view objects for at least 2 seconds in the detected area for accurate detection.
7. Adequate light and clear scenery are crucial for line crossing detection.

3.4.3 Intrusion

Intrusion: alarms will be triggered if the target intrudes and loiters in the pre-defined areas. This function can be applicable to important supervision places, danger areas and prohibited areas, like military administrative zones, high danger areas, no man's areas, etc.

Go to Config→Event→Intrusion interface as shown below.

Detection Config Area Schedule

☒ Enable

☐ Save Panoramic Picture

☐ Save Target Cutout

Detection Target

☒ Human	Sensitivity	<input type="range"/>	50
☒ Motor Vehicle	Sensitivity	<input type="range"/>	50
☒ Motorcycle/Bicycle	Sensitivity	<input type="range"/>	50

Alarm Holding Time 20 Seconds

Trigger Alarm Out

☐ Alarm Out

☐ Trigger Audio Alarm

☐ Trigger Light Alarm

☐ Trigger Snap

☐ Trigger SD Recording

☐ Trigger Email

☐ Trigger FTP

Save

1. Enable intrusion detection and select the snapshot type and the detection target.

Save Panoramic Picture: if it is enabled, the detected panoramic pictures will be captured and saved to the local PC or micro-SD card when there are targets detected.

Save Target Cutout: if it is enabled, the detected target cutout pictures will be captured and saved to the local PC or micro-SD card when there are targets detected.

Note: saving snapshots to the local PC shall enable “Local Smart Snapshot Storage” in the local config interface first. Saving snapshots to the micro-SD card shall install a micro-SD card and enable “Trigger Snap” first.

Detection Target

Human: select it and the alarm will be triggered if someone crosses the pre-defined alarm lines.

Motor Vehicle: select it and the alarm will be triggered if a vehicle with four or more wheels (eg. a car, bus or truck) cross the pre-defined alarm lines.

Motorcycle/Bicycle: select it and the alarm will be triggered if a vehicle with two wheels (eg. a motorcycle or bicycle) cross the pre-defined alarm lines.


All of the three types of objects can be selected simultaneously. If no object/target is selected, alarm will not be triggered even if line crossing detection is enabled.

2. Set the alarm holding time.

3. Set alarm trigger options. The setup steps are the same as alarm in (sensor alarm) detection.

4. Click “Save” button to save the settings.

5. Set the area and the sensitivity. Click the “Area” tab to go to the interface as shown below.

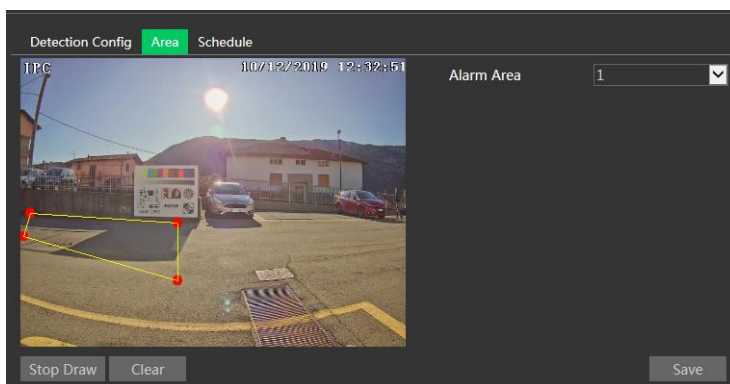

Set the alarm area number on the right side. Up to 4 alarm areas can be added.

Click the “Draw Area” button and then click around the area where you want to set in the image on the left side (the alarm area should be a closed area). Click the “Stop Draw” button to stop drawing. Click the “Clear” button to delete the alarm area. Click the “Save” button to save the settings.

6. Set the schedule of the intrusion detection. The setup steps of the schedule are the same as schedule recording setup.

※ **Camera configuration and surrounding area**

- 1. Auto-focus function should not be enabled for line crossing detection.
- 2. Avoid the scenes with many trees or the scenes with various light changes (like many flashing headlights). The environment brightness of the scenes shouldn't be too low.
- 3. Cameras should be mounted at a height of 2.8 meters or above.
- 4. Keep the mounting angle of the camera at about 45°.
- 5. The detected objects should not be less than 1% of the entire image and the largest sizes of the detected objects should not be more than 1/8 of the entire image.
- 6. Make sure cameras can view objects for at least 2 seconds in the detected area for accurate detection.
- 7. Adequate light and clear scenery are crucial for intrusion detection.

3.4.4 Region Entrance

Region Entrance: alarms will be triggered if the target enters into the pre-defined areas.

Go to Config→Event→Region Entrance interface as shown below.

Detection ConfigAreaSchedule

☒ Enable

☐ Save Panoramic Picture

☐ Save Target Cutout

Detection Target

☒ HumanSensitivity50

☒ Motor VehicleSensitivity50

☒ Motorcycle/BicycleSensitivity50

Alarm Holding Time

20 Seconds

Trigger Alarm Out

☐ Alarm Out

☐ Trigger Audio Alarm

☐ Trigger Light Alarm

☐ Trigger Snap

☐ Trigger SD Recording

☐ Trigger Email

☐ Trigger FTP

Save

1. Enable region entrance detection and select the snapshot type and the detection target.

Save Panoramic Picture: if it is enabled, the detected panoramic pictures will be captured and saved to the local PC or micro-SD card when there are targets detected.

Save Target Cutout: if it is enabled, the detected target cutout pictures will be captured and saved to the local PC or micro-SD card when there are targets detected.

Note: saving snapshots to the local PC shall enable “Local Smart Snapshot Storage” in the local config interface first. Saving snapshots to the micro-SD card shall install a micro-SD card and enable “Trigger Snap” first.

Detection Target

Human: select it and the alarm will be triggered if someone crosses the pre-defined alarm lines.

Motor Vehicle: select it and the alarm will be triggered if a vehicle with four or more wheels (eg. a car, bus or truck) cross the pre-defined alarm lines.

Motorcycle/Bicycle: select it and the alarm will be triggered if a vehicle with two wheels (eg. a motorcycle or bicycle) cross the pre-defined alarm lines.


All of the three types of objects can be selected simultaneously. If no object/target is selected, alarm will not be triggered even if line crossing detection is enabled.

2. Set the alarm holding time.

3. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to motion detection chapter for details.

4. Click “Save” button to save the settings.

5. Set the area and the sensitivity of the line crossing alarm. Click the “Area” tab to go to the interface as shown below.

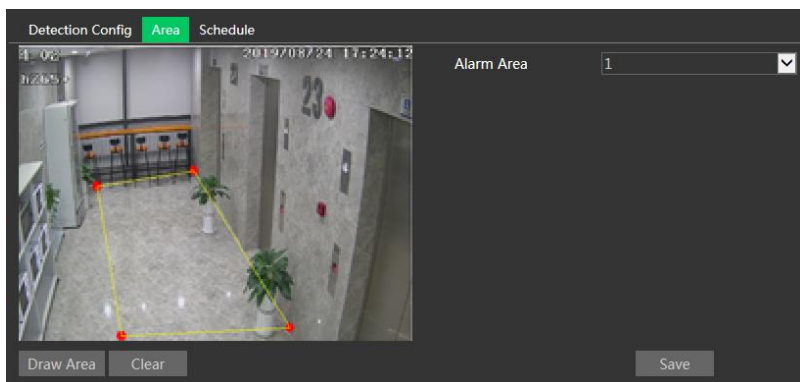

Set the alarm area number on the right side. Up to 4 alarm areas can be added.

Click the “Draw Area” button and then click around the area where you want to set as the alarm area in the image on the left side (the alarm area should be a closed area).

Click the “Stop Draw” button to stop drawing. Click the “Clear” button to delete the alarm area. Click the “Save” button to save the settings.

- Set the schedule of the region entrance detection. The setup steps of the schedule are the same as schedule recording setup.

※ Camera configuration and surrounding area

The camera configuration and surrounding area are the same as Intrusion detection.

3.4.5 Region Exiting

Region Exiting: alarms will be triggered if the target exits from the pre-defined areas. Go to Config→Event→Region Exiting interface as shown below.

Detection Config Area Schedule

☒ Enable

☐ Save Panoramic Picture

☐ Save Target Cutout

Detection Target

☒ Human	Sensitivity	<input type="range"/>	50
☒ Motor Vehicle	Sensitivity	<input type="range"/>	50
☒ Motorcycle/Bicycle	Sensitivity	<input type="range"/>	50

Alarm Holding Time 20 Seconds

Trigger Alarm Out

☐ Alarm Out

☐ Trigger Audio Alarm

☐ Trigger Light Alarm

☐ Trigger Snap

☐ Trigger SD Recording

☐ Trigger Email

☐ Trigger FTP

Save

- Enable region exiting detection and select the snapshot type and the detection target.

Save Panoramic Picture: if it is enabled, the detected panoramic pictures will be captured and saved to the local PC or micro-SD card when there are targets detected.

Save Target Cutout: if it is enabled, the detected target cutout pictures will be captured and saved to the local PC or micro-SD card when there are targets detected.

Note: saving snapshots to the local PC shall enable “Local Smart Snapshot Storage” in the local config interface first. Saving snapshots to the micro-SD card shall install a micro-SD card and enable “Trigger Snap” first.

Detection Target


Human: select it and the alarm will be triggered if someone crosses the pre-defined alarm lines.

Motor Vehicle: select it and the alarm will be triggered if a vehicle with four or more wheels (eg. a car, bus or truck) cross the pre-defined alarm lines.

Motorcycle/Bicycle: select it and the alarm will be triggered if a vehicle with two wheels (eg. a motorcycle or bicycle) cross the pre-defined alarm lines.

All of the three types of objects can be selected simultaneously. If no object/target is selected, alarm will not be triggered even if line crossing detection is enabled.

2. Set the alarm holding time.
3. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to motion detection chapter for details.
4. Click “Save” button to save the settings.
5. Set the area and the sensitivity of the line crossing alarm. Click the “Area” tab to go to the interface as shown below.

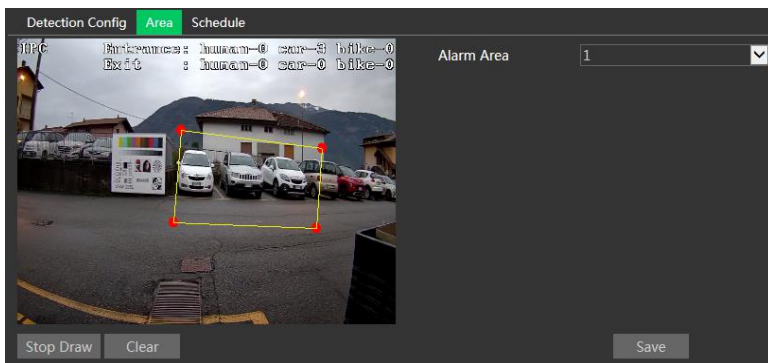

- Set the alarm area number on the right side. Up to 4 alarm areas can be added. Click the “Draw Area” button and then click around the area where you want to set as the alarm area in the image on the left side (the alarm area should be a closed area). Click the “Stop Draw” button to stop drawing. Click the “Clear” button to delete the alarm area. Click the “Save” button to save the settings.
6. Set the schedule of the region exiting detection. The setup steps of the schedule are the same as schedule recording setup.


✂ Camera configuration and surrounding area

The camera configuration and surrounding area are the same as Intrusion detection.

3.5 Network Configuration

3.5.1 TCP/IP


Go to Config→Network→TCP/IP interface as shown below.

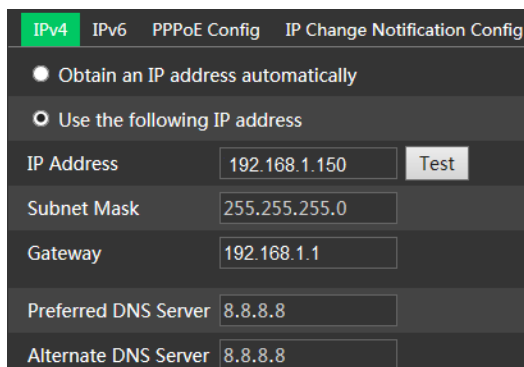

Use IP address (IPv4 for example). There are two options for IP setup: "Obtain an IP address automatically" (by DHCP) and "Use the following IP address".


Test: test the effectiveness of the IP address by clicking the button.

Use PPPoE. Click the "PPPoE Config" tab to go to the interface as shown below. Enable PPPoE and then enter the user name and password from your ISP.

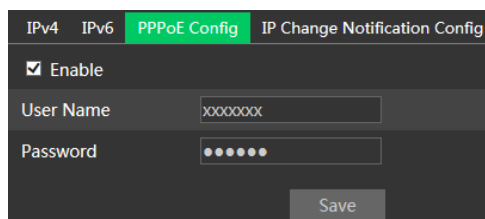

Either methods of network connection can be used. If PPPoE is used to connect internet, the camera will get a dynamic WAN IP address. This IP address will change frequently. To be notified, the IP change notification function can be used.

Click "IP Change Notification Config" to go to the interface as shown below.

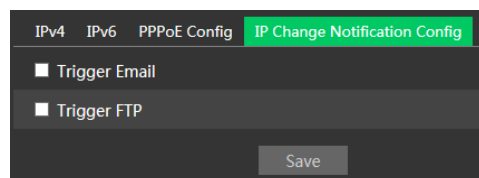

Trigger Email: when the IP address of the device change, the new IP address will be sent to the email address that has been set up.

Trigger FTP: when the IP address of the device change, the new IP address will be sent to FTP server that has been set up.

3.5.2 Port

Go to Config→Network→Port interface as shown below. HTTP port, Data port and RTSP port can be set.

HTTP Port	80
HTTPS Port	443
Data Port	9008
RTSP Port	554

HTTP Port: default is 80.

HTTPS Port: default is 443.

Data Port: default is 9008.

RTSP Port: default is 554.

3.5.3 Server Configuration

This function is used for connecting the Comelit Advance VMS.

☐ Enable

Server Port	2009
Server Address	
Device ID	1

Save

1. Check “Enable”.
2. Check the IP address and port of the transfer media server in the Comelit Advance VMS. Then enable the auto report in the Comelit Advance VMS when adding a new device. Next, enter the remaining information of the device in the Comelit Advance VMS. After that, the system will automatically allot a device ID. Please check it in the Comelit Advance VMS.
3. Enter the above-mentioned server address, server port and device ID in the corresponding boxes. Click the “Save” button to save the settings.

3.5.4 DDNS

If the camera is set up with a DHCP connection, DDNS should be set.

1. Go to Config→Network→ DDNS.

The screenshot shows a configuration page with a top navigation bar containing the following tabs: Port, Server, DDNS (highlighted in green), SNMP, 802.1X, RTSP, UPnP, Email, FTP, HTTPS, P2P, and QoS. The main content area is titled 'DDNS' and includes a checkbox labeled 'Enable' which is checked. Below this is a 'Server Type' dropdown menu currently showing 'www.comelitdns.com'. There are also input fields for 'User Name', 'Password', and 'Domain', all of which are currently empty. A 'Save' button is located at the bottom right of the configuration area.

2. Apply for a domain name. Take www.comelitdns.com for example. Enter www.comelitdns.com in the IE address bar to visit its website. Choose your language and then click the “Register product” button.

3.5.5 SNMP

To get camera status, parameters and alarm information and remotely manage the camera, the SNMP function can be used. Before using SNMP, please install an SNMP management tool and set the parameters of the SNMP, such as SNMP port, trap address.

1. Go to Config→Network→SNMP.

SNMP v1/v2	
☐ Enable SNMPv1	
☐ Enable SNMPv2	
Read SNMP Community	public
Write SNMP Community	private
Trap Address	192.168.226.201
Trap Port	162
Trap community	public
SNMP v3	
☐ Enable SNMPv3	
Read User Name	public
Security Level	auth, priv
Authentication Algorithm	☐ MD5 ☒ SHA
Authentication Password	••••••••
Private-key Algorithm	☐ DES ☐ AES
Private-key Algorithm	••••••••
Write User Name	private
Security Level	auth, priv
Authentication Algorithm	☐ MD5 ☒ SHA
Authentication Password	••••••••
Private-key Algorithm	☐ DES ☐ AES
Private-key Algorithm	••••••~
Other Settings	
SNMP Port	161

2. Check the corresponding version checkbox (Enable SNMPv1, Enable SNMPv2, Enable SNMPv3) according to the version of the SNMP software that will be used.

3. Set the values for “Read SNMP Community”, “Write SNMP Community”, “Trap Address”, “Trap Port” and so on. Please make sure the settings are the same as that of the SNMP software.

Note: please use the different version in accordance with the security level you required. The higher the version is, the higher the level of the security is.

3.5.6 802.1x

If it is enabled, the camera’s data can be protected. When the camera is connected to the network protected by the IEEE802.1x, user authentication is needed.

To use this function, the camera shall be connected to a switch supporting 802.1x protocol. The switch can be reckoned as an authentication system to identify the device in a local network. If the camera connected to the network interface of the switch has passed the authentication of the switch, it can be accessed via the local network.

Protocol Type and EAPOL Version: please use the default settings.

Username and Password: the Username and the Password must be the same with the username and password applied for and registered in the authentication server.

3.5.7 RTSP

Go to Config→Network→RTSP.

Select “Enable” to enable the RTSP function.

Port: access port of the streaming media (default is 554).

Address: the RTSP address (unicast) format that can be used to play the stream in a media player.

Multicast Address

Main stream: the address format is

rtsp://IP address: rtsp port/profile1?transportmode=mcast

Sub stream: the address format is

rtsp://IP address: rtsp port/profile2?transportmode=mcast

Third stream: the address format is

rtsp://IP address: rtsp port/profile3?transportmode=mcast

Audio: by entering the main/sub stream address in the VLC player, the video and audio will play automatically.

If “Allow anonymous login...” is checked, there is no need to enter the username and password to view the video.

If “auto start” is enabled, the multicast received data should be added into a VLC player to play the video.

- Note:**
1. This camera support local play through a VLC player. Enter the RTSP address (unicast or multicast, eg. rtsp://192.168.226.201:554/profile1?transportmode=mcast) in the VLC player to realize the simultaneous play with the web client.
 2. The IP address mentioned above cannot be IPv6.
 3. Avoid the use of the same multicast address in the same local network.
 4. When playing the video through the multicast streams in a VLC player, please pay attention to the mode of the VLC player. If it is set to TCP mode, the video cannot be played.
 5. If the coding format of the video of the main stream is MJPEG, the video may be disordered at some resolutions.

3.5.8 UPNP

If this function is enabled, the camera can be quickly accessed through the LAN. Go to Config→Network→UPnP. Enable UPnP and then enter UPnP name.



3.5.9 Email

If you need to trigger Email when an alarm happens or IP address is changed, please set the Email here first.

Go to Config→Network →Email.

Sender

Sender Address

User Name

Password

Server Address

Secure Connection Unnecessary

SMTP Port 25

☐ Send Interval(S) 60 (10-3600)

Recipient

Recipient Address

Sender Address: sender's e-mail address.

Username and Password: sender's username and password.

Server Address: SMTP IP address or hostname.

Select the secure connection type at the "Secure Connection" pull-down list according to what's required.

SMTP Port: SMTP port.

Send Interval(S): time interval of sending email. For example, if it is set to 60 seconds and multiple motion detection alarms are triggered within 60 seconds, they will be considered as only one alarm event and only one email will be sent. If one motion alarm event is triggered and then another motion detection alarm event is triggered after 60 seconds, two emails will be sent. When different alarms are triggered at the same time, multiple emails will be sent separately.

Click the "Test" button to test the connection of the account.

Recipient Address: receiver's e-mail address.

3.5.10 FTP

After an FTP server is set up, captured pictures from events will be uploaded to the FTP server.

Go to Config→Network →FTP.

* If there is a signed certificate, click “Browse” to select it and then click “Install” to install it.

* Click “Create a private certificate” to enter the following creation interface.

Click the “Create” button to create a private certificate. Enter the country (only two letters available), domain (camera’s IP address/domain), validity date, password, province/state, region and so on. Then click “OK” to save the settings.

* Click “Create a certificate request” to enter into the following interface.

Click “Create” to create the certificate request. Then download the certificate request and submit it to the trusted certificate authority for signature. After receiving the signed certificate, import the certificate to the device.

3.5.12 P2P (optional)

If this function is enabled, the network camera can be quickly accessed by adding the device ID in mobile surveillance client or Comelit Advance VMS client via WAN. Enable this function by going to Config→Network→P2P interface.

3.5.13 QoS

QoS (Quality of Service) function is used to provide different quality of services for different network applications. With insufficient bandwidth, the router or switch will sort the data streams and transfer them according to their priority to solve the network delay and network congestion by using this function.

Go to Config→Network→QoS.

Video/Audio DSCP	0
Alarm DSCP	0
Manager DSCP	0

Video/Audio DSCP: the range is from 0 to 63.
Alarm DSCP: the range is from 0 to 63.
Manager DSCP: the range is from 0 to 63.
The higher the number is, the higher the priority is.

3.6 Security Configuration

3.6.1 User Configuration

Go to Config→Security→User interface as shown below.

Add Modify Delete			
Index	User Name	User Type	Bind MAC
1	admin	Administrator	

Add user:

1. Click the “Add” button to pop up the following textbox.

Add User

User Name

Password

Level

The password can be composed of numbers, special characters, upper or lower case letters.

Confirm Password

User Type

Administrator

Bind MAC

00:00:00:00:00:00

OK

Cancel

- 2. Enter user name in “User Name” textbox.
- 3. Enter letters or numbers in “Password” and “Confirm Password” textbox.
- 4. Choose the user type. Administrator has all permissions. Normal user can only view

- the live video. Advanced user has the same permissions as an Administrator except for user management, backup settings, factory reset, and upgrading the firmware.
5. Enter the MAC address of the PC in “Bind MAC” textbox.
If this option is enabled, only the PC with the specified MAC address can access the camera for that user.
 6. Click the “OK” button and then the new added user will be displayed in the user list.

Modify user:

1. Select a user to modify password and MAC address if necessary in the user configuration list box.
2. The “Edit user” dialog box pops up by clicking the “Modify” button.

Edit User

☒ Modify Password

User Name: admin

Old Password:

New Password:

Level:

The password can be composed of numbers, special characters, upper or lower case letters.

Confirm Password:

Bind MAC: 00:00:00:00:00:00 ☐

OK Cancel

3. Enter the old password of the user in the “Old Password” text box.
 4. Enter the new password in the “New password” and “Confirm Password” text box.
 5. Enter computer’s MAC address as necessary.
 6. Click the “OK” button to save the settings.
- Note:** to change the access level of a user, the user must be deleted and added again with the new access level.

Delete user:

1. Select the user to be deleted in the user configuration list box.
2. Click the “Delete” button to delete the user.

Note: the default administrator account cannot be deleted.

3.6.2 Online User


Go to Config→Security→Online User to view the user who is viewing the live video.

Index	Client Address	Port	User Name	User Type	
1	172.25.150.98	18158	admin	Administrator	Kick off

An administrator user can kick out all the other users (including other administrators).

3.6.3 Block and Allow Lists

Go to Config→Security→Block and Allow Lists as shown below.

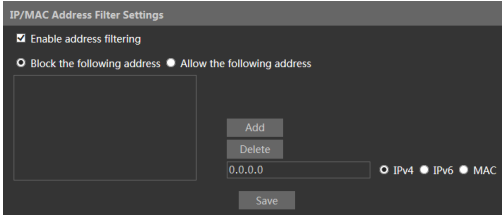


The setup steps are as follows:

Check the “Enable address filtering” check box.

Select “Block/Allow the following address”, IPv4/IPv6/MAC and then enter IP address or MAC address in the address box and click the “Add” button.

3.6.4 Security Management

Go to Config→Security→Security Management as shown below.

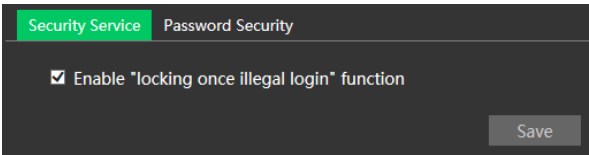

In order to prevent malicious password unlocking, “locking once illegal login” function can be enabled. If this function is enabled, login failure after trying six times will make the login interface locked. The camera can be logged in again after a half hour or after the camera reboots.

For some specified versions, anonymous login with a private protocol can be enabled here. If this function is enabled, enter `http://host:port/Anonymous/1[2/3]` (eg. `http://192.168.1.150:80/Anonymous/1`) via web browser to access the camera. 1 indicates main stream; 2 indicates sub stream; 3 indicates third stream. Only video can be viewed, no other operations can be done.

3.7 Maintenance Configuration

3.7.1 Backup and Restore

Go to Config→Maintenance→Backup & Restore.

The screenshot shows a web interface with three main sections: 'Import Setting', 'Export Settings', and 'Default Settings'. The 'Import Setting' section includes a 'Path' input field with a 'Sfoglia...' (Browse) button and an 'Import Setting' button. The 'Export Settings' section has an 'Export Settings' button. The 'Default Settings' section features a 'Keep' label, a list of three checkboxes ('Network Config', 'Security Configuration', 'Image Configuration'), and a 'Load Default' button.

● Import & Export Settings

Configuration settings of the camera can be exported from a camera into another camera.

1. Click "Browse" to select the save path for import or export information on the PC.
2. Click the "Import Setting" or "Export Setting" button.

● Default Settings

Click the "Load Default" button to restore all system settings to the default factory settings except those you want to keep.

3.7.2 Reboot

Go to Config→Maintenance→Reboot.

Click the "Reboot" button to reboot the device.

Timed Reboot setting

If necessary, the camera can be set up to reboot on a time interval. Enable "Time Settings", set the date and time and then click the "Save" button to save the settings.

3.7.3 Upgrade

Go to Config→Maintenance→Upgrade. In this interface, the camera firmware can be updated.

The screenshot shows a 'Local upgrade' section with a 'Path' label, a text input field, a 'Browse' button, and an 'Upgrade' button.

1. Click the “Browse” button to select the path of the upgrade file
2. Click the “Upgrade” button to start upgrading the firmware.
3. The device will restart automatically

Caution! Do not close the browser or disconnect the camera from the network during the upgrade.

3.7.4 Operation Log

To query and export log:

1. Go to Config→Maintenance→Operation Log.


Main Type	All log	▼	Sub Type	All log	▼		
Start Time	2019-11-12 00:00:00	📅	End Time	2019-11-12 23:59:59	📅	Search	Export
Index	Time	Main Type	Sub Type	User Name	Login IP		
1	2019-11-12 17:40:00	Alarm					
2	2019-11-12 17:38:46	Operation	System config modify				
3	2019-11-12 17:36:46	Alarm					

2. Select the main type, sub type, start and end time.
3. Click “Search” to view the operation log.
4. Click “Export” to export the operation log.

4 Search


4.1 Image search

Click Search to go to the interface as shown below. The images saved on the micro-SD card can be found here.

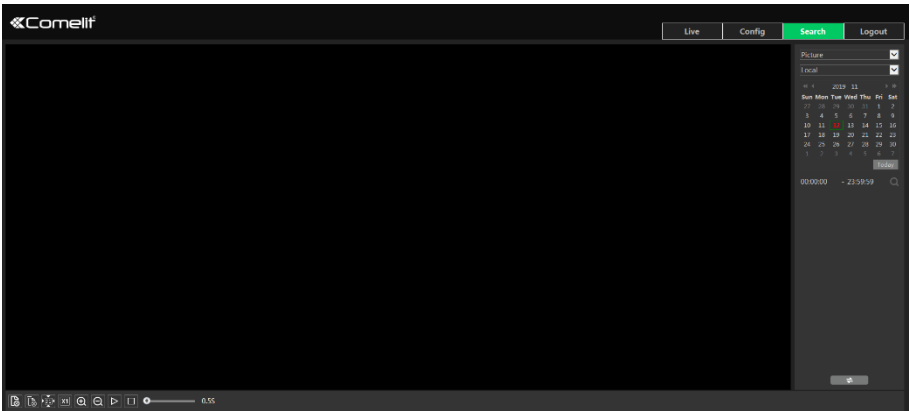

● Local Image Search


1. Choose “Picture”—“Local”.
2. Set time: select the date and choose the start and end time.
3. Click  to search the images.
4. Double click on the file name in the list to view the snapshots as shown above.

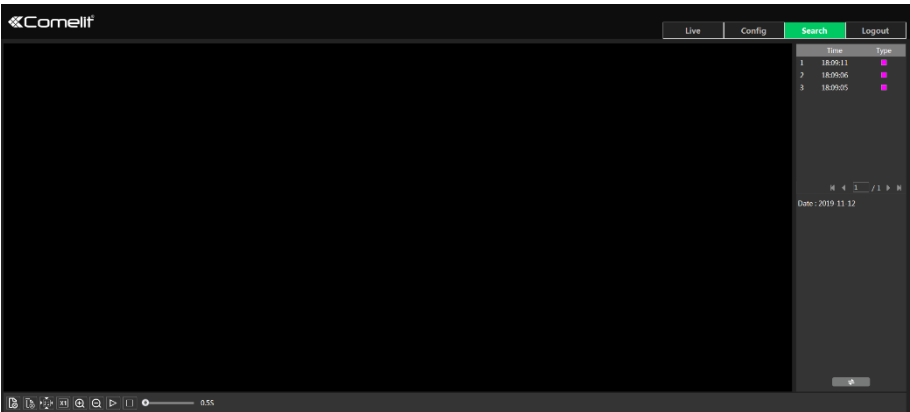

Click  to return to the previous interface.

● **Micro-SD card image search**

1. Choose “Picture”—“SD Card”.

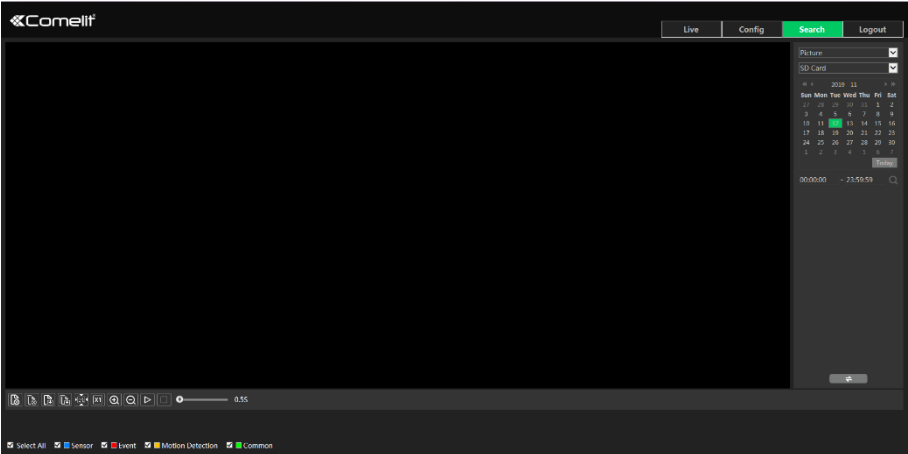

- 2. Set time: select the date and choose the start and end time.
 - 3. Choose the alarm events at the bottom of the interface.
 - 4. Click  to search the images.
 - 5. Double click on the file name in the list to view the snapshots.
- Click  to return to the previous interface.


The descriptions of the buttons are shown as follows:

Icon	Description	Icon	Description
	Close: Select an image and click this button to close the image.		Close all: Click this button to close all images.
	Save: Click this button to select the path for saving the image on the PC.		Save all: Click this button to select the path for saving all pictures on the PC.
	Fit size: Click to fit the image on the screen.		Actual size: Click this button to display the actual size of the image.
	Zoom in: Click this button to digitally zoom in.		Zoom out: Click this button to digitally zoom out.
	Slide show play: Click this button to start the slide show mode.		Stop: Click this button to stop the slide show.
	Play speed: Play speed of the slide show.		


4.2 Video search

4.2.1 Local Video Search

Click Search to go to the interface as shown below. Videos were recorded locally to the PC can be played in this interface.

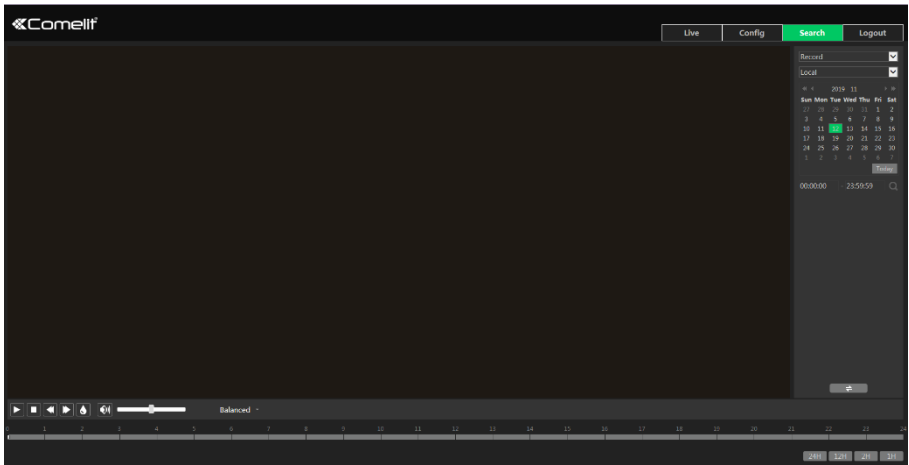

1. Choose “Record”—“Local”.
2. Set search time: select the date and choose the start and end time.
3. Click  to search the images.
4. Double click on a file name in the list to start playback.

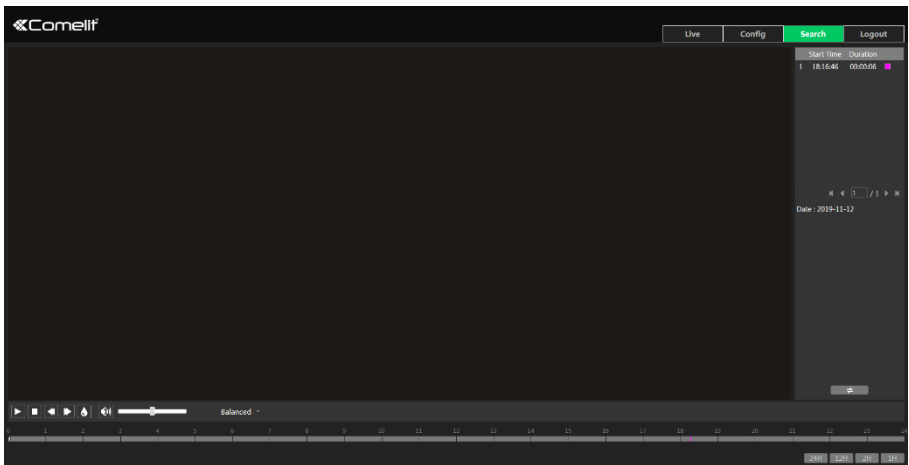


Icon	Description	Icon	Description
	Play button. After pausing the video, click this button to continue playing.		Pause button
	Stop button		Speed down
	Speed up		Watermark display
	Enable / disable audio; drag the slider to adjust the volume after enabling audio.		


4.2.2 Micro-SD card video search

Click Search to go to the interface as shown below. Videos that were recorded on the micro-SD card can be played in this interface.

1. Choose “Record”—“SD Card”.
2. Set search time: select the date and choose the start and end time.
3. Click  to search the images.

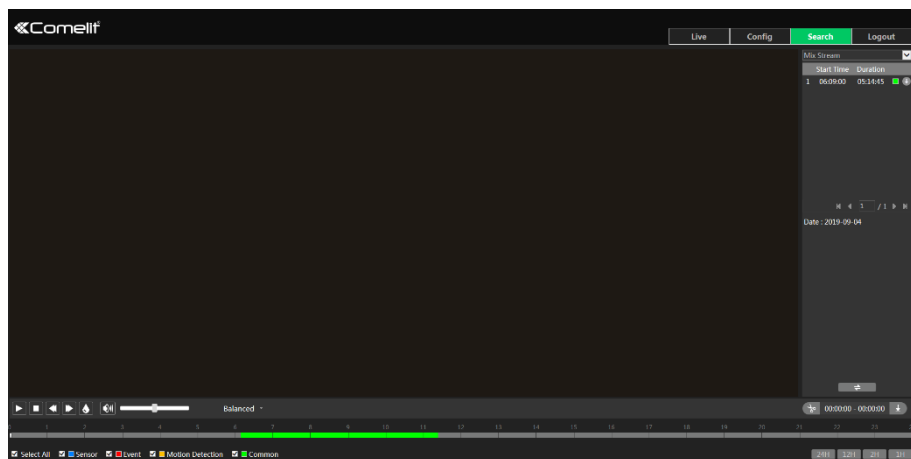

4. Select the alarm events at the bottom of the interface.
5. Select mix stream (video and audio stream) or video stream as needed.
6. Double click on a file name in the list to start playback.

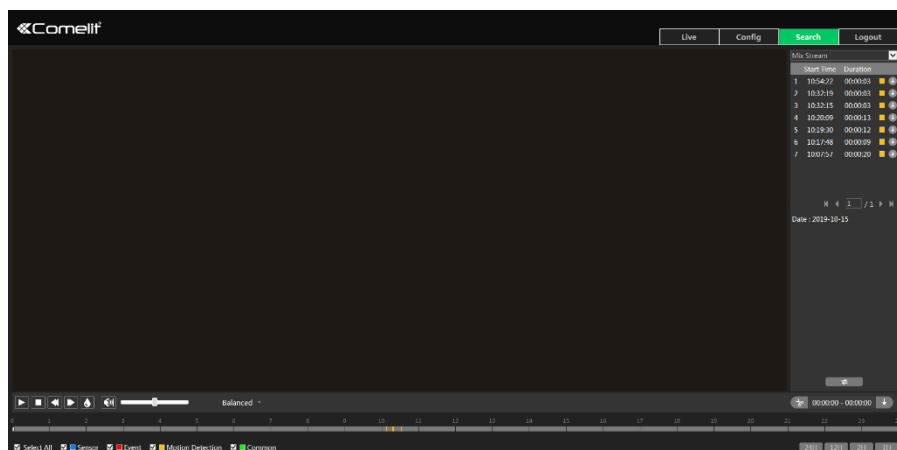

The timetable can be shown in 24h/12h/2h/1h format by clicking the corresponding buttons.

Video clip and downloading operations:

1. Search the video files according to the above mentioned steps.
2. Select the start time by clicking on the timetable.
3. Click  to set the start time and then this button turns green ().
4. Select the end time by clicking on the timetable. Then click  to set the end time.
5. Click  to download the video file in the PC.

Index	Process	Record	Start Time	End Time	Path	Operate
1	100%	Cut	2019-10-15 11:28:55	2019-10-15 11:30:24	Desktop	Cancel

Set up C:\Users\Y... \Desktop
Clear List
Close

Click “Set up” to set the storage directory of the video files.

Click “Open” to play the video.

Click “Clear List” to clear the downloading list.

Click “Close” to close the downloading window.

Appendix

Appendix 1 - Troubleshooting

Password forgot

A: Reset the device to the default factory settings.

Default IP: 192.168.1.150; Username: admin; Password: admin

Fail to connect devices through Internet Explorer browser.

A: Network is not well connected. Check the connection.

B: IP address is not available. Change the IP address.

C: Web port number has been changed: contact administrator to get the correct port number.

D: Exclude the above reasons. Restore to default setting by Comelit Advance IP Tool.


Comelit Advance IP tool cannot search devices.

The anti-virus software in your computer may cause it. Please stop it and try to search device again.

Internet Explorer cannot download ActiveX control.

A. Internet Explorer browser may be setup to block ActiveX. Follow the steps below.

① Open the browser and then click Tools → Internet Options.

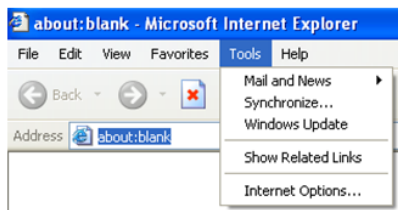


② Select Security → Custom Level....

③ Enable all the options under “ActiveX controls and plug-ins”.

④ Click OK to finish setup.

B. Other plug-ins or anti-virus blocks ActiveX. Please uninstall or close them.

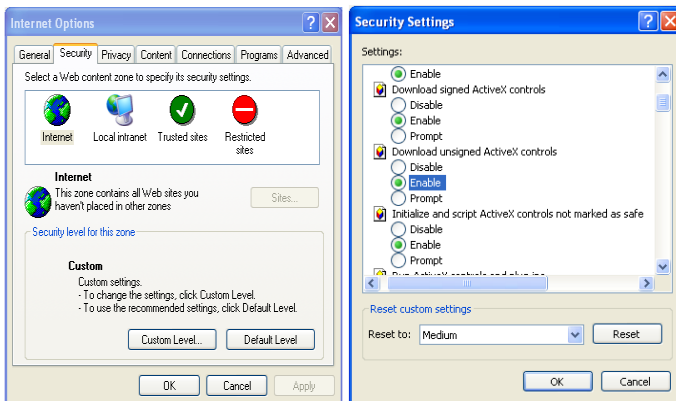


No sound can be heard.

A: Audio input device is not connected. Please connect and try again.


B: Audio function is not enabled at the corresponding channel. Please enable this function.

Appendix 2 - Installation of waterproof rubber plug

In order to improve the water-proof effect, the rubber plugs are attached to some network bullet cameras. You may mount the rubber plugs to the mounting base of the camera as required when installing. The installation instructions are as follows.

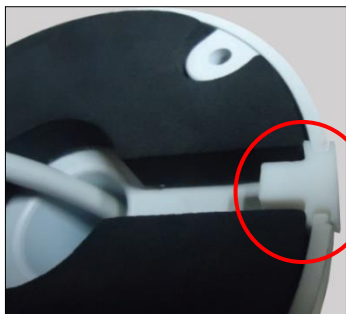

Please mount the rubber plug into the gap of the mounting base

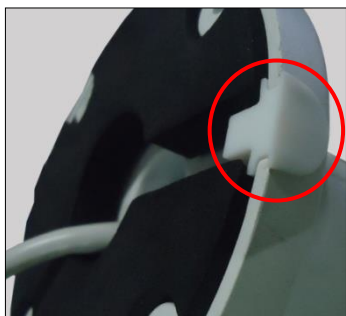

Please let the camber surface of the rubber plug mount outside.

www.comelitgroup.com



Via Don Arrigoni, 5 - 24020 Rovetta (BG) - Italy