



INTELLIGENT FACILITY SOLUTIONS

Electric Works, 3 Concourse Way, Sheffield, S1 2BJ

United Kingdom: +44 (0) 114 354 0047

Eire: +353 190 36387

sales@ihdryers.co.uk

www.intelligenthanddryers.com




Push Plate Installation Instructions

Step 1 (Initial installation only) Fit metal back plate (1) to door

Back plate (1) can be
a) screwed to the door
using 5 x screws (3)
provided (recommended
method - as shown)

or

b) stuck onto the door by
removing backing tape
and pressing firmly
against door.

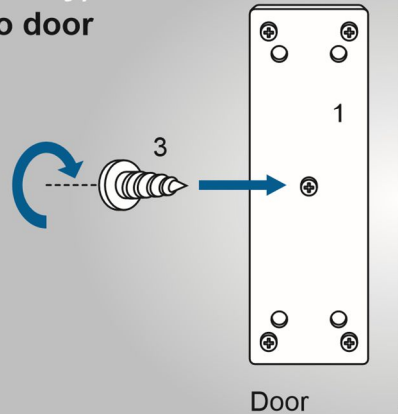


NOTE - Screws must be completely flat to the surface and NOT protrude.

Antimicrobial Technology - Powered by SteriTouch

This product contains silver phosphate glass, a biocidal product which controls the growth of micro-organisms on the product surface. This product does not contain nanomaterials.


Step 2 Activate time indicator

Locate the small silver dome on the reverse of the front panel (2). Push down firmly on this dome with your thumb until you feel it pop (you can see that liquid has moved downwards from the dome).

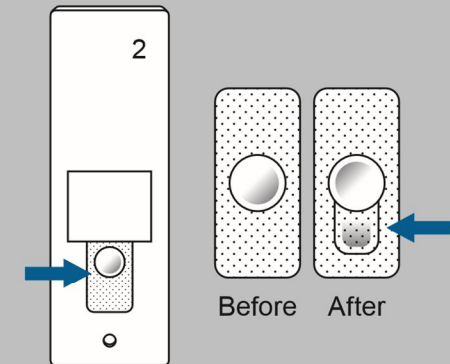

Step 3 Fit the Front Panel (2)

Align the front panel (2)
with the back plate (1),
ensuring that the 4
studs align. Push down
firmly and ensure it is
flush and does not
move.

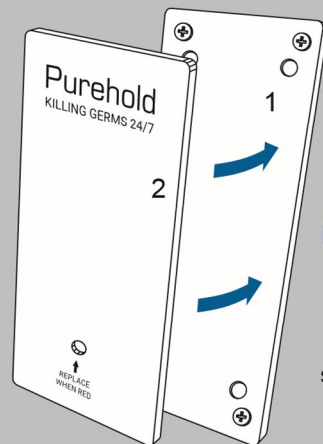


Attach door
sticker onto the
door so users
can see it.

Step 4 Replacing the Front Panel (2) (after 12 months)

When the indicator turns
red, remove the front
panel (2) by pulling firmly
towards you and replace
with a new front panel.



Parts

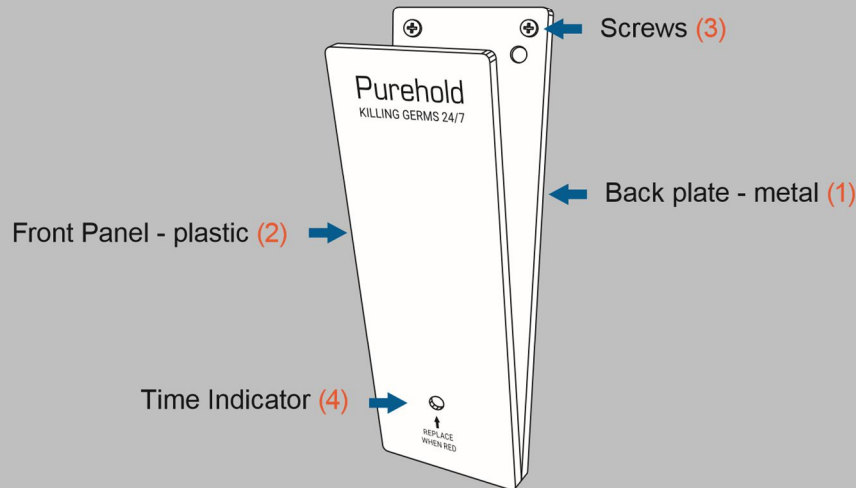

1 x Door Sticker

Need Help?

Please call 0114 354 0047, or e-mail sales@ihdryers.co.uk

Disposal Instructions

Purehold Front Panels are made from ABS plastic and are capable of being recycled. Please check with your local facility or your collection team if they can recycle them at their facility.



Warranty

This product is designed to provide optimum hygiene benefits through a unique, SteriTouch antibacterial coating. This coating gradually wears over time and users are advised when to change the product once the visual indicator turns red. In normal use, Purehold guarantees that this product will remain free from defects in materials and workmanship for a period of 12 months from the date of installation. In very high traffic applications, it may be necessary to change the front panel more frequently and this will become evident from a serious deterioration in the surface appearance (i.e. a lot of surface scratches).