

Dryflow **Maxi Dispenser**


Stainless Steel

DFSS04



Usage & maintenance

- Open packaging carefully
- Only use water or neutral detergent to clean this product, and dry with a soft towel
- Do not use detergent containing scouring powder, polishing powder, or any corrosive substance
- Do not use a rough cloth to clean the products
- Clean products regularly to maintain the products appearance

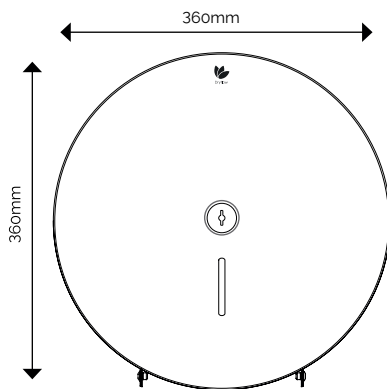

Dryflow **Maxi Dispenser** **Stainless Steel**




DFSS04

Installation

Contents



Take out the product

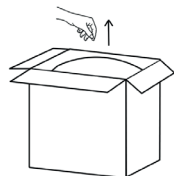

Confirm the product and accessory pack




- Key x2
- Mounting Screw x3
- Plastic Anchor x3

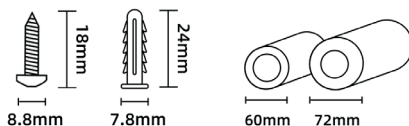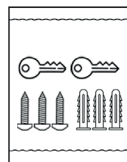


The standard inner spindle is 40mm. Extra inner spindle accessory will be added according to the local market.


The roll paper also has two sizes of shaft cores, 60mm/72mm

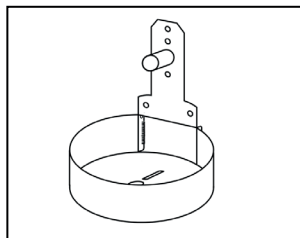


1. Open the dispenser with the key provided

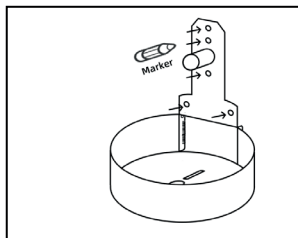


2. Hold the opened dispenser to the wall and mark the screw holes

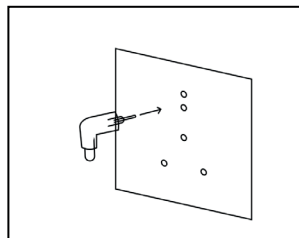


3. Drill the holes and insert the plastic hole plugs

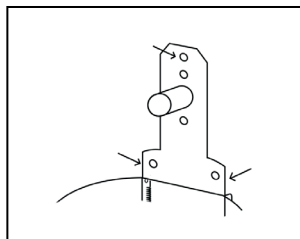

4. Secure the dispenser to the wall with the screws. It is recommended to use the top and the bottom holes. For added security use additional screw holes

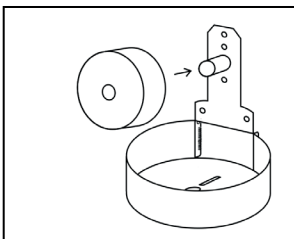

5. Install jumbo toilet roll. Install the inner spindle accessory if provided.

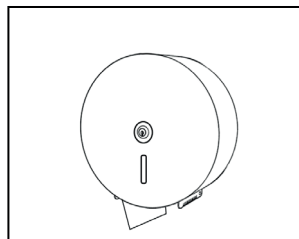

6. Close the cover and lock with the key.