

Superior Hub Hybrid user manual

Previously: Hub Hybrid (2G) / (4G)

Updated February 4, 2026



Superior Hub Hybrid is a hybrid control panel of the Ajax security system. Compatible with wired and wireless Ajax devices. Controls the operation of connected devices, interacts with the user and the security company. Intended for indoor installation.

Superior Hub Hybrid needs Internet access to connect to the Ajax Cloud service. Available communication channels: Ethernet and two SIM cards. The hub is available in four versions:

- in default casing with 2G modem — **Superior Hub Hybrid (2G)**,
- in default casing with 2G/3G/4G (LTE) modem — **Superior Hub Hybrid (4G)** revision 1 (date of manufacture before June 2025),

- in default casing with 2G/3G/4G (LTE) modem — **Superior Hub Hybrid (4G)** revision 2 (date of manufacture from June 2025),
- as a board without casing with 2G/3G/4G (LTE) modem — **Superior Hub Hybrid (4G) (without casing)**.


This is a device of the Superior product line. Only accredited Ajax Systems partners can sell, install and administer Superior products.



[Buy Superior Hub Hybrid](#)

Functional elements

Casing elements

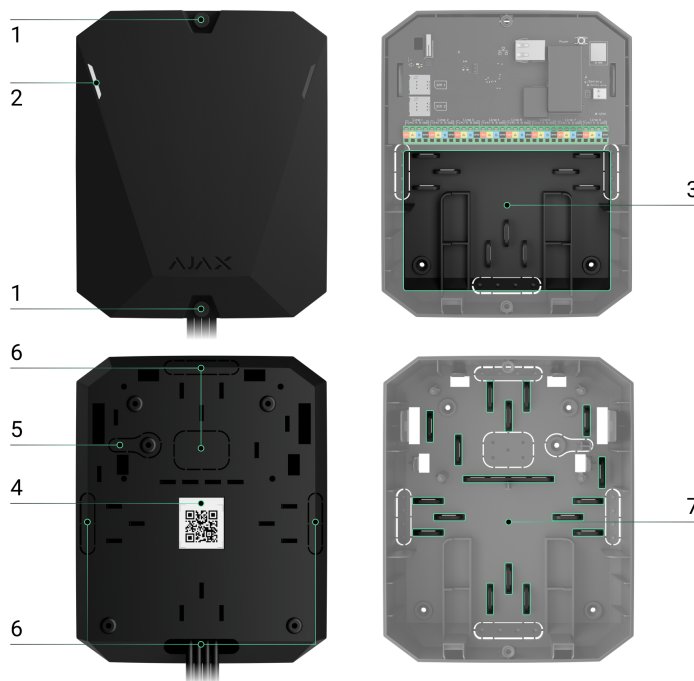

1. Screws that secure the casing lid. Unscrew with a bundled hexagon key (Ø 4 mm).

2. Light guides for the hub status indication (available in the new casing version; in the previous version, the LED indicator is located on the board).
3. A part with holders for a backup battery.




Battery not included.

4. QR code and ID (serial number) of the control panel.
5. Perforated part of the casing. Necessary for tamper triggering in case of any attempt to detach the device from the surface. Do not break it off.
6. Perforated parts of the casing for the output of wires of the connected detectors and devices.
7. Cable fasteners.


Board elements

Superior Hub Hybrid (2G) **Superior Hub Hybrid (4G) revision 1** **Superior H**

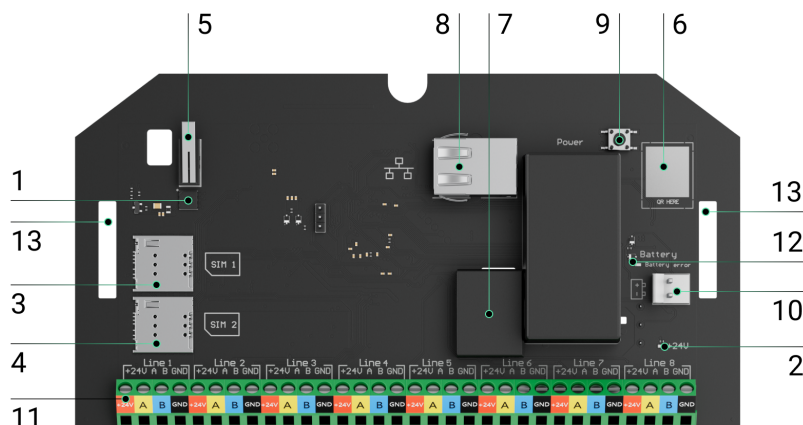

1. LED status indicator of the hub and connected communication channels.
2. LED status indicator of devices connected to the hub Fibra lines.
3. Slot for micro SIM 1.
4. Slot for micro SIM 2.
5. Tamper button. Detects when the casing lid of Superior Hub Hybrid (2G) is removed.
6. QR code and ID (serial number) of the device.
7. Power cable connector.
8. Ethernet cable connector.
9. Power button.
10. Terminals for connecting a 12 V backup battery.
11. Fibra lines terminals for connecting wired devices.
12. **Battery error** indicator. Lights up in case of polarity reversal when connecting the battery (when the battery “-” is connected to the terminal “+” and vice versa).
13. Mounting holes to attach the Superior Hub Hybrid (2G) board to the hub casing.

Fibra line terminals

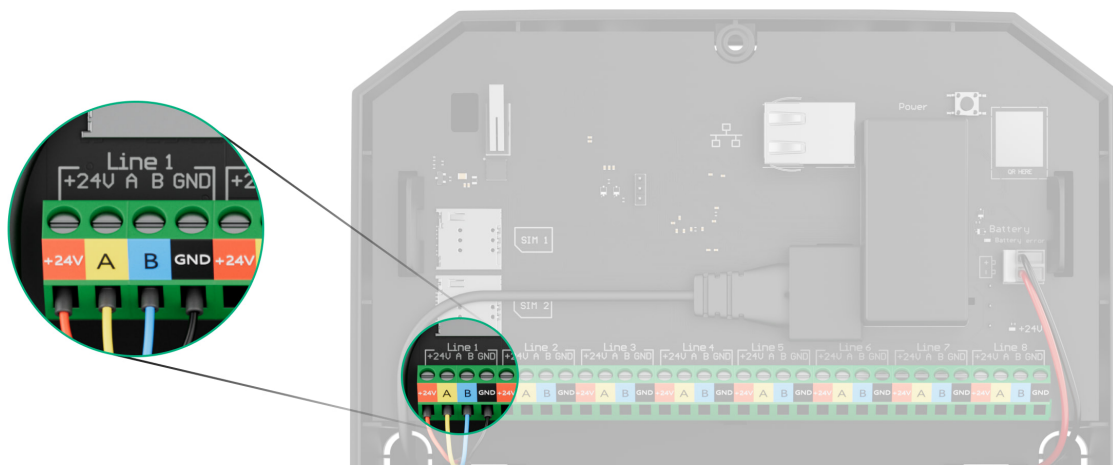

Superior Hub Hybrid has 8 Fibra lines. Numbers from 1 to 8 are indicated on the control panel board.

Fibra line terminals:

1. **+24 V** – power supply terminal of 24 V $\approx$.
2. **A** – first signal terminal.
3. **B** – second signal terminal.
4. **GND** – power ground terminal.



Observe the polarity and the order of connecting the wires when installing Fibra devices.

Operating principle



Superior Hub Hybrid is a hybrid control panel of the Ajax security system. It controls the operation of connected devices.

You can connect up to 100 wired and wireless Ajax devices to Superior Hub Hybrid. Connected devices protect against intrusion, fire, and flooding, and also allow you to control electrical appliances according to scenarios or manually – in a mobile app or by pressing the panic button, [LightSwitch](#), or [keypad with touch screen](#).

To monitor the operation of all security system devices, the hub communicates with the connected devices using three [encrypted protocols](#):

1. **Jeweller** is a radio protocol for transmitting events and alarms from Ajax wireless devices. The communication range is up to 2,000 m without obstacles: walls, doors, or inter-floor constructions.



[Learn more about Jeweller](#)

2. **Wings** is a radio protocol for transmitting photos from MotionCam and MotionCam Outdoor detectors. The communication range is up to 1,700 m without obstacles: walls, doors, or inter-floor constructions.



[Learn more about Wings](#)

3. **Fibra** is a wired protocol for transmitting events and alarms from Ajax wired devices. The communication range is up to 2,000 m when connected

via twisted pair U/UTP cat.5.



[Learn more about Fibra](#)

If a detector is triggered, the system raises an alarm in less than a second, regardless of the communication protocol. In case of an alarm, the hub activates the sirens, starts the scenarios, and notifies the security company's monitoring station and all users.

Sabotage protection

Superior Hub Hybrid has 3 communication channels for connecting to the Ajax Cloud server: Ethernet and two SIM cards. This allows you to connect the device to three different communication providers at the same time. If one of the communication channels is unavailable, the hub will automatically switch to another one and inform the control station of the security company and system users.

When a jamming attempt is detected, the system switches to an idle radio frequency and sends notifications to the control station of the security company and to system users.



[What is security system jamming](#)

The hub regularly checks the quality of communication with all connected devices. If any device loses connection with the control panel, upon expiry of the time specified by the administrator, all system users (depending on the settings), as well as the monitoring station of the security company, will receive a notification about the incident.



[Learn more](#)

No one can turn off the hub unnoticed, even when the facility is disarmed. If an intruder tries to open the hub casing, the tamper button will trigger immediately. The alarm notification will be sent to the security company and to system users.



[What is a tamper](#)

The hub rechecks Ajax Cloud connection at regular intervals. The ping period is specified in the hub settings. If a minimum ping period is set, the server may notify the users and the security company in as little as 60 seconds after the connection is lost.



[Learn more](#)

The 7 A·h backup battery can be connected to the hub, which can provide a system of 30 detectors with backup power for 60 hours.

Use 12 V₌₌ batteries with a capacity of 4, 7, or 9 A·h. There are special holders for batteries in the control panel casing.

You can use batteries of a different capacity if they are suitable in size and the charging time does not exceed 72 hours for Grade 2 compliance and 24 hours for Grade 3 compliance. The maximum battery charging current from the Superior Hub Hybrid is 350 mA. The maximum dimensions of the battery to be installed in the Superior Hub Hybrid casing are 151 × 65 × 94 mm, and the weight is 5 kg.



[Learn more](#)

OS Malevich

Superior Hub Hybrid is run by the real-time operating system OS Malevich. It is protected from viruses and cyber-attacks.

OS Malevich brings new features and functionality to the Ajax security system through over-the-air updates. The update does not require the involvement of an installation engineer or user.

The update takes up to 2 minutes with the security system disarmed and the external power supply and backup battery connected.




[How OS Malevich updates](#)

Indication

Hub has two LED indication modes:

- **Hub – server connection.**
- **British disco.**

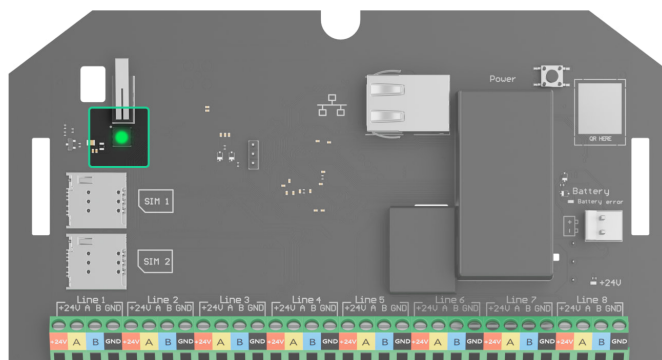

Hub – server connection

Hub – server connection mode is enabled by default. The hub LED has a list of indications showing the system state or events occurring. Superior Hub Hybrid can light up red, white, purple, yellow, blue, or green, depending on the state.



In the previous casing version of Superior Hub Hybrid, the LED indicator is not visible when the casing lid is closed. The indicator is useful only during the hub's connection and setup. In the new version, the casing of Superior Hub Hybrid features light guides, allowing hub state to be viewed at any time.

Superior Hub Hybrid states can also be monitored in the Ajax apps.

Indication	Event	Note
Lights up white.	At least two communication channels are connected: Ethernet and one or two SIM cards.	When operating on a backup battery only, the indicator will blink every 10 seconds.
Lights up green.	One communication channel is connected: Ethernet or one/two SIM cards. Learn more	When operating on a backup battery only, the indicator will blink every 10 seconds.
Lights up red.	The hub has no connection to the Internet or the Ajax Cloud service.	When operating on a backup battery only, the indicator will blink every 10 seconds.
The external power supply is disconnected (if there is a connected backup battery).	Lights up continuously for 3 minutes, then blinks every 10 seconds.	The color of the indication depends on the number of connected communication channels.



If you see an indication while using the system that is not listed in this user manual, please contact the [Ajax support service](#)

Access to indications

Superior Hub Hybrid users can see the **British disco** indication after they:

- Arm/disarm the system using the Ajax keypad.
- Enter the correct user ID or personal code on the keypad and perform an action that has already been performed (for example, the system is disarmed and the disarm button is pressed on the keypad).
- Press the Ajax SpaceControl Jeweller button to arm/disarm the system or activate **Night Mode**.
- Arm/disarm the system using Ajax apps.



All users can see the **Changing hub's state** indication.

British Disco

The function can be enabled in the hub settings in the PRO app (Hub → Settings → Services → LED indication).



The indication is available for hubs with the firmware OS Malevich 2.14 and higher and in apps of such versions and higher:

- Ajax PRO: Tool for Engineers 2.22.2 for iOS.
- Ajax PRO: Tool for Engineers 2.25.2 for Android.
- Ajax PRO Desktop 3.5.2 for macOS.

- Ajax PRO Desktop 3.5.2 for Windows.

Indication	Event	Note
Changing hub's state		
White LED flashes once per second.	Two-Stage Arming or Delay When Leaving .	One of the devices is performing Two-Stage Arming or Delay When Leaving .
Green LED flashes once per second.	Entry indication.	One of the devices is performing Delay When Entering .
White LED lights up for 2 seconds.	Arming is completed.	The hub (or one of the groups) is changing its state from Disarmed to Armed.
Green LED lights up for 2 seconds.	Disarming is completed.	The hub (or one of the groups) is changing its state from Armed to Disarmed.
Alerts and Malfunctions		
Red and purple LED flashes in sequence for 5 seconds.	Confirmed hold-up alarm.	There is an unrestored state after a confirmed hold-up alarm.  The indication is displayed only if Restoration after confirmed hold-up alarm is enabled in the settings.

Red LED lights up for 5 seconds.	Hold-up alarm.	There is an unrestored state after a hold-up alarm.  The indication is not displayed if there is a confirmed hold-up alarm state.  The indication is displayed only if Restoration after hold-up alarm is enabled in the settings.
Red LED flashes.	The number of flashes equals the Device No. of a hold-up device (DoubleButton), the first to generate the hold-up alarm.	There is an unrestored state after the confirmed or unconfirmed hold-up alarm: • Single hold-up alarm or • Confirmed hold-up alarm
Yellow and purple LED flashes sequentially for 5 seconds.	Confirmed intrusion alarm.	There is an unrestored state after the confirmed intrusion alarm.  The indication is displayed

		only if Restoration after confirmed intrusion alarm is enabled in the settings.
Yellow LED lights up for 5 seconds.	Intrusion alarm.	There is an unrestored state after the intrusion alarm.  The indication is not displayed if there is a confirmed intrusion alarm condition.  The indication is displayed only if Restoration after intrusion alarm is enabled in the settings.
Yellow LED flashes.	The number of flashes equals the Device No. that first generated the intrusion alarm.	There is an unrestored state after the confirmed or unconfirmed intrusion alarm: • Single intrusion alarm or

		Confirmed intrusion alarm
Red and blue LED flashes in sequence for 5 seconds.	Lid opening.	There is an unrestored tamper state or an open lid on any of the devices, or the hub.  The indication is displayed only if Restoration after Lid opening is turned on in the settings.
Yellow and blue LED flashes in sequence for 5 seconds.	Other malfunctions.	There is an unrestored fault state or a malfunction of any device or the hub.  The indication is displayed only if Restoration after faults is enabled in the settings.  Currently, Restoration after faults is not available in Ajax apps.

Dark blue LED lights up for 5 seconds.	Permanent deactivation.	One of the devices is permanently deactivated or the lid state notifications are disabled.
Blue LED lights up for 5 seconds.	Automatic deactivation.	One of the devices is automatically deactivated by an opening timer or the number of detections.
Green and blue LED flashes in sequence.	Alarm timer expiration. Learn more about Alarm confirmation feature	Displayed after the alarm timer expires (to confirm the alarm).

When nothing is happening in the system (no alarm, malfunction, lid opening, etc.), the LED displays two hub states:

- Armed/partially armed or **Night Mode** enabled — the LED lights up white.
- Disarmed — the LED lights up green.



In hubs with firmware **OS Malevich 2.15.2** and higher, the LED lights up green when set to Armed/partially armed or **Night Mode**.

Alert indication

If the system is disarmed and any of the indications from the table is present, the yellow LED flashes once per second.



If there are several states in the system, the indications are displayed one by one, in the same sequence as shown in the table.

Ajax account

To set up the system, install the [Ajax PRO app](#) and log in to your PRO account or create a new one if you don't have one. Don't create a new account for each space since one account can manage multiple security systems. Where necessary, you can configure separate access rights for each space.



[How to register a PRO](#)

User settings, systems, and parameters of connected devices are stored in the space. Changing the space admin, adding or removing users does not reset the settings of devices added to the space.



Superior Hub Hybrid can only be added and configured in Ajax PRO apps.

Connecting the hub to Ajax Cloud

Superior Hub Hybrid needs Internet access to connect to the Ajax Cloud server. Connection is needed for the operation of Ajax apps, remote setup and management of the system, and for sending push notifications to users.

Superior Hub Hybrid is connected to the Internet via Ethernet and two SIM cards. Connect all communication channels to achieve greater reliability and availability of the system. To do this, first install Superior Hub Hybrid board into the default casing.



The Superior Hub Hybrid (4G) revision 2 board (date of manufacture from June 2025) can also be installed into [Case D \(430\)](#). Refer to the [Case user manual](#) for installation guidance.

To install the hub board into the default casing:


1. Unscrew the screws securing the casing, if installed. Unscrew with a Ø 4 mm hexagon key. This hexagon key is included in the control panel set.



2. Remove the casing lid of the hub.



3. Connect the power and Ethernet cables to the appropriate connectors:

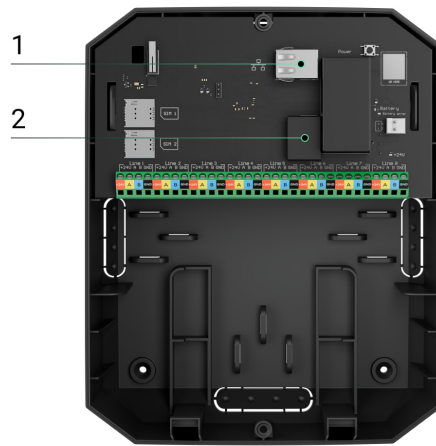


- 1 — Ethernet cable connector.
- 2 — power cable connector.



To comply with the INCERT requirements, use the Screw terminal block Adapter to connect the external power supply. [Read more](#)

4. Install SIM cards:

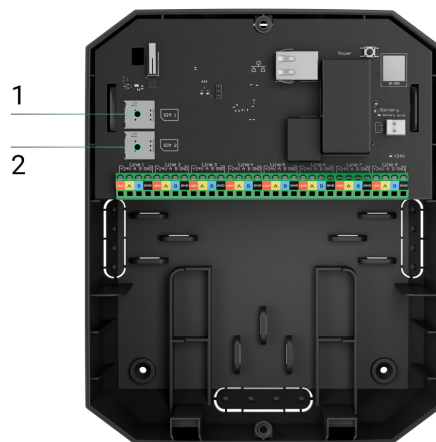

- 1 — first micro-SIM slot.
- 2 — second micro-SIM slot.

5. Connect a 12 V $\equiv$ backup battery with a capacity of 4, 7, or 9 A·h. The hub casing is designed for use with this type of battery.
6. Hold down the power button of the hub. As soon as the hub is on, the Fibra line LEDs on the hub board will light up.
7. Wait until the control panel is connected to the Internet. The green or white color of the LED indicates that the hub is ready for operation.



To install the Superior Hub Hybrid (4G) revision 2 board (date of manufacture from June 2025) into [Case D \(430\)](#), refer to the [Case user manual](#) for installation guidance.

If Ethernet connection fails

If the Ethernet connection is not established, disable proxy and MAC address filtration and activate DHCP in the router settings. The hub will automatically receive an IP address. After that, you can assign a static IP address to the hub in the Ajax app.

If SIM connection fails

To connect to the cellular network, you need to install a micro-SIM card with a PIN code request disabled and a sufficient amount of funds on the account to pay for services as per the operator's tariff. To disable the PIN code request, insert the SIM card into the phone.

If the hub fails to connect to the cellular network, use Ethernet to configure the network parameters: roaming, APN access point, user name, and password. To find out these parameters, contact the support service of your mobile operator.



How to set or change APN settings in the hub

Adding a hub to the PRO version of the app



Use the latest versions of Ajax apps to access all available features and ensure proper system operation. Superior Hub Hybrid can only be added and configured in Ajax PRO apps.

After adding a hub to your account, you become the administrator of the device. Administrators can invite other users to the system and determine their rights. You can connect up to 50 users to Superior Hub Hybrid.

Each PRO account connected to the hub, as well as the security company profile is considered a user of the system.

Changing or removing the administrator from the list of hub users does not reset the settings of the system or connected devices.




If there are already users on the hub, the hub admin, PRO with full rights, or the installation company maintaining the selected hub can add your account. You will receive a notification that the hub is already added to another account.

Contact with Technical Support to determine who has admin rights on the hub.



User rights in the Ajax security system

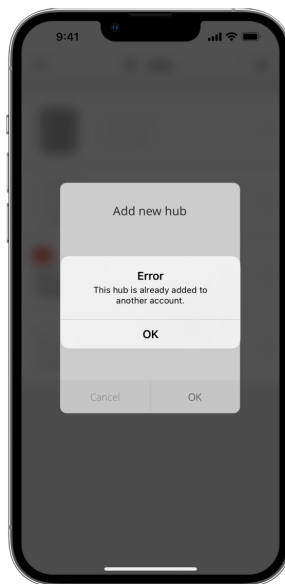

To add a hub to the PRO version of the app:

1. Connect external power, backup battery, Ethernet, and/or SIM cards to the hub.
2. Turn on the hub and wait until the connection status LED indicator lights up green or white.
3. Open the PRO version of the app. Allow the app to access the requested features. This will allow you to fully use the capabilities of the Ajax apps and not to miss notifications about alarms or events.
4. Ensure you have a space. Create the space if you don't have one.



What is a space



How to create a space



The space functionality is available for apps of such versions and higher:

- Ajax Security System 3.0 for iOS;
- Ajax Security System 3.0 for Android;

- Ajax PRO: Tool for Engineers 2.0 for iOS;
- Ajax PRO: Tool for Engineers 2.0 for Android;
- Ajax PRO Desktop 4.0 for macOS;
- Ajax PRO Desktop 4.0 for Windows.

5. Click **Add Hub**.

6. Choose a suitable method: manually or using a step-by-step guidance. If you are setting the system up for the first time, use step-by-step guidance.

If you have selected manual adding.

- Assign the hub name.
- Scan the hub QR code or enter the ID manually.
- Wait until the hub is added. After binding, the hub will be displayed in the **Devices**  menu of the PRO version of the app.

If you chose a step-by-step guidance.


Follow the instructions in the app. Upon completion, the hub and connected devices will be displayed in the **Devices**  menu of the PRO version of the app.

Fault counter

If a hub fault is detected (e.g., no external power supply is available), a fault's counter is displayed on the device icon in the Ajax app.

All faults can be viewed in the hub states. Fields with faults will be highlighted in red.

Hub icons

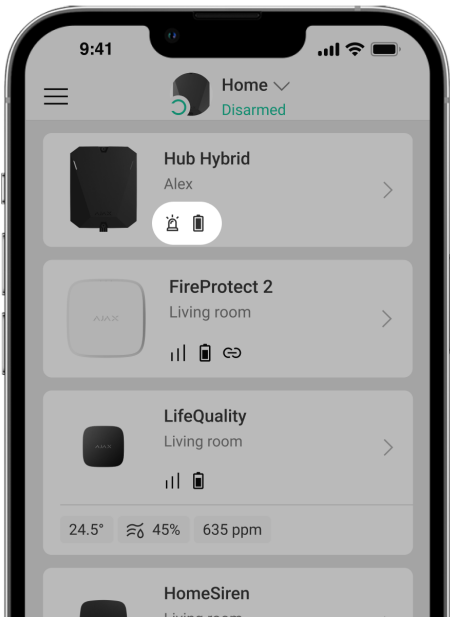


Icons display some of the Superior Hub Hybrid statuses. You can view them in the Ajax app, in the **Devices**  tab.

Icon	Meaning
	Hub operates in the 2G network.
	Hub operates in the 3G network. Available for Superior Hub Hybrid (4G) only.
	The hub operates in the 4G (LTE) network. Available for Superior Hub Hybrid (4G) only.
	No SIM cards. Insert at least one SIM card.
	The SIM card is faulty or has a PIN code set up. Check SIM card operation in the phone and disable the PIN code request.
	Superior Hub Hybrid battery charge level. Displayed in 1% increments.

	The backup battery is not connected.
	Superior Hub Hybrid malfunction detected. Open hub states for details.
	The hub is directly connected to the monitoring station of the security company. The icon is not displayed if direct connection is not available or not configured. Learn more
	The hub is not directly connected to the central monitoring station of the security company. The icon is not displayed if direct connection is not available or not configured. Learn more
Saving mode	The hub is in the Saving mode state.

Hub states

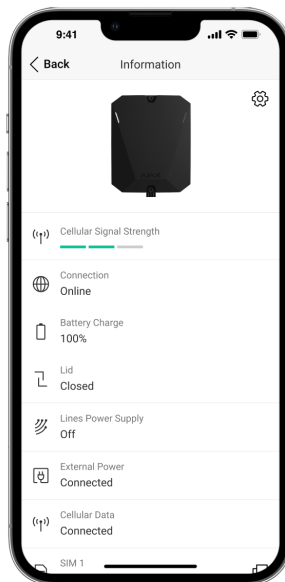

States can be found in the [Ajax app](#):

1. Go to the **Devices**  tab.

2. Select **Superior Hub Hybrid** from the list.

Parameter	Meaning
Malfunction	Click the  button to open the list of Superior Hub Hybrid malfunctions. The field appears only if a malfunction is detected.
Cellular Signal Strength	The signal strength of the active SIM mobile network. Install the hub in places where the cellular communication level reaches 2-3 bars. If the hub is installed in a place with weak or unstable signal strength, it will not be able to call or send an SMS about an event or alarm.
Connection	The status of connection between the hub and Ajax Cloud: • Online — the hub is connected to Ajax Cloud. • Offline — the hub is not connected to Ajax Cloud. Check the hub Internet connection. If Superior Hub Hybrid is not connected to the server, the icons of the hub and all connected devices become semi-transparent in the list of devices.
Battery Charge	Hub backup battery charge level. Displayed in 1% increments. At a charge level of 20% and below, the hub will report low battery charge.

	Learn more
Lid	The status of tampers that respond to demounting or opening of the control panel casing: • Closed — the hub lid is closed. Normal state of the hub casing. • Open — the casing of the hub is open or the integrity of the casing is otherwise compromised. Check the state of the control panel casing. Learn more
Lines Power Supply	Power supply status on the hub Fibra lines: • On — power supply is provided to all Fibra lines. • Off — power supply is not provided to all Fibra lines.
External Power	External power supply connection status: • Connected — the hub is connected to an external power supply. • Disconnected — no external power supply. Check the connection of the Superior Hub Hybrid to the external power supply.
Average noise (dBm)	Average noise in the radio channel. Measured in the place where the hub is installed. The first two values show the level at Jeweller frequencies, and the third — at Wings frequencies. The acceptable value is –80 dBm or lower. For example, –95 dBm is considered

	acceptable and –70 dBm is invalid. <u>What is security system jamming</u>
Cellular Data	Mobile Internet connection status of the hub: • Connected — the hub is connected to Ajax Cloud via mobile Internet. • Not connected — the hub is not connected to Ajax Cloud via mobile Internet. Check the Superior Hub Hybrid connection to the Internet via the mobile network. • Disabled — the option is disabled in the hub settings. If the cellular signal strength reaches 1–3 bars, and the hub has enough funds and/or has bonus SMS/calls, it will be able to call and send SMS, even if this field displays the Not connected status.
Active	Displays active SIM card: • SIM card 1 — the hub works with a SIM card installed in the first slot. • SIM card 2 — the hub works with a SIM card installed in the second slot.
SIM 1	The number of the SIM card installed in the first slot. To copy the number, click on it. If the phone number is displayed as an Unknown number, the operator has not written it to the memory of the SIM card.
SIM 2	The number of the SIM card installed in the second slot.

	To copy the number, click on it. If the phone number is displayed as an Unknown number, the operator has not written it to the memory of the SIM card.
Ethernet	Internet connection status of the hub via Ethernet: • Connected — the hub is connected to Ajax Cloud via Ethernet. Normal state. • Not connected — the hub is not connected to Ajax Cloud via Ethernet. Check the Superior Hub Hybrid connection to the Internet via the wired Internet. • Disabled — the option is disabled in the hub settings.
Monitoring Station	The status of direct connection of the hub to the central monitoring station of the security company: • Connected — the hub is directly connected to the central monitoring station of the security company. • Not connected — the hub is not directly connected to the central monitoring station of the security company. If this field is displayed, the security company uses direct connection to receive events and security system alarms. <u>Learn more</u>
Scheduled wake-up	 Available with <u>OS Malevich 2.31</u> and later versions.

	The state of the scheduled wake-up feature. Tap the  icon to configure the date and time when the hub will wake up on demand from the Saving mode and become active for configuration and management. The available states are: • Not set — the scheduled wake-up is not set. • Date, time — the next wake-up on demand is scheduled for the specified date and time.
Hub model	Hub model name: Superior Hub Hybrid (2G) or Superior Hub Hybrid (4G). Differences between Ajax hubs
Hardware version	Superior Hub Hybrid hardware version. Not updated.
Firmware	Superior Hub Hybrid firmware version. Updates remotely. Learn more
Device ID	Identifier (first 8 digits of the serial number) of the Superior Hub Hybrid. The identifier is located on the device box and on the board under the QR code.
IMEI	A unique 15-digit serial number for identifying the hub's modem on a GSM network. It is shown only when a SIM card is installed in the hub.

Selecting the installation site

Fix Superior Hub Hybrid casing on a vertical surface using bundled fasteners. All the necessary holes for fastening in the casing have already been made.



Hub vertical fixation is needed for the tamper to respond if someone tries to detach a device. Learn the battery documentation before installing — some batteries can be mounted only vertically (with terminals upward). Another installation position could cause fast battery degradation.

It is advisable to choose an installation site where the hub is hidden from prying eyes — for example, in the pantry. This will help reduce the likelihood of sabotage or security system jamming. Note that the device is intended for indoor installation only.

Choose a site where the hub can be connected via all possible communication channels: Ethernet and two SIM cards. The cellular signal strength at the installation site should be stable and should reach 2-3 bars. We do not guarantee correct operation of the device with a low cellular signal strength.

When choosing an installation site, take into account the distance between the hub and wireless devices and the presence of obstacles between them hindering the radio signal passage: walls, intermediate floors, or large-size objects located in the room.

To roughly calculate the signal strength at the place of installation of wireless devices, use our [radio communication range calculator](#). Use [Fibra power supply calculator](#) to calculate the wired connection range.

Run the Jeweller, Wings, and Fibra signal strength tests. The stable signal strength of 2-3 bars with all connected devices should be provided at the chosen installation site. With a signal strength of 1 or 0 bars, we do not guarantee stable operation of the security system.

If the system has devices with signal strength of 1 or 0 bars, consider relocating the hub or device. If this is not possible or the device still has low or unstable signal strength after being moved, use range extenders.

Installation of the control panel



During installation and operation of the Ajax security system, adhere to the rules and requirements of regulatory legal acts on electrical safety. Do not disassemble the device while it is energized or use it with a damaged power cable.


Before installation, make sure that you have selected the optimal location for the device and that it complies with the requirements of this manual.

To install Superior Hub Hybrid using the default casing:


1. Prepare the cable outputs in advance by carefully breaking out the perforated parts of the Superior Hub Hybrid casing.



2. Secure the casing on the vertical surface at the selected installation location with the bundled screws using all fixation points. One of them is in the perforated part above the tamper – it is required for tamper triggering in case of any attempt to detach the hub casing.

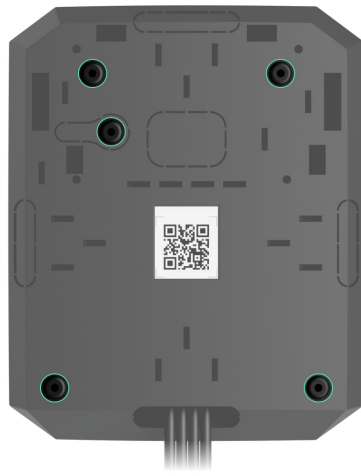

3. Place the Superior Hub Hybrid board into the casing on the holders.

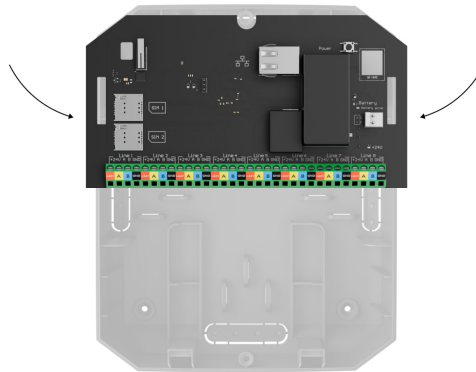

4. Connect the 12 V_{DC} backup battery. Do not connect third-party power supplies. This could result in a failure of the control panel.



Use a 12 V_{DC} battery with a capacity of 4, 7, or 9 A·h. The maximum dimensions of the battery to be installed in the casing are 151 × 65 × 94 mm, and the weight is 5 kg. Special holders are provided for this battery configuration in the hub casing. You can use batteries of a different capacity if they are suitable in size and the charging time does not exceed 72 hours for Grade 2 compliance and 24 hours for Grade 3 compliance. The maximum battery charging current from the Superior Hub Hybrid is 350 mA.

5. Turn on the hub.
6. Install the lid on the hub casing and fix it with the bundled screws.

7. Check the status of the hub casing in the [PRO version of the app](#). If the app shows tamper alarm, check tightness of the Superior Hub Hybrid casing.

To install the Superior Hub Hybrid (4G) revision 2 board (date of manufacture from June 2025) into [Case D \(430\)](#), refer to the [Case user manual](#) for installation guidance.

Do not install the hub

Outdoors. This could result in a failure of the control panel.

Near the metal objects and mirrors. They can cause attenuation or shielding of the radio signal. This could result in the loss of connection between the hub and wireless Ajax devices.

In places with high levels of radio interference. This could result in the loss of connection between the hub and wireless Ajax devices or false notifications about [security system jamming](#).

Less than 1 meter away from the router and power cables. This could result in the loss of connection between the hub and wireless devices.


Less than 1 meter away from Jeweller devices. This could result in the loss of connection between the hub and these devices.

In places where the hub will have a signal strength of 1 or 0 bars with connected devices. This could result in the loss of connection between the hub and these devices.

Inside premises with temperature and humidity beyond the permissible limits. This could result in a failure of the control panel.

In places with no cellular signal or 1 bar signal strength. We do not guarantee correct operation of the device with a low cellular signal strength.

Preparing to connect devices

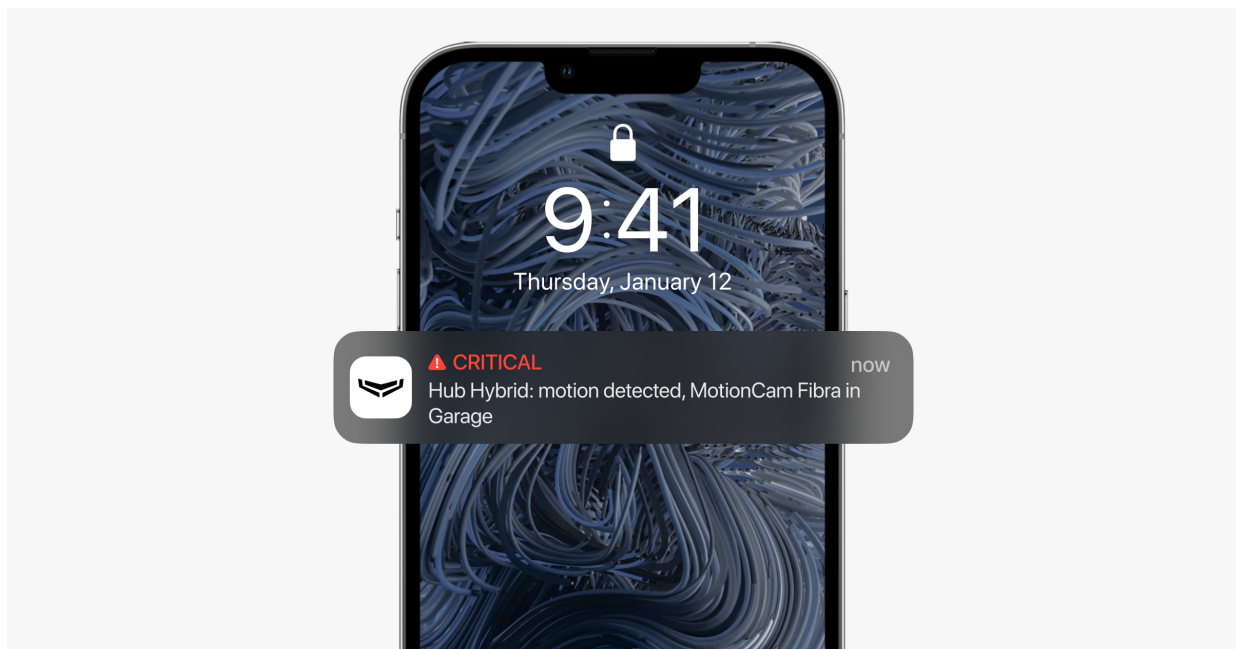

Create at least one virtual room before adding devices to the system. Rooms are needed to group devices and to increase the information content of notifications. Names of devices and rooms are displayed in the text of events and alarms of the Ajax security system.

Connection of wireless devices



The hub is incompatible with other hubs uartBridge and ocBridge Plus

To add a device to the hub, in the PRO version of the app:

1. Open the room and select **Add device**.
2. Name the device, scan or manually enter its QR code, select a group if the group mode is enabled.
3. Click **Add** – the countdown for adding a device will begin.
4. Follow the instructions in the app to connect the device.
5. Repeat steps 1-4 to add any required devices.

To pair (bind) a device to the hub, the device should be located within the hub's radio communication range — at the same secured premises.

Wired devices connection



The hub is incompatible with other [hubs](#), [uartBridge](#) and [ocBridge Plus](#)

Fibra wired communication technology allows creating segments up to 2,000 meters long. Up to 8 segments in a single system under Superior Hub Hybrid control.

Superior Hub Hybrid features 8 lines compatible with all Fibra devices, regardless of the type. Security detectors, keypads, and sirens are connected to the same line and ensure the safety of a specific area of the facility.

Design and preparation

For the system to work correctly, it is important to properly design the project and install all devices correctly. Failure to follow the basic installation rules and recommendations of the user manual may result in incorrect operation or loss of connection between the hub and installed devices.

When designing the layout scheme of the devices, consider the wiring diagram of the power cables laid on the site. Signal cables of Fibra devices must be laid at a distance of at least 50 cm from the power cables when lying parallel, and, if they intersect, it must be at a 90° angle.

In total, you can connect up to 100 Ajax devices to Superior Hub Hybrid. The ratio of wired to wireless devices within the system is of no importance. For example, you can connect 50 wired and 50 wireless devices or 99 wired and 1 wireless device.

For facilities that are under construction or renovation, cables of wired devices are laid after the main wiring of the facility. Use protective tubes to route cables of wired devices to organize and secure the wires; ties, clips, and staples can be used to secure them.

Prevent external damage to the cables whenever possible. When laying wires externally (without mounting them inside the walls), use an electric channel raceway. Raceways should be no more than half-filled with cables. Do not allow cables to sag. The raceway should be hidden from view if possible — for example, behind furniture.

We recommend laying cables inside walls, floors, and/or ceilings. This will provide greater security: the wires will not be visible, it will be impossible to accidentally damage them, and it will be impossible for an intruder to access them.

When selecting a cable, consider the length of the connection lines and the number of devices to be connected; these parameters affect the signal strength. We recommend using shielded copper cables with a high-quality insulation layer. Check the cables for bends and physical damage before installation.

When installing, observe the bend radius that the manufacturer specifies in the cable specs. Otherwise, you risk damaging or breaking the conductor. The bend radius is specified by the manufacturer in the cable specifications.

Signal strength and cable length

The Fibra signal level is determined by the number of undelivered or corrupted data packages over a certain period. The signal strength is displayed by the icon  in the **Devices**  tab:

- **Three bars** — excellent signal strength.
- **Two bars** — good signal strength.

- **One bar** – low signal strength, stable operation is not guaranteed.
- **Crossed out icon** – no signal.

The signal strength is influenced by the following factors: the number of devices connected to one line, the length and type of cable, and the proper connection of the wires to device terminals.

The maximum cable length depends on the cable type, material, and method of connecting the devices. When connected via the **Beam connection (Radial wiring)** (hub – devices – terminating resistor) using the U/UTP cat.5 (4×2×0.51) twisted pair, the wired connection length can reach up to 2,000 meters. The minimum cable length for connecting wired devices is 1 meter.

When connected via the **Ring connection method** (hub – devices – hub), the maximum cable length is 500 meters in case of using a twisted pair.



Ring topology is available with OS Malevich 2.16 and higher.


Installation and connection



Before installing the detectors and devices, make sure that you have selected the optimal location and that it meets the conditions of the user manual. Wires must be hidden from view and located in a place that is difficult for intruders to access to reduce the likelihood of sabotage. Ideally, the wires should be set into the walls, floor, and/or ceiling. Before the final installation, test the [Fibra signal strength](#)

Connect the devices to the hub using a four-wire cable. Two wires provide power to the device (+24 V and GND), and the other (A and B) are used for data exchange between connected devices and the hub. When connecting, be sure to observe the polarity and connection order of the wires.

Devices are connected to the hub using two connection topologies: **Ring** and **Beam (Radial wiring)**. The devices are connected to the same Fibra line one by one, as shown on the figure.

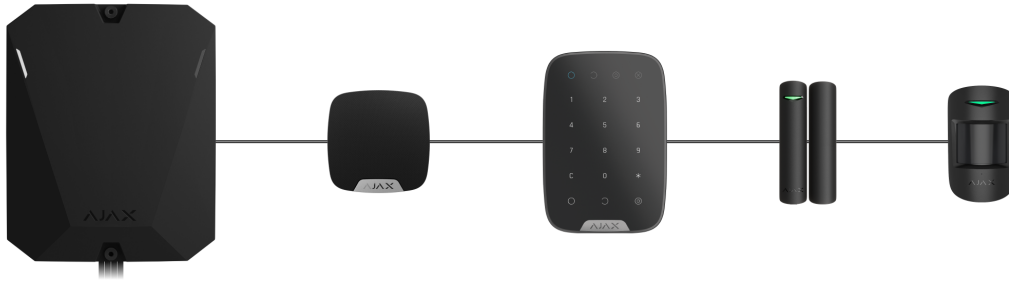

We recommend distributing wired devices evenly across all the hub's Fibra lines to increase reliability.

We recommend connecting wired devices via the **Ring connection method**. If the line is broken, the devices will still be connected to Superior Hub Hybrid via the **Beam (Radial wiring) connection** and will continue transmitting events and alarms to the hub. Notification about the line open fault will be sent to users and the security company.

When connecting via the **Ring connection method**, connect two lines per one segment and reduce the maximum length of the wired connection to 500 meters (when connected via the **Beam (Radial wiring) connection method** – to 2,000 meters).

Beam (Radial wiring)	Ring
----------------------	------

- occupies one Fibra line of the hub
- up to 8 lines with the same hub
- up to 2,000 m of wired communication for the same line
- a terminating resistor is installed at the end of the line

- occupies two Fibra lines of the hub
- up to 4 rings with the same hub
- up to 500 m of wired communication for the same ring
- no terminating resistor is installed at the end of the line




Ring topology is available with OS Malevich 2.16 and higher.

When connecting devices, do not twist the wires together; solder them. The ends of the wires that will be inserted into the siren terminals should be tinned to increase the reliability of the connection.

Follow the polarity and connection order of the wires. Securely fasten the wires to the terminals. If the device body provides fasteners for cables, secure the cable with ties.


To connect a detector or device:

1. De-energize and turn off the hub. Disconnect the backup battery.

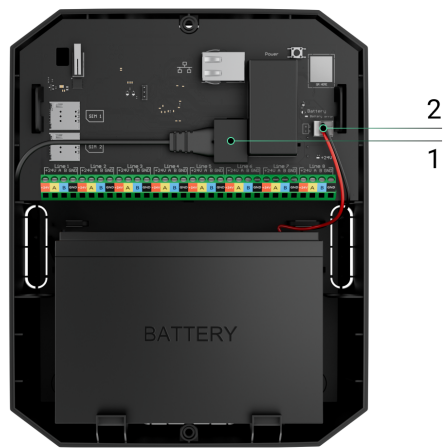

- 1 — External power supply
- 2 — Backup battery


2. Run the four-wire cables into the hub. Connect the wires to Superior Hub Hybrid line terminals:

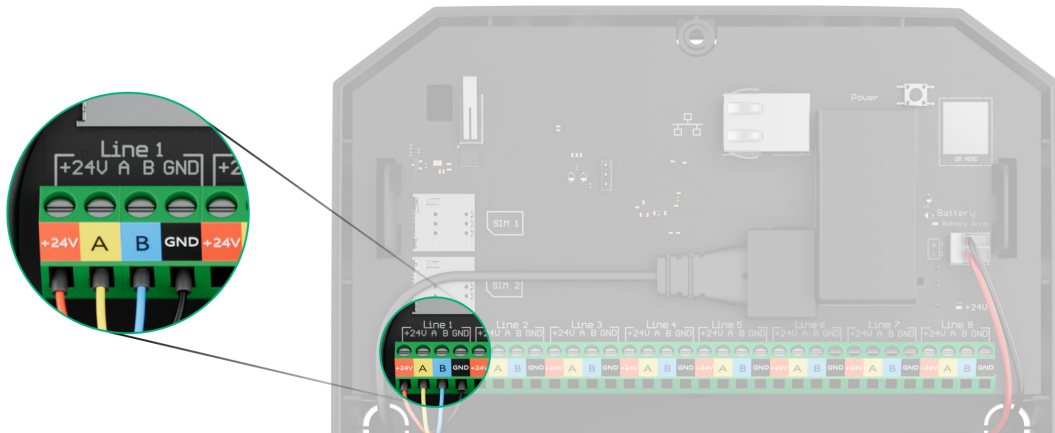

- +24V** — power supply terminal of 24 V $\overline{\text{=}}$.
- A, B** — signal terminals.
- GND** — ground.

3. Connect the other end of the four-wire cable to the terminals of the first device in the line, observing the polarity and the order of wiring. Securely fasten the cable to the terminals of the device.

4. If other devices are connected to the segment, prepare and wire the cable for the next device into the terminals.

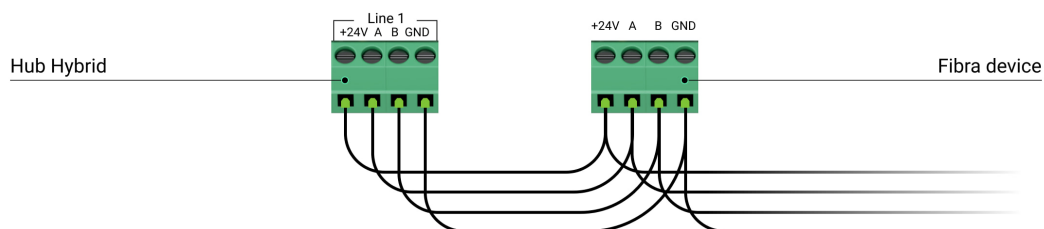


+24V – power supply terminal of 24 V_{DC}.

A, B – signal terminals.

GND – ground.

5. Connect other devices to the line, if necessary.
6. Install a 120 ohm terminating resistor for the last device in the line using the **Beam (Radial) topology**. A terminating resistor is installed between terminals A and B of the last device in the line.

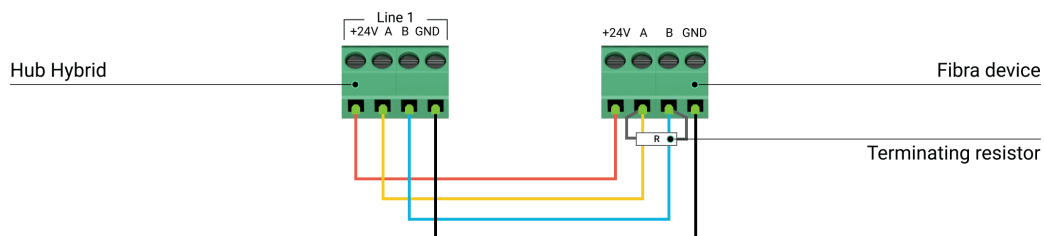

With the **Ring topology**, a terminating resistor is not needed. In this case, connect the last device in the line to the next Fibra line of the hub.



The nominal value of terminating resistors is 120 Ω. Termination resistors are included in the complete set of Superior Hub Hybrid.



Ring topology is available with OS Malevich 2.16 and higher.



More about connection methods

7. Connect power to the hub and turn it on.
8. Add devices to the system manually or using line scanning.
9. Run the Fibra Signal Strength Test for each connected device. The recommended signal strength is two or three bars. Otherwise, check the connection and integrity of the wires or relocate the system devices.

Adding wired devices

There are two ways to add wired devices: manually and using line scanning. It is useful to add a few devices manually — for example, when replacing a faulty detector with a new one. Automatic line scanning is useful when adding numerous devices.

To add a wired device manually:

1. Open the PRO version of the app.
2. Select the object to which you want to add the device.
3. Go to the **Devices**  tab and click **Add Device**.
4. Name the device, scan, or type in the QR code (available on the device body and the packaging), select a room and a group (if the group mode is enabled).
5. Click **Add**.

To add devices using line scanning:

1. Open the PRO version of the app.

2. Select the object to which you want to add the devices.
3. Go to the **Devices**  tab.
4. Click **Add Device**.
5. Click **Add All Fibra Devices**.
6. The hub will start the line scan process.

After line scanning, the PRO app will display a list of wired devices connected to the hub. The devices in the list are sorted by lines to which they are physically connected. You can find the device by entering part of the name, model, or ID in the search field.

By default, the device designation includes its name and ID. To pair a device to the hub, edit its name, assign it to a room and a group if the group mode is activated.



Scanning is also available in the **Lines** menu (Hub → Settings → Lines → Add All Fibra Devices).

For the installation engineer to name the device correctly or assign a room and a group to it, we have provided two methods for device identification: by LED indication and by alarm.

Method 1: Identify device by blinking

After line scanning, the PRO app will display a list of wired devices connected to the hub.

Click on any device in this list. After clicking, the LED indicator of the device will start blinking. After identifying the device, bind it to the hub.

To pair a device to a hub:

1. Click on the device in the list.
2. Assign a name to the device.
3. Specify a room and a group if the group mode is turned on.
4. Click **Save**.
5. The paired device will disappear from the list of devices available to be added.

Method 2: Add devices by alerts

Select the toggle **Prioritize triggered devices**.

Trigger an alarm. For example, walk in front of a motion detector, press any button on the keypad, or trigger a siren tamper.

Once triggered, the detector will move to the top of the list in the **Recently triggered devices** category. The device will stay in this category for 5 seconds, and then move back to the line category. After identifying the device, bind it to the hub.

To pair a device to a hub:

1. Click on the device in the list.
2. Assign a name to the device.
3. Specify a room and a group if the group mode is enabled.
4. Click **Save**.
5. The paired device will disappear from the list of devices available to be added.

Updating the statuses of wired devices depends on the ping period (adjusts in the Jeweller/Fibra settings).

If the hub already has the maximum number of devices added (for Superior Hub Hybrid, the default is 100), you will get an error notification when you add one.

Connected Ajax devices work with one hub only. Once added to a new hub, these devices are not removed from the list of devices of the old hub. This must be done through the Ajax PRO app.

Hub settings

The control panel settings can be changed in Ajax PRO apps. In order to change the settings:

1. Log in to the [PRO version of the app](#).
2. Select an object from the list.
3. Go to the **Devices**  menu.
4. Select a hub.
5. Go to its **Settings** by clicking on the gear icon .
6. Select a settings category and make changes. After making changes, click **Back** to save the new settings.

Name



Room



Ethernet



Cellular



Keypad access codes



Code Length Restrictions



Security Schedule



Detection Zone Test



Jeweller/Fibra



Telephony settings



Lines



Service



User guide



Transfer settings to another hub



Remove hub




Hub settings reset

Resetting the hub to the factory settings:

1. Turn on the hub if it is off.

2. Remove all users and installers from the hub.
3. Hold the power button for 30 s — the LED indicator on the hub board will start blinking red.
4. Remove the hub from your account.

Space settings

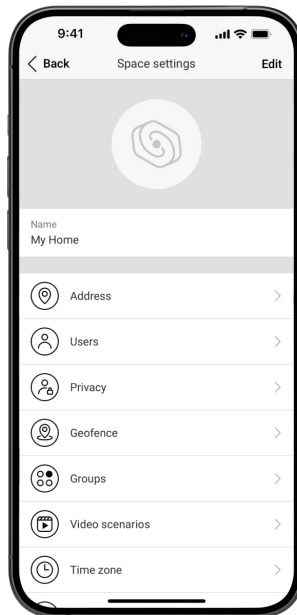

Settings can be changed in the [Ajax app](#):

1. Select the space if you have several of them or if you are using a PRO app.
2. Go to the **Control** tab.
3. Go to **Settings** by tapping the gear icon ⚙️ in the bottom right corner.
4. Set the required parameters.
5. Tap **Back** to save the new settings.



[How to configure a space](#)

Additional features

Video surveillance

Superior Hub Hybrid is compatible with [Ajax cameras and NVRs](#) and with third-party cameras that support RTSP protocol or SDK integration.



[How to connect cameras to the Ajax system](#)

You can calculate the number of cameras and NVRs that can be added to the space using the [video device calculator](#).

Scenarios

Superior Hub Hybrid allows creating 32 scenarios and minimizing the human factor impact on safety. The hub can manage the security of the entire facility or group according to a schedule; activate the smoke machine if intruders enter the room; de-energize the room and turn on emergency lighting in case of fire; shut off water in the event of a leak; control lighting devices, electric locks, roller shutters, and garage doors — when changing the security mode by pressing a button or by a detector alarm.

Scenarios can be used to reduce the number of routine actions and increase productivity. Ajax automation devices respond to changes in temperature and air quality. For example, configure the heating to turn on at low temperatures, control the supply system, humidifier, and air conditioner to maintain a comfortable climate.



[How to create and customize a scenario](#)

Photo verification

Superior Hub Hybrid supports both MotionCam and MotionCam Outdoor wireless motion detectors. When triggered, the detectors take a series of shots you can use to evaluate the unfolding of the events at the facility over time. This relieves users of unnecessary anxiety and prevents security companies from sending unnecessary patrol dispatches.

The detector activates the camera when armed and detects movement. Only users with access to the events feed, as well as authorized employees of the security company can see visual alarm verifications provided that the security system is connected to the monitoring station.

If **Photo on Demand** function is activated, the detectors can take a photo upon the command of a system user or PRO user with the appropriate rights. The taking of a photo is always registered in the hub's events feed.

The shots are protected by encryption at every stage of transmission. They are stored on the Ajax Cloud server and are not processed or analysed.



[Learn more](#)

Maintenance

Check the functioning of Superior Hub Hybrid and connected devices on a regular basis. The optimal frequency of checks is once every three months. Clean the hub casing from dust, cobwebs, and other contaminants as they emerge. Use a soft, dry cloth that is suitable for equipment care.

Do not use substances that contain alcohol, acetone, petrol, and other active solvents to clean the device.

Defined support period

We release security updates for hubs for at least two years of the warranty period.

Technical specifications



All technical specifications of Superior Hub Hybrid (2G)



All technical specifications of Superior Hub Hybrid (4G)



Compliance with standards



INCERT installation compliance



Setup in compliance with EN requirements

Warranty

Warranty for the Limited Liability Company “Ajax Systems Manufacturing” products is valid for 2 years after the purchase.

If the device does not function correctly, please contact the Ajax Technical Support first. In most cases, technical issues can be resolved remotely.



Warranty obligations



User Agreement

Contact Technical Support:

- e-mail
- Telegram

Manufactured by “AS Manufacturing” LLC

