



Read these instructions before installation and operation

BF562-3/E (24 V DC, 3 A)

INSTALLATION INSTRUCTIONS

Caged Power Supply Unit (PSU) to EN 54-4




WARNING: THIS PSU MUST BE INSTALLED AND MAINTAINED BY A SUITABLY SKILLED AND TECHNICALLY COMPETENT PERSON. THIS PSU IS A PIECE OF CLASS 1 PERMANENTLY CONNECTED EQUIPMENT AND MUST BE EARTHED.

The BF562-3/E is a Mains to regulated DC PSU providing 3 A @ 24 Vdc nominal, designed for use with fire and security systems. Combining the functions of a PSU, battery charging unit and battery monitoring unit, it is designed and intended for use in OEM equipment. It is supplied with a protective 'live parts' cover.

The system designer must assure the compatibility to all relevant standards for the PSU within the installed enclosure. For full compliance with all relevant standards and directives, the PSU must be installed inside a suitable enclosure.

Specific parts of the relevant standards are EN 54-4, EN 50131-6, EN 62368-1, EMC directive 2014/30/EU, low voltage directive 2014/35/EU and Construction Product Regulation (CPR) No. 305/2011.

Figure 1 - PSU Layout and Mains Connections (Protective Cover & Cable Cover Shown Fitted)

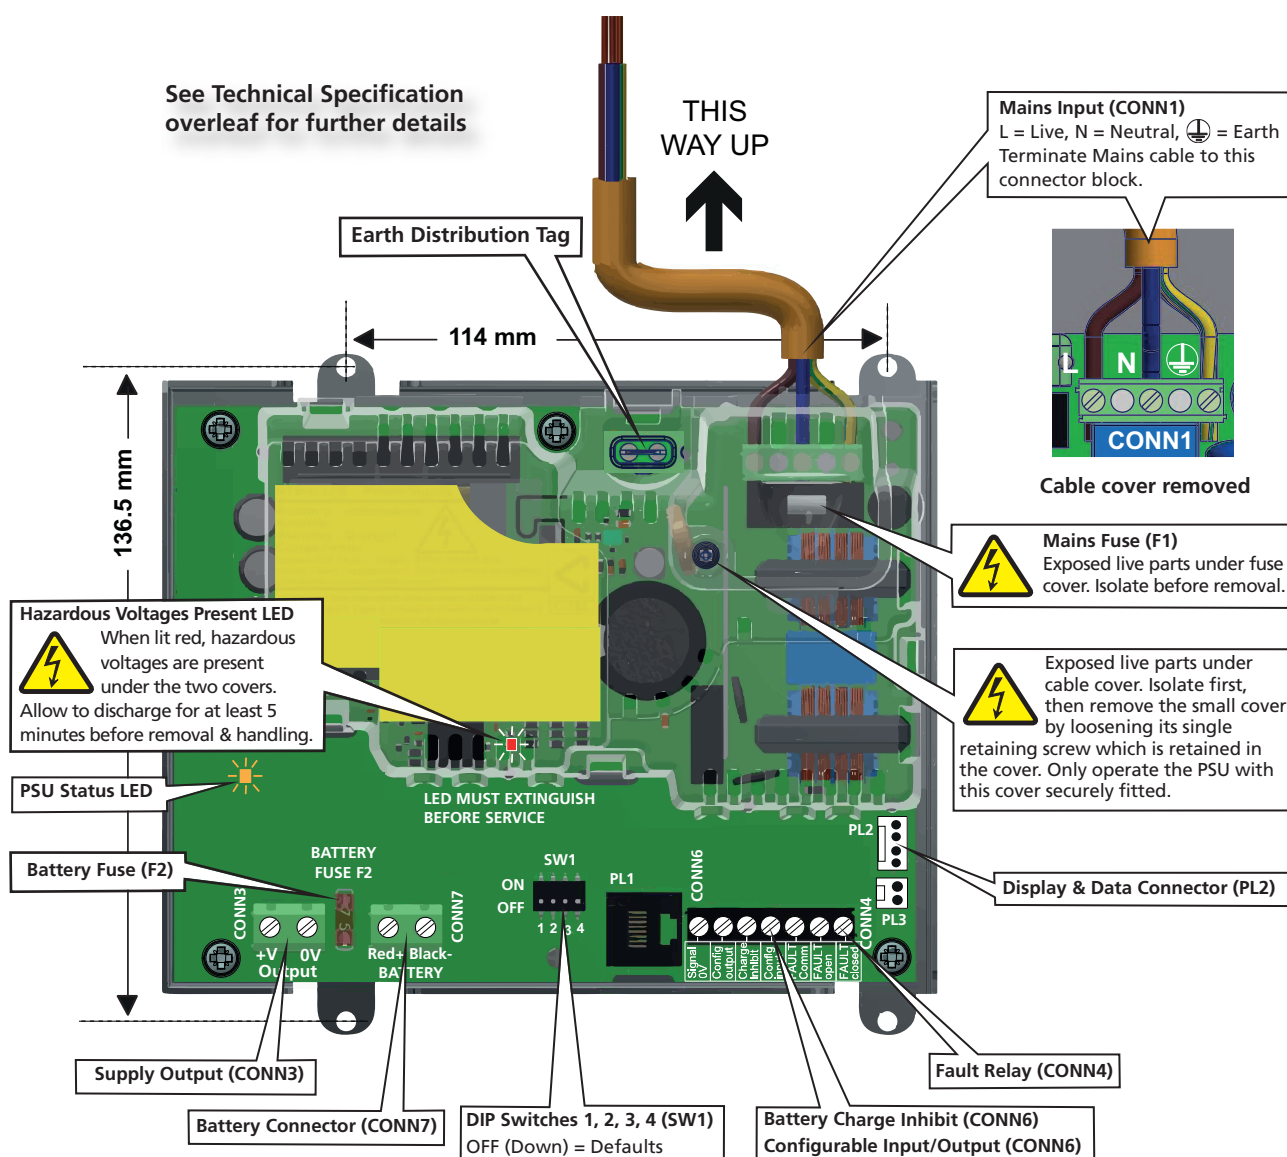

INSTALLATION

Important Note: It is the responsibility of the OEM to ensure that the final product housing and application of this power supply complies with the requirements of all applicable directives and national standards for the product. If used in the EU market, the OEM has the responsibility to affix the CE marking to the final product in accordance with EU directives.

Mounting

Using suitable screw fixings, secure the power supply into its enclosure using the four mounting holes provided.

The mounting holes are suitable for use with M5 fixing screws. Care must be taken not to damage any wiring, or components.

Connecting Mains (Note: This power supply must be earthed!)

The requirement for the Mains supply is fixed wiring, using 3-core cable (no less than 1 mm² and no greater than 2.5 mm²). Local guidelines and directives for the installation must be observed including overcurrent protection and disconnect devices.

WARNING: DO NOT CONNECT THE MAINS SUPPLY TO THE PSU UNLESS ALL COMPONENTS ARE SECURELY INSTALLED IN ITS ENCLOSURE!

Batteries



WARNING: There is a risk of explosion if incorrect battery types or sizes are used. Always dispose of used batteries in accordance with the battery manufacturer's instructions and local regulations. Batteries are heavy and can produce dangerously high currents if shorted. Take care when handling and routing battery leads to avoid damage.

Use good quality, sealed, Valve Regulated Lead Acid (VRLA) batteries 2 x 12V. **Note:** On a standard 'as-supplied' unit, DIP Switch 4 ('Battery Not Fitted') is OFF (Down) and a fault will occur on initial power-up if fully charged batteries are NOT connected.

Battery Fault Monitoring

This PSU complies with EN 54-4 and therefore must monitor battery resistance. The fault threshold is directly related to the ability of the batteries to deliver the rated current to the load. For example, batteries stored un-charged for long periods of time, during shipment and/or distribution, degrade leading to increased internal resistance. If a degraded battery is fitted, a fault will be shown by the PSU as mandated by EN 54-4.

No. of LED Flashes	PSU Status
1	Mains Failure: • Check Mains & Mains Fuse. • Fault could occur if PSU trips due to a high DC Load current. Remove the fault, back-up batteries and cycle Mains to reset.
2	Battery Voltage Low
3	Battery Voltage Critical
4	Charger Failure
5	Charger OK (Battery is either actively charging, or in float charge)
6	No Batteries Fitted (indicating DIP Switch 4 position)
7	Battery Resistance Fault (Level set by DIP Switch 2 position)
8	Output Over Voltage

TECHNICAL SPECIFICATION

POWER SUPPLY SPECIFICATION: BF562-3/E (24V DC, 3 A)			
Mains supply voltage (a.c.):		230 V ~, 50/60 Hz. Rated current: 0.8 A r.m.s.	
Maximum continuous output current (incl. charging):		3 A	
Battery charge capacity (C):		2.5 Ah to 17 Ah (battery charged to 80% of capacity in 24 hrs)	
Battery characteristics:		Final voltage: 21 V	Float charge voltage: 27.3 V ± 1% @ 20°C Battery temp. compensation: -36 mV / °K
Output power rating:	'I max a' = 2.6 A if DIP Switch 3 OFF (Down) - Not approved for EN54-4 applications.		
	'I max a' = 2 A if DIP Switch 3 ON (Up) - Approved for EN54-4 applications.		
	Taking a load current greater than 'I max a' will temporarily disable the battery charging.		
	'I max b' = 3 A, charging turned off via CONN6.		
		'I min' = 0 mA	
Maximum internal battery resistance 'Ri max':		600 mΩ if DIP Switch 2 OFF (Down) - Normal Operation. [Approved for EN54-4 applications.]	480 mΩ if DIP Switch 2 ON (Up) - Maintenance Only. [Not approved for EN54-4 applications.]
Maximum power output voltage 'V max':		30 V	
Minimum power output voltage 'V min':		20 V ± 2% with Mains On	21 V ± 2% with Mains Off
Output ripple voltage (peak-to-peak):		≤ 320 mV over the full input and output range of the PSU	
Max. battery current (mains disconnected):		'I max b' + 12 mA @ 24 V	
FUSES (compliant to IEC/EN 60127-2)			
Mains fuse (F1):		T 2 A H 230 V, 20 mm ceramic (T = Time Delay; H = High Breaking Capacity)	
Battery fuse (F2):		7.5 A MINI® automotive blade fuse	
POWER SUPPLY PCB CONNECTIONS			
Mains Input (CONN1):		Mains supply input terminals: Live, Neutral & Earth. 1 mm² to 2.5 mm² cable size.	
Supply Output (CONN3):		Output for auxiliary equipment. 1 mm² cable size, <30 m cable length (screened cable must be used).	
Battery Connector (CONN7):		Connection to the VRLA batteries. 1 mm² cable size.	
Fault Relay (CONN4):		Isolated changeover relay output, rated 1 A @ 30 Vd.c. 1 mm² cable size, <30 m cable length (screened cable must be used). CONN4 should not be used for compliance with EN 50131-6, PL2 provides serial data for all fault signals.	
Battery Charge Inhibit (CONN6):		Connect to 0V to inhibit battery charger. 1 mm² cable size.	
Config Input / Output (CONN6):		Not used	
PL2:		Display & Serial Data connector	
PL3:		External Battery Thermistor (Not Used)	
DIP Switch 1 (Default OFF):		No function	
DIP Switch 2 (Default OFF):		OFF (Down) Higher battery resistance threshold 600 mΩ; ON (Up) Lower battery resistance threshold 480 mΩ.	
DIP Switch 3 (Default OFF):		OFF (Down) Lower battery charge rate 0.4 A (2 Ah - 7 Ah); ON (Up) Higher battery charge rate 1 A (7 Ah - 17 Ah).	
DIP Switch 4 (Default OFF):		OFF (Down) Batteries fitted; ON (Up) Batteries not fitted.	
EN54-4 DIP Switch Positions:		Approved for EN54-4 applications: DIP Switch 2 OFF (Down), DIP Switch 3 ON (Up), DIP Switch 4 OFF (Down).	
INDICATORS			
2 x Power Supply PCB (LEDs):		Hazardous Voltages Present (Red LED); PSU Status (Amber LED); see PSU Status table above for further details.	
PHYSICAL			
Dimensions (H x W x D):		142 mm x 162 mm x 58 mm	Construction & Finish: Zintec 1.2 mm thick base, plastic cover
Weight:		665 g	IP Rating: Dependent on mounting enclosure
Clearance:		Create adequate ventilation to ensure power supply components do not overheat	
OPERATING CONDITIONS			
The PSU is designed for indoor use only. The PSU components are selected to operate within their specification when the environmental conditions comply with class 3k5 of the latest edition of IEC 721-3-3. Temperature range: -10°C to +40°C. Maximum humidity: 95% non condensing.			
© E&OE. No responsibility can be accepted by the manufacturer or distributors of these power supplies for any misinterpretation of this instruction, or for the compliance of the system as a whole. The manufacturers policy is one of continuous improvement and we reserve the right to make changes to product specifications at our discretion and without prior notice.			