

# **THERMAL CAMERAS SERIES**

## **ART. IPTHBCAMA05F01A**

## **IPTHBCAMA05F02A**

Please read this manual thoroughly before use and keep it for future reference

[www.comelitgroup.com](http://www.comelitgroup.com)



Via Don Arrigoni, 5 - 24020 Rovetta (BG) - Italy

# Notes on Safety

- This product is intended to be supplied by a Listed Power Unit, marked with 'Limited Power Source', 'LPS' on unit, output rated minimum 12VDC/2A or POE 48VDC/350mA or 24VAC (depending on models), no more than 2000m altitude of operation and Tma=60 Deg.C.
- Do not attempt to disassemble the camera; in order to prevent electric shock, do not remove screws or covers.
- There are no user-serviceable parts inside. Please contact the nearest service center as soon as possible if there is any failure.
- Avoid from incorrect operation, shock vibration, heavy pressing which can cause damage to product.
- Do not use corrosive detergent to clean main body of the camera. If necessary, please use soft dry cloth to wipe dirt; for hard contamination, use neutral detergent. Any cleanser for high grade furniture is applicable.
- Do not operate it in case temperature, humidity and power supply are beyond the limited stipulations.
- The thermal camera shall be used in a stable indoor environment without wind. Please ensure the monitoring field is far away from objects that could produce airflow, high temperature and reflection. Please do not install opposite to a door, air conditioner or any place in sunshine.
- Please put up a tent or build a closed environment to ensure the accuracy if outdoor installation is inevitable.
- If blackbody is used, please make sure it is installed opposite to the camera (where the camera can see it).
- Avoid backgrounds that are too crowded or bright.
- This manual is for using and managing the product. We may reserve the rights of amending the typographical errors, inconsistencies with the latest version, software upgrades and product improvements, interpretation and modification. These changes will be published in the latest version without special notification.
- All pictures, charts, images in this manual are only for description and explanation of our products. The ownerships of trademarks, logos and other intellectual properties related to Microsoft, Apple and Google belong to the above-mentioned companies.
- This manual is suitable for thermal network cameras.

# Disclaimer

- With regard to the product with internet access, the use of product shall be wholly at your own risks. Our company shall be irresponsible for abnormal operation, privacy leakage or other damages resulting from cyber-attack, hacker attack, virus inspection, or other internet security risks; however, our company will provide timely technical support if necessary.
- Surveillance laws vary from country to country. Check all laws in your local region before using this product for surveillance purposes. We shall not take the responsibility for any consequences resulting from illegal operations.

## Regulatory Information

### FCC Information

#### 1.FCC compliance

The products have been tested and found in compliance with the council FCC rules and regulations part 15 subpart B. These limits are designed to provide reasonable protection against harmful interference. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. The user will be required to correct the interference at his own expense in case the harmful interference occurs.

#### 2. FCC conditions:

Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### CE Information



The products have been manufactured to comply with the following directives.

EMC Directive 2014/30/EU

## RoHS

The products have designed and manufactured in accordance with Directive EU RoHS Directive 2011/65/EU and its amendment Directive EU 2015/863 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.



manner.

2012/19/EU (WEEE directive): The Directive on waste electrical and electronic equipment (WEEE Directive). To improve the environmental management of WEEE, the improvement of collection, treatment and recycling of electronics at the end of their life is essential. Therefore, the product marked with this symbol must be disposed of in a responsible

Directive 94/62/EC: The Directive aims at the management of packaging and packaging waste and environmental protection. The packaging and packaging waste of the product in this manual refers to must be disposed of at designated collection points for proper recycling and environmental protection.

REACH(EC1907/2006): REACH concerns the Registration, Evaluation, Authorization and Restriction of Chemicals, which aims to ensure a high level of protection of human health and the environment through better and earlier identification of the intrinsic properties of chemical substances. The product in this manual refers to conforms to the rules and regulations of REACH. For more information of REACH, please refer to DG GROWTH or ECHA websites.

# Table of Contents

|       |                                                 |    |
|-------|-------------------------------------------------|----|
| 1     | Introduction .....                              | 1  |
| 2     | Network Connection .....                        | 2  |
| 2.1   | LAN.....                                        | 2  |
| 2.1.1 | Access through Comelit Advance IP Tool.....     | 2  |
| 2.1.2 | Directly Access through Internet Explorer ..... | 4  |
| 2.2   | WAN .....                                       | 6  |
| 3     | Temperature Measurement Configuration.....      | 9  |
| 3.1   | Temperature Measurement Requirements .....      | 9  |
| 3.2   | Enable Face Detection .....                     | 11 |
| 3.3   | Temperature Measurement Settings.....           | 11 |
| 3.4   | Temperature Calibration .....                   | 13 |
| 4     | Live View .....                                 | 16 |
| 5     | Other Configurations.....                       | 19 |
| 5.1   | System Settings .....                           | 19 |
| 5.1.1 | Basic Information .....                         | 19 |
| 5.1.2 | Date and Time .....                             | 19 |
| 5.1.3 | Local Config .....                              | 20 |
| 5.1.4 | Storage.....                                    | 20 |
| 5.2   | Image Configuration .....                       | 23 |
| 5.2.1 | Display Configuration.....                      | 23 |
| 5.2.2 | Video / Audio Configuration.....                | 26 |
| 5.2.3 | OSD Configuration.....                          | 27 |
| 5.2.4 | Video Mask.....                                 | 28 |
| 5.2.5 | ROI Configuration .....                         | 29 |
| 5.3   | PTZ Configuration .....                         | 30 |
| 5.4   | Alarm Configuration.....                        | 30 |
| 5.4.1 | Motion Detection.....                           | 30 |
| 5.4.2 | Other Alarms.....                               | 32 |
| 5.4.3 | Alarm In .....                                  | 34 |
| 5.4.4 | Alarm Out .....                                 | 35 |
| 5.4.5 | Alarm Server.....                               | 36 |
| 5.4.6 | Audio Alarm .....                               | 36 |
| 5.4.7 | Light Alarm .....                               | 37 |
| 5.5   | Smart Event Configuration.....                  | 38 |
| 5.5.1 | Face Detection Settings .....                   | 38 |
| 5.5.2 | Exception Settings .....                        | 40 |
| 5.5.3 | Line Crossing Detection Settings .....          | 42 |
| 5.5.4 | Intrusion Detection Settings .....              | 44 |
| 5.5.5 | Region Entrance Detection Settings.....         | 45 |

|                                               |    |
|-----------------------------------------------|----|
| 5.5.6 Region Exiting Detection Settings ..... | 47 |
| 5.5.7 Target Counting Settings.....           | 48 |
| 5.6 Network Configuration .....               | 49 |
| 5.6.1 TCP/IP.....                             | 49 |
| 5.6.2 Port .....                              | 51 |
| 5.6.3 Server Configuration.....               | 51 |
| 5.6.4 DDNS.....                               | 51 |
| 5.6.5 RTSP.....                               | 52 |
| 5.6.6 802.1X.....                             | 53 |
| 5.6.7 UPnP.....                               | 53 |
| 5.6.8 Email .....                             | 54 |
| 5.6.9 FTP .....                               | 55 |
| 5.6.10 HTTPS .....                            | 55 |
| 5.6.12 QoS.....                               | 57 |
| 5.7 Security Configuration .....              | 57 |
| 5.7.1 User Configuration .....                | 57 |
| 5.7.2 Online User .....                       | 59 |
| 5.7.3 Block and Allow Lists .....             | 59 |
| 5.7.4 Security Management.....                | 60 |
| 5.8 Maintenance Configuration.....            | 61 |
| 5.8.1 Backup and Restore .....                | 61 |
| 5.8.2 Reboot.....                             | 61 |
| 5.8.3 Upgrade .....                           | 62 |
| 5.8.4 Operation Log.....                      | 62 |
| 6 Search .....                                | 63 |
| 6.1 Image Search.....                         | 63 |
| 6.2 Video Search .....                        | 65 |
| 6.2.1 Local Video Search.....                 | 65 |
| 6.2.2 SD Card Video Search.....               | 66 |
| 6.3 Data Record Search.....                   | 67 |
| Appendix - Troubleshooting .....              | 69 |

# 1 Introduction

Thermal Network camera series is specially designed to detect human body temperature with high accuracy in real time. This series of product supports real-time temperature measurement, face capture, smart event detection and alarm linkages. It can help you discover abnormal body temperature of people entering and exiting and other unexpected events immediately and protects you from property loss.

It can be used for preliminary temperature screening in office buildings, factories, stations, airports and other public places compared to other visible light cameras.

## Main Features

### Temperature Measurement

- Temperature measurement range: 30~42°C
- Temperature accuracy:  $\pm 0.5^{\circ}\text{C}$  (without blackbody);  $\pm 0.3^{\circ}\text{C}$  (with blackbody)
- 3 view modes: optical image and thermal image, optical image, thermal image
- Multi-target automatic temperature measurement
- Audio and light alarm linkage

### Intelligent Analytics

- Abnormal video signal detection: including scene blur detection, video blur detection, video color cast detection
- Perimeter Alert: Line crossing detection (human/motor vehicle/non-motor vehicle classification), Region intrusion/entrance/exiting detection (human/motor vehicle/non-motor vehicle classification)
- Target Counting: line crossing people/motor vehicle/non-motor vehicle counting
- Face detection: face capture, face detection
- Audio and light alarm linkage

## 2 Network Connection


Connect the IP-Cam via LAN or WAN via Internet Explorer browser.

### 2.1 LAN


In LAN, there are two ways to access IP-Cam: 1. access through Comelit Advance IP Tool; 2. directly through Internet Explorer browser.

#### 2.1.1 Access through Comelit Advance IP Tool

Network connection:

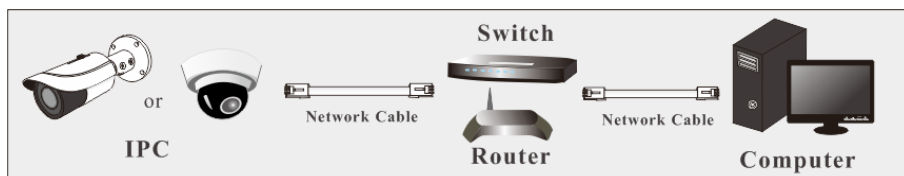

- ① Make sure the PC and IP-Cam are connected to the LAN and the Comelit Advance IP Tool is installed in the PC.
- ② Double click the comelit Advance IP Tool icon on the desktop to run the software as shown below:

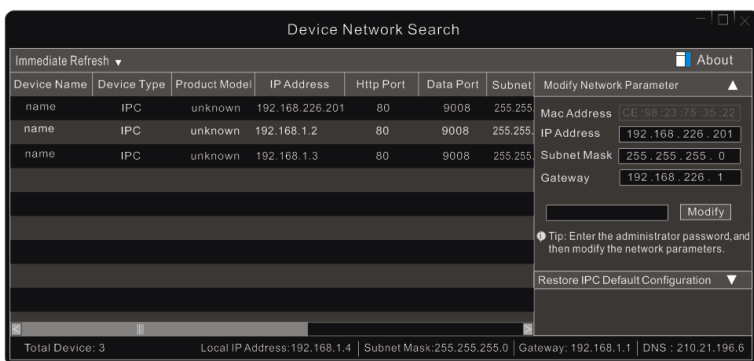

- ③ Modify the IP address. The default IP address of the camera is 192.168.1.150. Click the information of the camera listed in the above table to show the network information on the right hand. Modify the IP address and gateway of the camera and make sure that its network address is in the same local network segment as the computer's.

Modify Network Parameter

Mac Address: CE:98:23:75:35:22

IP Address: 192.168.1.201

Subnet Mask: 255.255.255.0

Gateway: 192.168.1.1

••••• [Modify]

For example, the IP address of your computer is 192.168.1.4. So the IP address of the camera shall be changed to 192.168.1.X. After modification, please enter the password of the administrator and click the “Modify” button to modify the setting.



The **default Password** of the administrator is **admin**

④ Double click the IP address and then the system will pop up IE browser to connect IP-CAM. Follow directions to download, install and run the Active X control.

Comelit

Name: admin

Password: Password

Stream Type: 1920x1080 25fps

Language: English


☐ Remember me

Login

Enter the username and password in the login window to log in.



The **default Username** is **admin**; the **default Password** is **admin**.

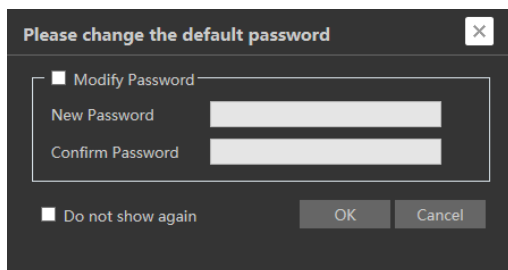

The system will pop up the above-mentioned textbox to ask you to change the default password. It is strongly recommended to change the default password for account security. If “Do not show again” is checked, the textbox will not appear next time.

## 2.1.2 Directly Access through Internet Explorer

The **default** network settings are shown below:

IP address: **192.168.1.150**


Subnet Mask: **255.255.255.0**

Gateway: **192.168.1.1**


HTTP: **80**

Data port: **9008**


Use the above default settings when logging in the camera for the first time. Connect the camera to the computer directly through network cable.

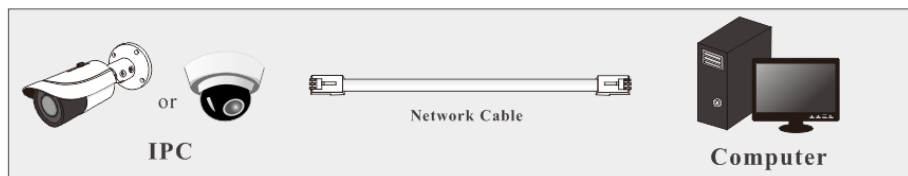

① Manually set the IP address of the PC and the network segment should be as the same as the default settings of the IP camera. Open the network and share center. Click “Local Area Connection” to pop up the following window.

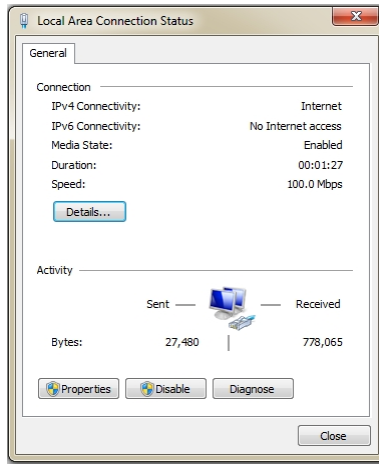


Select “Properties” and then select internet protocol (for example: IPv4). Next, click the “Properties” button to set the network of the PC.

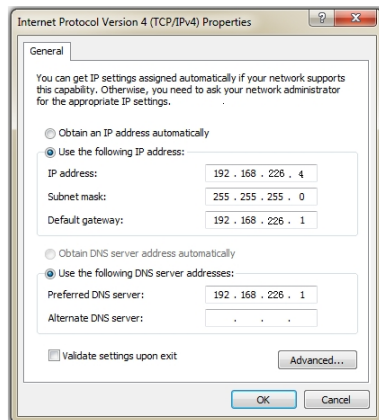

- ② Open the Internet Explorer browser, enter the default address of the IPC and confirm.
- ③ Follow directions to download and install the Active X control.
- ④ Enter the default username and password in the login window and then enter to view.

## 2.2 WAN

### ➤ Access through the router or virtual server

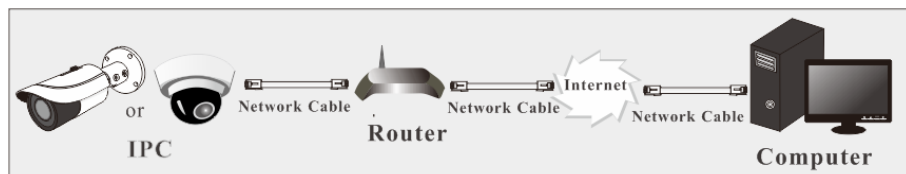

- ① Make sure the camera is connected to the local network and then log in the camera via LAN and go to Config→Network→Port menu to set the port number.

|            |                                   |
|------------|-----------------------------------|
| HTTP Port  | <input type="text" value="80"/>   |
| HTTPS Port | <input type="text" value="443"/>  |
| Data Port  | <input type="text" value="9008"/> |
| RTSP Port  | <input type="text" value="554"/>  |

#### Port Setup

- ② Go to Config →Network→TCP/IP menu to modify the IP address.

|                                                                     |                                            |                                     |                               |
|---------------------------------------------------------------------|--------------------------------------------|-------------------------------------|-------------------------------|
| IPv4                                                                | IPv6                                       | PPPoE Config                        | IP Change Notification Config |
| <input checked="" type="radio"/> Obtain an IP address automatically |                                            |                                     |                               |
| <input type="radio"/> Use the following IP address                  |                                            |                                     |                               |
| IP Address                                                          | <input type="text" value="192.168.1.150"/> | <input type="button" value="Test"/> |                               |
| Subnet Mask                                                         | <input type="text" value="255.255.255.0"/> |                                     |                               |
| Gateway                                                             | <input type="text" value="192.168.1.1"/>   |                                     |                               |
| Preferred DNS Server                                                | <input type="text" value="8.8.8.8"/>       |                                     |                               |
| Alternate DNS Server                                                | <input type="text" value="8.8.8.8"/>       |                                     |                               |

#### IP Setup

- ③ Go to the router's management interface through Internet Explorer browser to forward the IP address and port of the camera in the "Virtual Server".


| Port Range  |       |          |          |               |                                     |
|-------------|-------|----------|----------|---------------|-------------------------------------|
| Application | Start | End      | Protocol | IP Address    | Enable                              |
| 1           | 9007  | to 9008  | Both     | 192.168.1.201 | <input checked="" type="checkbox"/> |
| 2           | 80    | to 81    | Both     | 192.168.1.201 | <input checked="" type="checkbox"/> |
| 3           | 10000 | to 10001 | Both     | 192.168.1.166 | <input type="checkbox"/>            |
| 4           | 21000 | to 21001 | Both     | 192.168.1.166 | <input type="checkbox"/>            |

### Router Setup

④ Open the Internet Explorer browser and enter its WAN IP and http port to access. (for example, if the http port is changed to 81, please enter “192.198.1.201:81” in the address bar of web browser to access).

### ➤ Access through PPPoE dial-up

Network connection

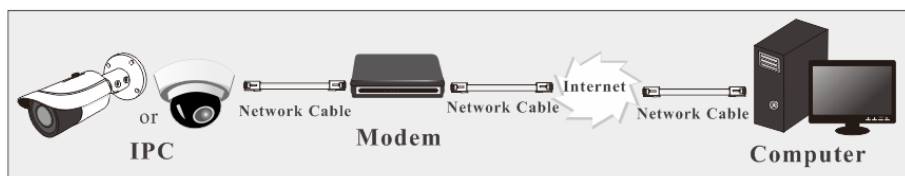

Access the camera through PPPoE auto dial-up. The setup steps are as follow:


- ① Go to Config→Network→Port menu to set the port number.
- ② Go to Config →Network→TCP/IP→PPPoE Config menu. Enable PPPoE and then enter the user name and password from your internet service provider.

|                                            |                                        |                     |                               |
|--------------------------------------------|----------------------------------------|---------------------|-------------------------------|
| IPv4                                       | IPv6                                   | <b>PPPoE Config</b> | IP Change Notification Config |
| <input checked="" type="checkbox"/> Enable |                                        |                     |                               |
| User Name                                  | <input type="text" value="xxxxxxxx"/>  |                     |                               |
| Password                                   | <input type="password" value="•••••"/> |                     |                               |
| <input type="button" value="Save"/>        |                                        |                     |                               |

- ③ Go to Config →Network→DDNS menu. Before configuring the DDNS, please apply for a domain name first. Please refer to DDNS configuration for detail information.
- ④ Open the Internet Explorer browser and enter the domain name and http port to access.

## ➤ Access through static IP

### Network connection

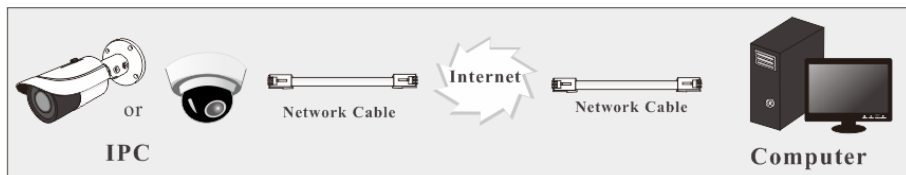

The setup steps are as follow:


- ① Go to Config→Network→Port menu to set the port number.
- ② Go to Config →Network→TCP/IP menu to set the IP address. Check “Use the following IP address” and then enter the static IP address and other parameters.
- ③ Open the Internet Explorer browser and enter its WAN IP and http port to access.

# 3 Temperature Measurement Configuration

## 3.1 Temperature Measurement Requirements

- Thermal camera is temperature-sensitive. When it is used for temperature measuring, in order to ensure the accuracy, the recommended ambient temperature is 10~35°C, and the infrared light should be turned off during the temperature measurement.
- Thermal camera can be adopted independently, but together with blackbody the accuracy will be better.
- Thermal camera should be used in a stable indoor environment without wind. Please make sure the monitoring field is far away from any objects that could produce airflow, high temperature, reflection.
- Don't install the thermal camera opposite to a door, air conditioner or any place in sunshine.
- It is recommended to use 12VDC power supply at high temperature to reduce power consumption.
- For aisle monitoring, the best temperature measurement distance is 2~4m, recommended distance should be 2~6m.
- Set up a one-way temperature measuring zone and make sure the camera can clearly see the human face.
- After turning on, the thermal camera needs to wait 20~30 minutes to be steady.

## INDOOR

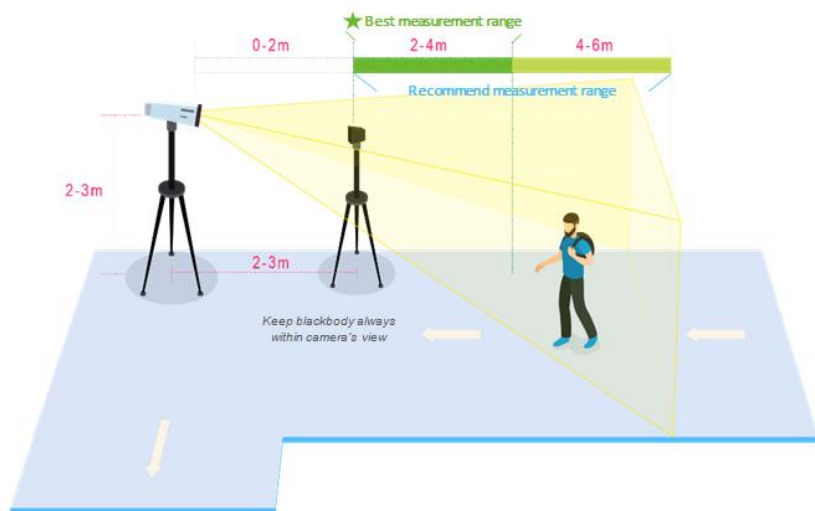

The temperature measurement setting steps are as follows.

Enable Face Detection



Temperature Measurement Settings



Temperature

Calibration Settings

## 3.2 Enable Face Detection

Click Config→Event→Face Detection to go to the face detection interface as shown below.

Detection ConfigAreaAdvancedSchedule

StateWorking

☒ Enable

☐ Save Source Information

☐ Save Face Information

Alarm Holding Time20 Seconds

Trigger Alarm Out

☐ Alarm Out

☐ Trigger Audio Alarm

☐ Trigger Light Alarm

☐ Trigger SD Snap

☐ Trigger SD Recording

☐ Trigger Email

☐ Trigger FTP

Save

Check “Enable” to enable face detection.

Then click “Save” to save the setting. For the detail settings of face detection, please refer to [\*\*5.4.1 Face Detection Settings\*\*](#).

## 3.3 Temperature Measurement Settings

Click Config→Temperature→Temperature Measurement to go to the following interface.

Detection Config
Schedule

☒ Enable

Temperature Switch
°C

☒ High Temperature Alarm
39.5
(30-45)°C

☐ Low Temperature Alarm
34.0
(30-45)°C

Alarm Holding Time
3 Seconds

Trigger Alarm Out

☐ Alarm Out

☒ Trigger Audio Alarm

☐ Trigger Light Alarm

☐ Trigger Snap

☐ Trigger SD Recording

☐ Trigger Email

☐ Trigger FTP

Save

1. Enable “Temperature Measurement”, select Celsius or Fahrenheit temperature as needed and then set the high temperature threshold and the low temperature threshold. When the body temperature measured is higher or lower than the set value, it will trigger alarms.

2. Set the alarm holding time.

3. Set the alarm trigger options.

**Trigger Alarm Out:** If enabled, the alarm output device will be triggered when detecting abnormal temperature.

**Trigger Audio Alarm:** If enabled, the warning voice will be triggered when the temperature exceeds the set value. (Please set the warning voice first. See [Audio Alarm](#) for details)

**Trigger Light Alarm:** If enabled, the light of the camera will flash when the temperature exceeds the set value. (Please set the light flashing time and frequency first. See [Light Alarm](#) for details)

**Trigger SD Snap:** If enabled, the system will capture images on detecting abnormal temperature alarm and save the images on an micro-SD card.

**Trigger SD Recording:** If selected, video will be recorded on an micro-SD card on detecting abnormal temperature alarm.

**Trigger Email:** If “Trigger Email” and “Attach Picture” are checked (email address must be set first in the Email configuration interface), the captured pictures and triggered event will be sent into those addresses.

**Trigger FTP:** If “Trigger FTP” is checked, the captured pictures will be sent into FTP

- server address. Please refer to FTP configuration chapter for more details.
4. Click “Save” to save the settings.
5. Set the schedule of temperature measurement.

Detection Config

Schedule

Week Schedule

0

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

Sun.

00:00-24:00

Manual Input

0

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

Mon.

00:00-24:00

Manual Input

0

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

Tue.

00:00-24:00

Manual Input

0

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

Wed.

00:00-24:00

Manual Input

0

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

Thu.

00:00-24:00

Manual Input

0

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

Fri.

00:00-24:00

Manual Input

0

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

Sat.

00:00-24:00

Manual Input

Holiday Schedule

Date

05-02

Add

Delete

0

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

00:00-24:00

Manual Input

Save

Weekly schedule

Set the alarm time from Monday to Sunday for a single week. Each day is divided in one hour increments. Green means scheduled. Blank means unscheduled.

“Add”: Add the schedule for a special day. Drag the mouse to set the time on the timeline.

“Erase”: Delete the schedule. Drag the mouse to erase the time on the timeline.

Manual Input: Click it for a specific day to enter specific start and end times. This adds more granularities (minutes).


Day schedule

Set the alarm time for alarm a special day, such as a holiday.

**Note: Holiday schedule takes priority over weekly schedule.**

3.4 Temperature Calibration

Click Config→Temperature→Temp Calibration to go to the following interface.

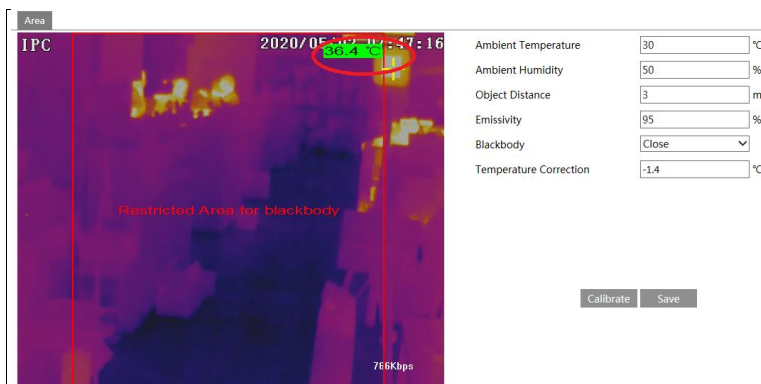

Set the ambient temperature and humidity according to the actual scene. In temperature measurement mode, the recommended ambient temperature should be 10~35°C (airless) and the humidity should be less than 95%.

**Object Distance:** The actual distance between the camera and human.

**Emissivity:** For human skin, this value is normally set as 95%

### Without Blackbody

**Blackbody:** select "Close".

**Temperature Correction:** the range is from -30~30°C.

**Temperature Correction Value = Thermometer Measurement Temperature - Thermal Measurement Temperature**

After calibrating the temperature and saving the settings, it will take about 10 minutes to make the temperature module of the camera stable. Therefore, please measure the body temperature after 10 minutes.

### With Blackbody

Blackbody: select "Open". The interface is shown as below.



There is a red box in the thermal image window. The blackbody image shall not appear in this area for accuracy measurement. If the blackbody image appears in this area, please move the blackbody and make it display in the above window, but outside the red box.

**Blackbody Temperature:** It is recommended to be set at 35°C.  
Blackbody Temperature Settings:



Turn on the blackbody and then press “Up” or “Down” to increase or decrease the temperature value.

It will take about 20~30 minutes for the blackbody to be steady.

Click the blackbody image in the temperature calibration interface and then click “Save” to calibrate the temperature automatically.


***Temperature Correction Value = Blackbody Temperature-Thermal Measurement Temperature***

After you save the settings, it will take about 5 minutes to make the temperature module of the camera stable. Therefore, please measure the body temperature after 5 minutes.

**Note:** Blackbody is not for outdoor use. If the blackbody is used with the camera, it shall be installed 2 or 3 meters away from the camera. It cannot be blocked. During operation, do not move the camera and blackbody and make sure the blackbody is in a fixed and proper place in the camera image.

## 4 Live View

After configuring temperature measurement and face detection, the temperature and face detection result can be viewed on the screen.

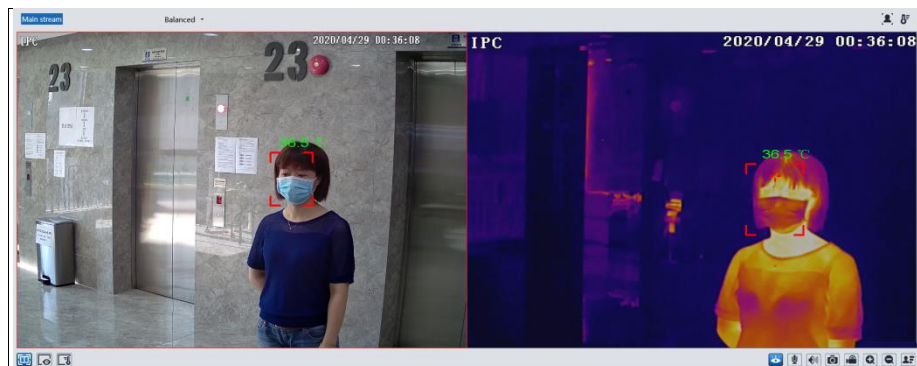

The following table is the instructions of the icons on the live view interface.

| Icon | Description                                                     | Icon | Description                 |
|------|-----------------------------------------------------------------|------|-----------------------------|
|      | Visible light image and thermal image display                   |      | Face detection indicator    |
|      | Visible light image display                                     |      | SD card recording indicator |
|      | Thermal image display                                           |      | Color abnormal indicator    |
|      | Start/stop live view                                            |      | Abnormal clarity indicator  |
|      | Start/stop two-way audio                                        |      | Scene change indicator      |
|      | Enable/disable audio                                            |      | Sensor alarm indicator      |
|      | Snapshot                                                        |      | Motion alarm indicator      |
|      | Start/stop local recording                                      |      | Line crossing indicator     |
|      | Zoom in                                                         |      | Region entrance indicator   |
|      | Zoom out                                                        |      | Region exiting indicator    |
|      | Face Detection                                                  |      | Intrusion indicator         |
|      | PTZ control (only available for the model with RS485 interface) |      |                             |

Those smart alarm indicators will flash only when the camera supports those functions and the corresponding events are enabled.

The camera can be installed in a compatible external PTZ enclosure through RS485. Click the PTZ icon to reveal the PTZ control panel (this function is only available for the model with RS485 interface).


The descriptions of the control panel are as follows:

| Icon                                                                                | Description               | Icon                                                                                | Description                |
|-------------------------------------------------------------------------------------|---------------------------|-------------------------------------------------------------------------------------|----------------------------|
|    | Move upper left direction |    | Move upper right direction |
|    | Move up                   |    | Stop movement              |
|    | Move left                 |    | Move right                 |
|    | Move lower left direction |    | Move lower right direction |
|    | Move down                 |    | Speed adjustment           |
|    | Zoom out                  |    | Zoom in                    |
|    | Focus -                   |    | Focus +                    |
|    | Iris -                    |    | Iris +                     |
|    | Auto scan                 |    | Wiper                      |
|   | Light                     |   | Radom scan                 |
|  | Group scan                |  | Preset                     |

Select preset and click  to call the preset. Select and set the preset and then click  to save the position of the preset. Select the set preset and click  to delete it.

➤ **Face Detection View**

Click  to view the captured face picture.

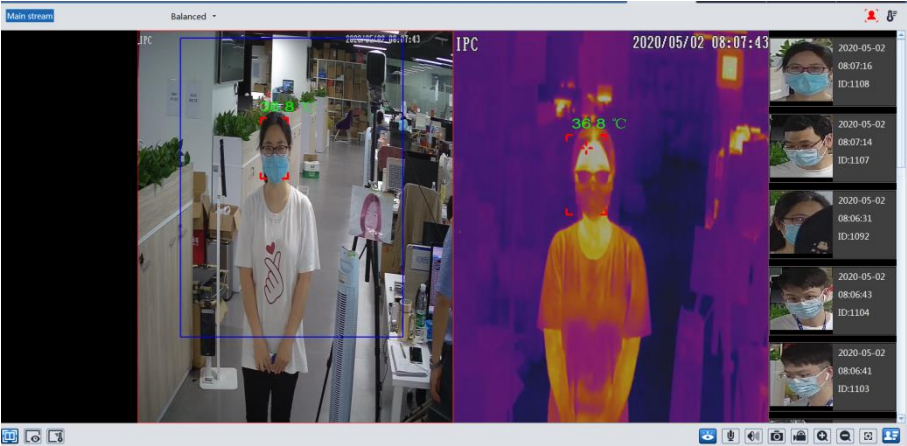

# 5 Other Configurations

In the client, choose “Config” to go to the configuration interface.

**Note:** Wherever applicable, click the “Save” button to save the settings.

## 5.1 System Settings

### 5.1.1 Basic Information

In the “Basic Information” interface, the system information of the device is listed.

|                          |                          |
|--------------------------|--------------------------|
| Device Name              | 123                      |
| Product Model            | xxx                      |
| Brand                    | xxx                      |
| Software Version         | 5.0.1.0(6770)T build 563 |
| Software Build Date      | 2020-05-02               |
| Kernel Version           | 20200405                 |
| Hardware Version         | 1.4-1425222              |
| Onvif Version            | 19.06                    |
| Video Structured Version | 1.1.7                    |
| Face Detection Version   | 1.1.33                   |
| OCX Version              | 2.1.0.4                  |
| MAC                      | 00:18:ae:00:87:a9        |
| Device ID                | I87A9009N1FE             |

### 5.1.2 Date and Time

Go to Config→System→Date and Time. Please refer to the following interface.

Zone

Date and Time

Zone

GMT (Dublin, Lisbon, London, Reykjavik)

☒ DST

☒ Auto DST

☐ Manual DST

Start Time

January

First

Sunday

00

Hour

End Time

February

First

Monday

00

Hour

Time Offset

120 Minutes

Save

Select the time zone and DST as required.  
Click the “Date and Time” tab to set the time mode.

Zone

Date and Time

Time Mode:

☐ Synchronize with NTP server

NTP server:

time.windows.com

Update period:

1440

Minutes

☐ Synchronize with computer time

Date

2018-01-08

Time

14:58:21

☒ Set manually

Date

2018-01-09

Time

15:03:28

### 5.1.3 Local Config

Go to Config→System→Local Config to set up the storage path of captured pictures and recorded videos on the local PC. There is also an option to enable or disable the bitrate display in the recorded files.

Save snapshots to

C:\Program Files\NetIPCamera

Browse

Save recording files to

C:\Program Files\NetIPCamera

Browse

Audio Recording

☐ Open
☒ Close

Bitrate Overlay

☐ Open
☒ Close

Local Smart Snapshot Storage

☐ Open
☒ Close

Save

Additionally, the local smart snapshot storage can be enabled/disable here.

### 5.1.4 Storage

Go to Config→System→Storage to go to the interface as shown below.

| Management                                                                    | Record | Snapshot | USB disk |
|-------------------------------------------------------------------------------|--------|----------|----------|
| Total picture capacity                                                        | 766 MB |          |          |
| Picture remaining space                                                       | 766 MB |          |          |
| Total recording capacity                                                      | 0 MB   |          |          |
| Record remaining space                                                        | 0 MB   |          |          |
| State                                                                         | Normal |          |          |
| Snapshot Quota                                                                | 10 %   |          |          |
| Video Quota                                                                   | 90 %   |          |          |
| Changes in the quota ratio need to be formatted before they become effective. |        |          |          |
| <input type="button" value="Eject"/> <input type="button" value="Format"/>    |        |          |          |

## ● SD Card Management

Click the “Format” button to format the micro-SD card. All data will be erased by clicking this button.

Click the “Eject” button to stop writing data to micro-SD card. Then the micro-SD card can be removed safely.

**Snapshot Quota:** Set the capacity proportion of captured pictures on the micro-SD card.

**Video Quota:** Set the capacity proportion of record files on the micro-SD card.

## ● Schedule Recording Settings

1. Go to Config→System→Storage→Record to go to the interface as shown below.

| Management                                                 | Record        | Snapshot              |
|------------------------------------------------------------|---------------|-----------------------|
| <b>Record Parameters</b>                                   |               |                       |
| Record Stream                                              | Main          | ▼                     |
| Pre Record Time                                            | No Pre Record | ▼ ( H264,H265,MJPEG ) |
| Cycle Write                                                | Yes           | ▼                     |
| <b>Timing</b>                                              |               |                       |
| <input checked="" type="checkbox"/> Enable Schedule Record |               |                       |

2. Set record stream, pre-record time, cycle writing.

**Pre Record Time:** Set the time to record before the actual recording begins.

3. Set schedule recording. Check “Enable Schedule Record” and set the schedule.

○ Erase ● Add

**Week Schedule**

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

Sun.

Manual Input

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

Mon.

Manual Input

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

Tue.

Manual Input

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

Wed.

Manual Input

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

Thu.

Manual Input

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

Fri.

Manual Input

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

Sat.

Manual Input

**Holiday Schedule**

Date

07-12

Add

Delete

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

Manual Input

## Weekly schedule

Set the alarm time from Monday to Sunday for a single week. Each day is divided in one hour increments. Green means scheduled. Blank means unscheduled.

“Add”: Add the schedule for a special day. Drag the mouse to set the time on the timeline.

“Erase”: Delete the schedule. Drag the mouse to erase the time on the timeline.

Manual Input: Click it for a specific day to enter specific start and end times. This adds more granularities (minutes).

## Day schedule

Set the alarm time for alarm a special day, such as a holiday.

**Note: Holiday schedule takes priority over weekly schedule.**

## ● Snapshot Settings

Go to Config→System→Storage→Snapshot to go to the interface as shown below.

| Management                                                 | Record  | Snapshot |
|------------------------------------------------------------|---------|----------|
| <b>Snapshot Parameters</b>                                 |         |          |
| Image Format                                               | JPEG    |          |
| Resolution                                                 | 704x576 |          |
| Image Quality                                              | Low     |          |
| <b>Event Trigger</b>                                       |         |          |
| Snapshot Interval                                          | 1       | Second   |
| Snapshot Quantity                                          | 5       |          |
| <b>Timing</b>                                              |         |          |
| <input checked="" type="checkbox"/> Enable Timing Snapshot |         |          |
| Snapshot Interval                                          | 5       | Second   |

Set the format, resolution and quality of the image saved on the micro-SD card and the snapshot interval and quantity and the timing snapshot here.

**Snapshot Quantity:** The number you set here is the maximum quantity of snapshots. The actual quantity of snapshots may be less than this number. Supposing the occurrence time of an alarm event is less than the time of capturing pictures, the actual quantity of snapshots is less than the set quantity of snapshots.

**Timing Snapshot:** Enable timing snapshot first and then set the snapshot interval and schedule. The setup steps of schedule are the same as the schedule recording (See [Schedule Recording](#)).

## 5.2 Image Configuration

### 5.2.1 Display Configuration

Go to Image→Display Settings interface as shown below. The image's brightness, contrast, hue and saturation and so on for common, day and night mode can be set up separately. The image effect can be quickly seen by switching the configuration file.

Camera Parameters
Schedule



Config File Common

|                  |                                                                   |                 |
|------------------|-------------------------------------------------------------------|-----------------|
| Brightness       | <div><div></div></div>                                            | <span>25</span> |
| Contrast         | <div><div></div></div>                                            | <span>50</span> |
| Hue              | <div><div></div></div>                                            | <span>50</span> |
| Saturation       | <div><div></div></div>                                            | <span>50</span> |
| Sharpness        | <input type="checkbox"/> <div><div></div></div>                   | <span>50</span> |
| Noise Reduction  | <input type="checkbox"/> <div><div></div></div>                   | <span>30</span> |
| Defog            | <input type="checkbox"/> <div><div></div></div>                   | <span>50</span> |
| BLC              | <span>Off</span>                                                  |                 |
| Antiflicker      | <span>Off</span>                                                  |                 |
| Smart IR         | <span>Off</span>                                                  |                 |
| White Balance    | <span>Auto</span>                                                 |                 |
| Frequency        | <span>50HZ</span>                                                 |                 |
| Day/Night Mode   | <span>Day</span>                                                  |                 |
| Infra-red Mode   | <span>Auto</span>                                                 |                 |
| Exposure Mode    | <span>Auto</span>                                                 |                 |
| Gain Mode        | <span>Auto</span>                                                 |                 |
| Gain Limit       | <div><div></div></div>                                            | <span>50</span> |
| Corridor Pattern | <span>0</span>                                                    |                 |
| Image Mirror     | <input type="radio"/> Open <input checked="" type="radio"/> Close |                 |
| Image Flip       | <input type="radio"/> Open <input checked="" type="radio"/> Close |                 |

Default
Revoke

**Brightness:** Set the brightness level of the camera's image.

**Contrast:** Set the color difference between the brightest and darkest parts.

**Hue:** Set the total color degree of the image.

**Saturation:** Set the degree of color purity. The purer the color, the brighter the image is.

**Sharpness:** Set the resolution level of the image plane and the sharpness level of the image edge.

**Noise Reduction:** Decrease the noise and make the image more thorough. Increasing the value will make the noise reduction effect better but it will reduce the image resolution.

**Defog:** Activating this function and setting an appropriate value as needed in foggy, dusty, smoggy or rainy environment to get clear images.

**Backlight Compensation (BLC):**

- Off: disables the backlight compensation function. It is the default mode.
- HWDR: WDR can adjust the camera to provide a better image when there are both very bright and very dark areas simultaneously in the field of the view by lowering the brightness of the bright area and increasing the brightness of the dark area. Recording will be stopped for a few seconds while the mode is changing from non-WDR to WDR mode.
- HLC: lowers the brightness of the entire image by suppressing the brightness of

the image's bright area and reducing the size of the halo area.

- **BLC:** If enabled, the auto exposure will activate according to the scene so that the object of the image in the darkest area will be seen clearly.

**Antiflicker:**

- **Off:** disables the anti-flicker function. This is used mostly in outdoor installations.
- **50Hz:** reduces flicker in 50Hz lighting conditions.
- **60Hz:** reduces flicker in 60Hz lighting conditions.

**Smart IR:** Choose “ON” or “OFF”. This function can effectively avoid image overexposure and underexposure by controlling the brightness of the IR lights according to the actual conditions to make the image more realistic. Please enable it as needed.

**White Balance:** Adjust the color temperature according to the environment automatically.

**Frequency:** 50Hz and 60Hz can be optional.

**Day/Night Mode:** Choose “Auto”, “Day”, “Night” or “Timing”.

**Exposure Mode:** Choose “Auto” or “Manual”. If manual is chosen, the digital shutter speed can be adjusted.

**Gain Mode:** Choose “Auto” or “Manual”. If “Auto” is selected, the gain value will be automatically adjusted according to the actual situation. If “Manual” is selected, the gain value shall be set manually. The higher the value is, the brighter the image is.

**Corridor Pattern:** Corridor viewing modes can be used for situations such as long hallways. 0, 90, 180 and 270 are available. The default value is 0. The video resolution should be 1080P or below if this function is used.

**Image Mirror:** Turn the current video image horizontally.

**Image Flip:** Turn the current video image vertically.

Schedule Settings of Image Parameters:

Click the “Schedule” tab as shown below.

|                   |           |
|-------------------|-----------|
| Camera Parameters | Schedule  |
| Schedule          | Full Time |
| Config File       | Common    |

Set full time schedule for common, day, night mode and specified time schedule for day and night. Choose “Timing” in the drop-down box of schedule as shown below.

Schedule: Timing

Time Range: 0:00 4:00 8:00 12:00 16:00 20:00 24:00

Day Night

Save

Drag the cursor “” icons to set the time of day and night. Blue means day time and blank means night time. If the current mode of camera parameters is set to schedule, the image configuration mode will automatically switch between day and night according to the schedule.

## 5.2.2 Video / Audio Configuration

Go to Image→Video/Audio interface as shown below. In this interface, set the resolution, frame rate, bitrate type, video quality and so on subject to the actual network condition.

| Index | Stream Name  | Resolution | Frame Rate | Bitrate Type | Bitrate(Kbps) | Video Quality | I Frame | Video | Profile      |
|-------|--------------|------------|------------|--------------|---------------|---------------|---------|-------|--------------|
| 1     | Main stream  | 1280x720   | 25         | CBR          | 1536          | Medium        | 100     | H264  | High Profile |
| 2     | Sub stream   | 704x576    | 25         | CBR          | 768           | Highest       | 100     | MJPEG | High Profile |
| 3     | Third stream | 352x288    | 25         | CBR          | 512           | Higher        | 100     | MJPEG | High Profile |

Send Snapshot: Sub stream Size: (704x576)

☐ Video encode slice split

☐ Watermark ( H264 , H265 ) Watermark content:

Save

Three video streams and one thermal stream can be adjustable.

**Resolution:** The size of image.

**Frame rate:** The higher the frame rate, the video is smoother.

**Bitrate type:** CBR and VBR are optional. Bitrate is related to image quality. CBR means that no matter how much change is seen in the video scene, the compression bitrate will be kept constant. VBR means that the compression bitrate will be adjusted according to scene changes. For example, for scenes that do not have much movement, the bitrate will be kept at a lower value. This can help optimize the network bandwidth usage.

**Bitrate:** it can be adjusted when the mode is set to CBR. The higher the bitrate, the better the image quality will be.

**Video Quality:** It can be adjusted when the mode is set to VBR. The higher the image quality, the more bitrate will be required.

**I Frame interval:** It determines how many frames are allowed between a “group of pictures”. When a new scene begins in a video, until that scene ends, the entire group of frames (or pictures) can be considered as a group of pictures. If there is not much

movement in the scene, setting the value higher than the frame rate is fine, potentially resulting in less bandwidth usage. However, if the value is set too high, and there is a high frequency of movement in the video, there is a risk of frame skipping.

**Video Compression:** MJPEG, H264+, H264, H265, H265+ can be optional. If H.265/H.265+ is chosen, make sure the client system is able to decode H.265/H.265+.

**Profile:** For H.264. Baseline, main and high profiles are selectable.

**Send Snapshot:** How many snapshots to generate for an event.

**Video encode slice split:** If this function is enabled, smooth image can be gotten even though using the low-performance PC.

**Watermark:** When playing back the local recorded video in the search interface, the watermark can be displayed. To enable it, check the watermark box and enter the watermark text.

Click the “Audio” tab to go to the interface as shown below.

The screenshot shows a web interface for audio settings. At the top, there are two tabs: 'Video' and 'Audio', with 'Audio' being the active tab. Below the tabs, there is a section with a checked checkbox labeled 'Enable'. Underneath, there are four rows, each with a label and a dropdown menu: 'Audio Encoding' (set to G711A), 'Audio Type' (set to MIC), 'Audio Output' (set to Talkback), and 'Speaker' (set to Warning). At the bottom right of the form is a 'Save' button.

Check “Enable”.

**Audio Encoding:** G711A and G711U are selectable.

**Audio Type:** LIN/MIC can be selected.

**Audio Output:** Talkback or Warning can be optional. If “Talkback” is selected, the external audio output device will be used to output sound for two-way talk. If “Warning” is selected, the external audio output device will be used to output the pre-defined audio alarm.

**Speaker:** Talkback or Warning can be optional. If “Talkback” is selected, the built-in speaker will be used to output sound for two-way talk. If “Warning” is selected, the built-in speaker will be used to output the pre-defined audio alarm.

**Mic In volume:** set the volume of the microphone externally connected

### 5.2.3 OSD Configuration

Go to Image→OSD interface as shown below.


Set Date format, Device name, OSD content and picture overlap here. After enabling the corresponding display and entering the content, drag them to change their position. Then click the “Save” button to save the settings.

Picture Overlay Settings:

Check “OSD Content1”, choose “Picture Overlay” and click “Browse” to select the overlap picture. Then click “Upload” to upload the overlap picture. The pixel of the image shall not exceed 200\*200, or it cannot be uploaded.


## 5.2.4 Video Mask

Go to Image→Video Mask interface as shown below. A maximum of 4 zones can be set up.

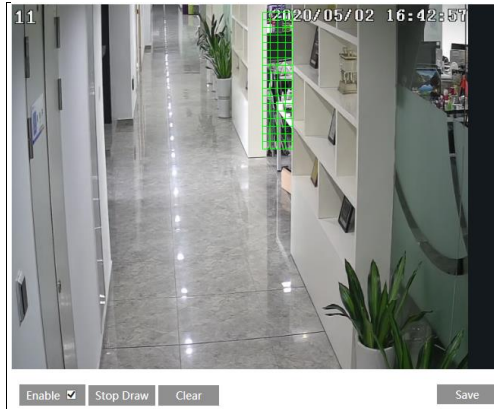

To set up video mask:

1. Enable video mask.
2. Click the “Draw Area” button and then drag the mouse to draw the video mask area.
3. Click the “Save” button to save the settings.
4. Return to the live to verify that the area have been drawn as shown as blocked out in the image.

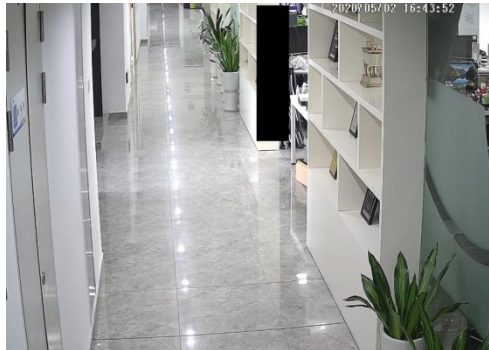

To erase the video mask:

Click the “Clear” button to delete the current video mask area.

## 5.2.5 ROI Configuration

Go to Image→ROI Config interface as shown below. An area in the image can be set as a region of interest. This area will have a higher bitrate than the rest of the image, resulting in better image quality for the identified area.



1. Check “Enable” and then click the “Draw Area” button.
2. Drag the mouse to set the ROI area.
3. Set the level.
4. Click the “Save” button to save the settings.

## 5.3 PTZ Configuration

**This function is only available for the models with RS485 interface. It can be used with a compatible external PTZ enclosure.** Go to PTZ→Protocol interface as shown below.

|           |          |
|-----------|----------|
| Protocol  | PELCOD ▼ |
| Address   | 1        |
| Baud-Rate | 2400 ▼   |
| Save      |          |

Set the protocol, address and baud rate according to the PTZ.

## 5.4 Alarm Configuration

### 5.4.1 Motion Detection

Go to Alarm→Motion Detection to set motion detection alarm.

Alarm ConfigArea and SensitivitySchedule

☒ Enable

Alarm Holding Time20 Seconds

Trigger Alarm Out

☐ Alarm Out

☒ Trigger Audio Alarm

☐ Trigger SD Snap

☐ Trigger SD Recording

☐ Trigger Email

☐ Trigger FTP

Save

1. Check “Enable” check box to activate motion based alarms. If unchecked, the camera will not send out any signals to trigger motion-based recording to the NVR or Comelit Advance VMS, even if there is motion in the video.

**Alarm Out:** If selected, this would trigger an external relay output that is connected to the camera on detecting a motion based alarm.

**Trigger Audio Alarm:** If selected, the warning voice will be uttered on detecting a motion based alarm (please set the warning voice first. See [Audio Alarm](#) for details).


**Trigger SD Snap:** If selected, the system will capture images on motion detection and save the images on the micro-SD card.

**Trigger SD Recording:** If selected, video will be recorded on the micro-SD card on motion detection.

**Trigger Email:** If “Trigger Email” and “Attach Picture” are checked (email address must be set first in the Email configuration interface), the captured pictures and triggered event will be sent into those addresses.

**Trigger FTP:** If “Trigger FTP” is checked, the captured pictures will be sent into FTP server address. Please refer to FTP configuration chapter for more details.

2. Set motion detection area and sensitivity. Click the “Area and Sensitivity” tab to go to the interface as shown below.

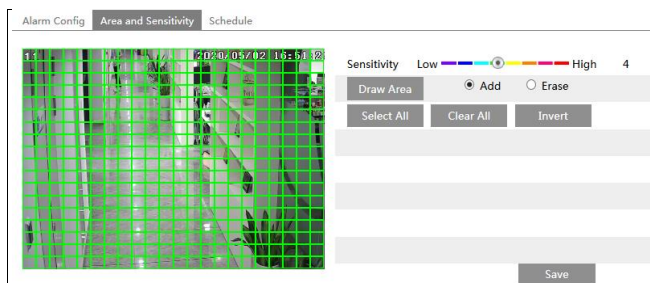

Move the “Sensitivity” scroll bar to set the sensitivity. Higher sensitivity value means that motion will be triggered more easily.

Select “Add” and click “Draw”. Drag the mouse to draw the motion detection area; Select “Erase” and drag the mouse to clear motion detection area.


After that, click the “Save” to save the settings.

3. Set the schedule for motion detection. The schedule setup steps of the motion detection are the same as the schedule recording setup (See [Schedule Recording](#)).

## 5.4.2 Other Alarms

### ● Micro-SD Card Full

1. Go to Config→Alarm→Anomaly→SD Card Full.

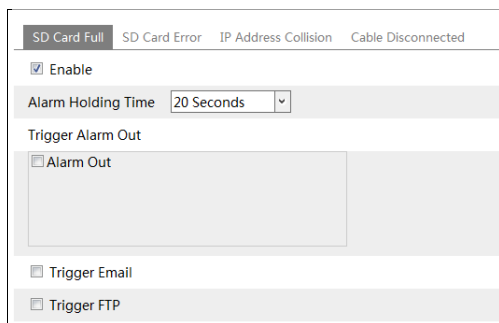

2. Click “Enable” and set the alarm holding time.

3. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to motion detection chapter for details.

### ● Micro-SD Card Error

When there are some errors in writing micro-SD card, the corresponding alarms will be triggered.

1. Go to Config→Alarm→Anomaly→SD Card Error as shown below.

SD Card Full
SD Card Error
IP Address Collision
Cable Disconnected

☒ Enable

Alarm Holding Time
20 Seconds

Trigger Alarm Out

☐ Alarm Out

☐ Trigger Email

☐ Trigger FTP

- Click “Enable” and set the alarm holding time.
- Set alarm trigger options. Trigger alarm out, Email and FTP. The setup steps are the same as motion detection. Please refer to [motion detection](#) chapter for details.

### ● IP Address Conflict

- Go to Config→Alarm→Anomaly→IP Address Collision as shown below.

SD Card Full
SD Card Error
IP Address Collision
Cable Disconnected

☒ Enable

Alarm Holding Time
20 Seconds

Trigger Alarm Out

☐ Alarm Out

- Click “Enable alarm” and set the alarm holding time.
- Trigger alarm out. When the IP address of the camera is in conflict with the IP address of other devices, the system will trigger the alarm out.

### ● Cable Disconnection

- Go to Config→Alarm→Anomaly→Cable Disconnected as shown below.

SD Card Full
SD Card Error
IP Address Collision
Cable Disconnected

☒ Enable

Alarm Holding Time
20 Seconds

Trigger Alarm Out

☐ Alarm Out

2. Click “Enable” and set the alarm holding time.
3. Trigger alarm out. When the camera is disconnected, the system will trigger the alarm out.

### 5.4.3 Alarm In

To set sensor alarm (alarm in):

Go to Config→Alarm→Alarm In interface as shown below.

Alarm Config Schedule

☒ Enable

Alarm Type NO

Alarm Holding Time 20 Seconds

Sensor Name

Trigger Alarm Out

☒ Alarm Out

☐ Trigger Audio Alarm

☐ Trigger Light Alarm

☐ Trigger SD Snap

☐ Trigger SD Recording

☐ Trigger Email

☐ Trigger FTP

Save

1. Click “Enable” and set the alarm type, alarm holding time and sensor name.
2. Set alarm trigger options.

**Alarm Out:** If selected, this would trigger an external relay output that is connected to the camera when the sensor alarm is triggered.

**Trigger Audio Alarm:** If selected, the warning voice will be uttered when the sensor alarm is triggered. (Please set the warning voice first. See [Audio Alarm](#) for details).

**Trigger Light Alarm:** If selected, the light of the camera will flash when the sensor alarm is triggered. (Please set the light flashing time and frequency first. See [Light Alarm](#) for details).

**Trigger SD Snap:** If selected, the system will capture images when the sensor alarm is triggered and save the images on the micro-SD card.

**Trigger SD Recording:** If selected, video will be recorded on the micro-SD card when the sensor alarm is triggered.

**Trigger Email:** If “Trigger Email” and “Attach Picture” are checked (email address

must be set first in the Email configuration interface), the captured pictures and triggered event will be sent into those addresses.

**Trigger FTP:** If “Trigger FTP” is checked, the captured pictures will be sent into FTP server address. Please refer to FTP configuration chapter for more details.

3. Click “Save” button to save the settings.

4. Set the schedule of the sensor alarm. The setup steps of the schedule are the same as the schedule recording setup. (See [Schedule Recording](#)).

### 5.4.4 Alarm Out

Go to Config→Alarm→Alarm Out.

Alarm Out Mode

Alarm Linkage

Alarm Out Name

alarmOut1

Alarm Holding Time

20 Seconds

Alarm Type

NC

Save

**Alarm Out Mode:** Alarm linkage, manual operation, day/night switch linkage and timing are optional.

**Alarm Linkage:** Having selected this mode, select alarm out name, alarm holding time at the “Alarm Holding Time” pull down list box and alarm type.

**Manual Operation:** Having selected this mode, select the alarm type and click “Open” to trigger the alarm out immediately; click “Close” to stop alarm.

Alarm Out Mode

Manual Operation

Alarm Type

NC

Manual Operation

Open

Close

Save

**Day/Night Switch Linkage:** Having selected this mode, select the alarm type and then choose to open or close alarm out when the camera switches to day mode or night mode.

|                |                            |
|----------------|----------------------------|
| Alarm Out Mode | Day/night switch linkage ▼ |
| Alarm Type     | NC ▼                       |
| Day            | Close ▼                    |
| Night          | Close ▼                    |

**Timing:** Select the alarm type. Then click “Add” and drag the mouse on the timeline to set the schedule of alarm out; click “Erase” and drag the mouse on the timeline to erase the set time schedule. After this schedule is saved, the alarm out will be triggered in the specified time.

|                |          |
|----------------|----------|
| Alarm Out Mode | Timing ▼ |
| Alarm Type     | NC ▼     |

☐ Erase   ☒ Add

Time Range
 

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

[Manual Input](#)

## 5.4.5 Alarm Server

Go to Alarm→Alarm Server interface as shown below.

Set the server address, port, heartbeat and heartbeat interval. When an alarm occurs, the camera will transfer the alarm event to the alarm server. If an alarm server is not needed, there is no need to configure this section.

|                    |                                        |
|--------------------|----------------------------------------|
| Server Address     | <input type="text"/>                   |
| Port               | <input type="text" value="0"/>         |
| Heartbeat          | Disable ▼                              |
| Heartbeat interval | <input type="text" value="30"/> Second |

## 5.4.6 Audio Alarm

Go to Alarm→Audio Alarm interface as shown below.

| Voice Configuration               |                                                       |
|-----------------------------------|-------------------------------------------------------|
| Language                          | English ▼                                             |
| Voice Content                     | Abnormal Temperature ▼                                |
| Warning Times                     | <input type="text" value="1"/> times                  |
| Volume                            | <input type="range"/> <input type="text" value="73"/> |
| <input type="button" value="OK"/> |                                                       |

① Select the language. If you want to customize the voice content, you can choose “Customize”. Click “Browse” to choose the audio file you want to upload and then enter the audio name. Finally, click “Upload” to upload the audio file. Note that the format of the audio file must meet the requirement (see Tips), or it will not be uploaded. After you upload the audio file, you can select the audio name from the audio list and click “Listen” to listen to it. Click “Delete” to delete the audio.

The screenshot shows a web interface for voice configuration and audio upload. It is divided into two main sections: "Voice Configuration" and "Upload Audio".

**Voice Configuration:**

- Language:** A dropdown menu currently set to "Customize".
- Voice Content:** A dropdown menu currently set to "test".
- Warning Times:** A text input field containing the number "5", followed by the unit "times".
- Volume:** A slider control with a circular knob, a numerical display showing "40", and a speaker icon.

**Upload Audio:**

- Upload Path:** A text input field with a "Browse" button to its right.
- Audio Name:** A text input field with an "Upload" button to its right.
- Tips:** A line of text stating: "audio format (WAV, 8000Hz, monophonic, 16bit , less than 200K)".
- Audio List:** A section containing a dropdown menu set to "test", a "Listen" button, and a "Delete" button.
- OK:** A large button at the bottom center of the interface.

② Select the voice content and then set the warning times and volume as needed. Warning times: it ranges from 1 to 50.

③ Click “OK” to save the settings.

### 5.4.7 Light Alarm

Go to Alarm→Light Alarm interface as shown below.

Set the flashing time and frequency of the light.

The screenshot shows a configuration window for the light alarm. It contains two rows of settings:

- Flashing Time:** A text input field containing the number "20", followed by the unit "Second".
- Flashing Frequency:** A dropdown menu currently set to "Low".
- OK:** A button at the bottom right of the configuration area.

**Flashing time:** the flashing time ranges from 1 second to 60 seconds.

**Flashing Frequency:** three options- low, middle and high.

## 5.5 Smart Event Configuration

### 5.5.1 Face Detection Settings

Face detection function is to detect the face appearing in the surveillance scene. Alarms will be triggered when a face is detected.

The setting steps are as follows:

1. Go to Config→Event→Face Detection as shown below.

The screenshot shows the 'Face Detection Settings' configuration page. At the top, there are four tabs: 'Detection Config' (selected), 'Area', 'Advanced', and 'Schedule'. The 'State' is set to 'Working'. Below this, there are several settings: 'Enable' is checked, 'Save Source Information' is unchecked, 'Save Face Information' is unchecked, 'Alarm Holding Time' is set to '20 Seconds', and 'Trigger Alarm Out' is unchecked. There are also checkboxes for 'Trigger Audio Alarm', 'Trigger Light Alarm', 'Trigger SD Snap', 'Trigger SD Recording', 'Trigger Email', and 'Trigger FTP'. A 'Save' button is located at the bottom right.

| Tab              | State   | Enable                              | Save Source Information  | Save Face Information    | Alarm Holding Time | Trigger Alarm Out        | Trigger Audio Alarm      | Trigger Light Alarm      | Trigger SD Snap          | Trigger SD Recording     | Trigger Email            | Trigger FTP              |
|------------------|---------|-------------------------------------|--------------------------|--------------------------|--------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| Detection Config | Working | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 20 Seconds         | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |


2. Enable the face detection function.

**Save Source Information:** if checked, the whole picture will be saved to the micro-SD card when detecting a face.

**Save Face Information:** if checked, the captured face picture will be saved to the micro-SD card when detecting a face.


**Note:** To save images to the local PC, please enable the local smart snapshot storage first (Config→System→Local Config). To save images to the micro-SD card, please install a micro-SD card first.

3. Set alarm holding time and alarm trigger options. The setup steps are the same as alarm in (sensor alarm) detection. Please refer to [Alarm IN](#) chapter for details.
4. Set alarm detection area.

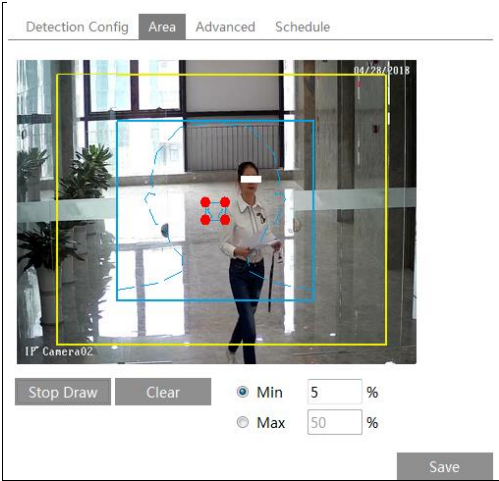

Click “Draw Area” and drag the border lines of the rectangle to modify its size. Move the rectangle to change its position. Click “Stop Draw” to stop drawing the area. Click “Clear” to clear the area. Then set the detectable face size by defining the maximum value and the minimum value (The default size range of a single face image occupies from 3% to 50% of the entire image).

5. Advanced settings. Choose the snapshot interval and number as needed to avoid capturing multiple similar pictures in a very short period of time.

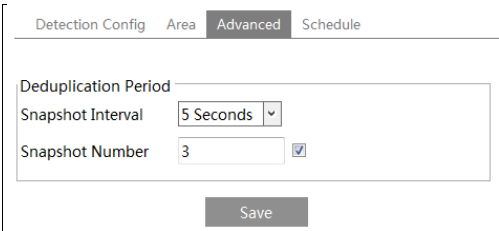

**Snapshot Interval:** If 5 seconds is selected, the camera will capture the same target once every 5 seconds during its continuous tracking period.


**Snapshot Number:** If the snapshot number is enabled and set (eg. 3), the camera will capture the same target once every 5 seconds and it will capture this target 3 times at

most during its continuous tracking period. If the snapshot number is disabled, the camera will capture the same target once every 5 seconds until the target disappears in the detected area.

6. Set the schedule of the face detection. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).

### ✖ Configuration requirements of camera and surrounding area

1. Cameras must be installed in the area with stable and adequate light sources.
2. The installation height ranges from 2m to 3.5m, adjustable according to the focal-length of different lenses and object distances.
3. The depression angle of the camera shall be less than or equal to  $15^{\circ}$ .

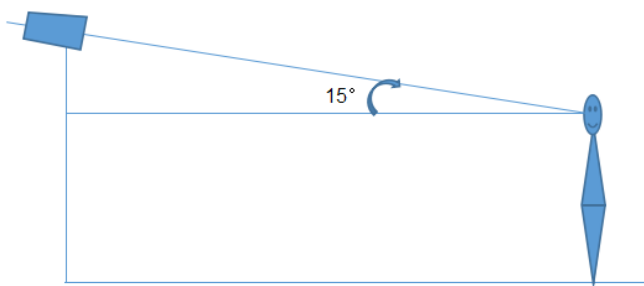

4. The object distance depends on the focal-length of the lens mounted in the camera.
5. To ensure the accuracy of face detection, the captured faces are only allowed to deviate less than  $30^{\circ}$  leftward or rightward or  $20^{\circ}$  upward or downward.

## 5.5.2 Exception Settings

This function can detect changes in the surveillance environment affected by the external factors.

To set exception detection:

Go to Config→Event→Exception interface as shown below.

Detection Config
Sensitivity

☒ Scene change detection

☒ Video blur detection

☐ Enable video color cast detection

Alarm Holding Time
20 Seconds

Trigger Alarm Out

☐ Alarm Out

☐ Trigger Audio Alarm

☐ Trigger SD Snap

☐ Trigger SD Recording

☐ Trigger Email

☐ Trigger FTP

Save

1. Enable the applicable detection that's desired.

**Scene Change Detection:** Alarms will be triggered if the scene of the monitor video has changed.

**Video Blur Detection:** Alarms will be triggered if the video becomes blurry.

**Enable Video Color Cast Detection:** Alarms will be triggered if the video becomes obscured.

2. Set the alarm holding time and alarm trigger options. The setup steps are the same as motion detection. Please refer to motion detection chapter for details.

3. Click "Save" button to save the settings.

4. Set the sensitivity of the exception detection. Click "Sensitivity" tab to go to the interface as shown below.

Detection Configuration
Sensitivity

Sensitivity

28

Save

Drag the slider to set the sensitivity value or directly enter the sensitivity value in the textbox. Click "Save" button to save the settings.

**The sensitivity value of Scene Change Detection:** The higher the value is, the

more sensitive the system responds to the amplitude of the scene change.

**The sensitivity value of Video Blur Detection:** The higher the value is, the more sensitive the system responds to the blurriness of the image.

**The sensitivity value of Video Color Cast Detection:** The higher the value is, the more sensitive the system responds to the obscuring of the image.

✖ **The requirements of camera and surrounding area**

- 1. Auto-focusing function should not been enabled for exception detection.
- 2. Do not enable exception detection when light changes greatly in the scene.

**5.5.3 Line Crossing Detection Settings**

**Line Crossing:** Alarms will be triggered if the target crosses the pre-defined alarm lines.

Go to Config→Event→Line Crossing interface as shown below.

Detection ConfigAreaSchedule

☒ Enable

☐ Save Panoramic Picture

☐ Save Target Cutout

Detection Target

☒ HumanSensitivity50

☒ Motor VehicleSensitivity50

☒ Motorcycle/BicycleSensitivity50

Alarm Holding Time20 Seconds

Trigger Alarm Out

☐ Alarm Out

☐ Trigger Audio Alarm

☐ Trigger Light Alarm

☐ Trigger SD Snap

☐ Trigger SD Recording

☐ Trigger Email

☐ Trigger FTP

- 1. Enable line crossing detection and select the snapshot type and the detection target.

**Save Panoramic Picture:** If it is enabled, the detected panoramic pictures will be captured and saved to the micro-SD card when there are targets detected.

**Save Target Cutout:** If it is enabled, the detected target cutout pictures will be captured and saved to the micro-SD card when there are targets detected.

**Note:** To save snapshots to the local PC, please enable “Local Smart Snapshot Storage” in the local config interface first. To save snapshots to the micro-SD card, please install a micro-SD card first.

**Detection Target:**


**Human:** Select it and then alarms will be triggered if someone crosses the pre-defined alarm lines.

**Motor Vehicle:** Select it and then alarms will be triggered if a vehicle with four or more wheels (eg. a car, bus or truck) crosses the pre-defined alarm lines.

**Motorcycle/Bicycle:** Select it and then alarms will be triggered if a non-motor vehicle (eg. a motorcycle or bicycle) crosses the pre-defined alarm lines.

These three types of objects can be selected simultaneously. Please select the detection objects as needed. If no object/target is selected, alarms will not be triggered even if line crossing detection is enabled.

- 2. Set the alarm holding time.
- 3. Set alarm trigger options. The setup steps are the same as alarm in (sensor alarm) detection. Please refer to [Alarm IN](#) chapter for details.
- 4. Click “Save” button to save the settings.
- 5. Set the alarm line of the line crossing alarm. Click the “Area” tab to go to the interface as shown below.

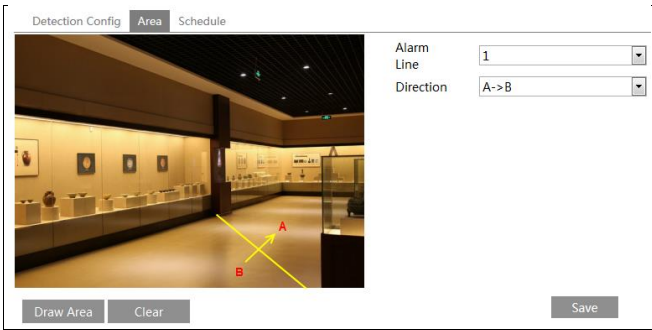

Set the alarm line number and direction. Up to 4 lines can be added. Multiple lines cannot be added simultaneously.

**Direction:** A<->B, A->B and A<-B optional. This indicates the direction of the intruder/vehicle crosses over the alarm line.

**A<->B:** The alarm will be triggered when the intruder/vehicle crosses over the alarm line from B to A or from A to B.

**A->B:** The alarm will be triggered when the intruder/vehicle crosses over the alarm line from A to B.

**A<-B:** The alarm will be triggered when the intruder/vehicle crosses over the alarm line from B to A.

Click the “Draw Area” button and then drag the mouse to draw a line in the image. Click the “Stop Draw” button to stop drawing. Click the “Clear” button to delete the lines. Click the “Save” button to save the settings.

- 6. Set the schedule of the line crossing alarm. The setup steps of the schedule are the same as the schedule recording setup (See [Schedule Recording](#)).

## ※ Configuration of camera and surrounding area

1. Auto-focusing function should not be enabled for line crossing detection.
2. Avoid the scenes with many trees or the scenes with various light changes (like many flashing headlights). The ambient brightness of the scenes shouldn't be too low.
3. Cameras should be mounted at a height of 2.8 meters or above.
4. Keep the mounting angle of the camera at about 45°.
5. The detected objects should not be less than 1% of the entire image and the largest sizes of the detected objects should not be more than 1/8 of the entire image.
6. Make sure cameras can view objects for at least 2 seconds in the detected area for accurate detection.
7. Adequate light and clear scenery are crucial for line crossing detection.

### 5.5.4 Intrusion Detection Settings

**Intrusion:** Alarms will be triggered if the target intrudes and loiters in the pre-defined areas.

Go to Config→Event→Intrusion interface as shown below.

Detection Config Area Schedule

☒ Enable

☐ Save Panoramic Picture

☐ Save Target Cutout

Detection Target

☒ Human Sensitivity 50

☒ Motor Vehicle Sensitivity 50

☒ Motorcycle/Bicycle Sensitivity 50

Alarm Holding Time 20 Seconds

Trigger Alarm Out

☐ Alarm Out

☐ Trigger Audio Alarm

☐ Trigger Light Alarm

☐ Trigger SD Snap

☐ Trigger SD Recording


☐ Trigger Email

☐ Trigger FTP

Save

1. Enable intrusion detection and select the snapshot type and the detection target.
2. Set the alarm holding time.
3. Set alarm trigger options. The setup steps are the same as alarm in (sensor alarm) detection. Please refer to [Alarm IN](#) chapter for details.
4. Click the “Save” button to save the settings.

5. Set the alarm area of the intrusion detection. Click the “Area” tab to go to the interface as shown below.

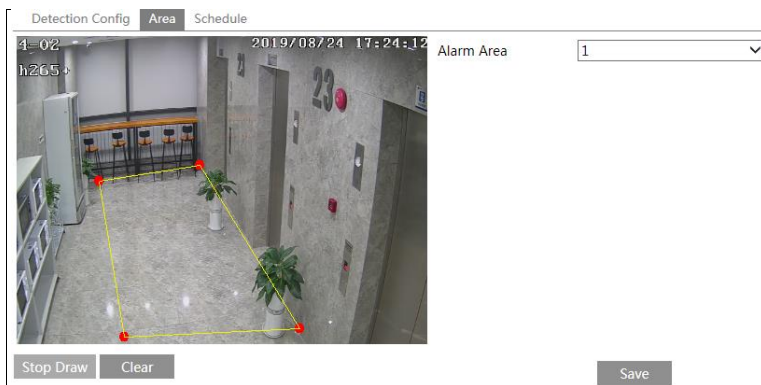

Set the alarm area number on the right side. Up to 4 alarm areas can be added. Click the “Draw Area” button and then click around the area where you want to set as the alarm area in the image on the left side (the alarm area should be a closed area). Click the “Stop Draw” button to stop drawing. Click the “Clear” button to delete the alarm area. Click the “Save” button to save the settings.

6. Set the schedule of the intrusion detection. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).

### ※ Configuration requirements of camera and surrounding area

1. Auto-focusing function should not be enabled for intrusion detection.
2. Avoid the scenes with many trees or the scenes with various light changes (like many flashing headlights). The ambient brightness of the scenes shouldn't be too low.
3. Cameras should be mounted at a height of 2.8 meters or above.
4. Keep the mounting angle of the camera at about 45°.
5. The detected objects should not be less than 1% of the entire image and the largest sizes of the detected objects should not be more than 1/8 of the entire image.
6. Make sure cameras can view objects for at least 2 seconds in the detected area for accurate detection.
7. Adequate light and clear scenery are crucial to line crossing detection.

## 5.5.5 Region Entrance Detection Settings

**Region Entrance:** Alarms will be triggered if the target enters the pre-defined areas. Go to Config→Event→Region Entrance interface as shown below.

Detection Config
Area
Schedule

☒ Enable

☐ Save Panoramic Picture

☐ Save Target Cutout

Detection Target

☒ Human
Sensitivity
50

☒ Motor Vehicle
Sensitivity
50

☒ Motorcycle/Bicycle
Sensitivity
50

Alarm Holding Time
20 Seconds

Trigger Alarm Out

☐ Alarm Out

☐ Trigger Audio Alarm

☐ Trigger Light Alarm

☐ Trigger SD Snap

☐ Trigger SD Recording

☐ Trigger Email

☐ Trigger FTP

Save

1. Enable region entrance detection and select the snapshot type and the detection target.
2. Set the alarm holding time.
3. Set alarm trigger options. The setup steps are the same as alarm in (sensor alarm) detection. Please refer to [Alarm IN](#) chapter for details.
4. Click the “Save” button to save the settings.
5. Set the alarm area of the region entrance detection. Click the “Area” tab to go to the interface as shown below.

Detection Config
Area
Schedule

1-02  
h265

2019/08/24 17:24:12

Alarm Area
1

Stop Draw
Clear

Save

Set the alarm area number on the right side. Up to 4 alarm areas can be added. The

detection area setting steps are the same as the area setup of intrusion detection.

6. Set the schedule of the region entrance detection. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).

\* The configuration requirements of camera and surrounding area are the same as intrusion detection.

## 5.5.6 Region Exiting Detection Settings

**Region Exiting:** Alarms will be triggered if the target exits from the pre-defined areas. Go to Config→Event→Region Exiting interface as shown below.

1. Enable region exiting detection and select the snapshot type and the detection target.
2. Set the alarm holding time.
3. Set alarm trigger options. The setup steps are the same as alarm in (sensor alarm) detection. Please refer to [Alarm IN](#) chapter for details.
4. Click the “Save” button to save the settings.
5. Set the alarm area of the region exiting detection. Click the “Area” tab to go to the interface as shown below.  
Set the alarm area number on the right side. Up to 4 alarm areas can be added. The detection area setting steps are the same as the area setup of intrusion detection.
6. Set the schedule of the region exiting detection. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).

\* The configuration requirements of camera and surrounding area are the same as intrusion detection.

### 5.5.7 Target Counting Settings

This function is to calculate the number of the people or vehicles crossing the alarm line through detecting, tracking and counting the shapes of the people or vehicles.

1. Go to Config→Event→Target Counting as shown below.

Detection Config   Area   Schedule

☒ Enable

☐ Save Panoramic Picture

☐ Save Target Cutout

Detection Target

|                                                        |             |                       |    |
|--------------------------------------------------------|-------------|-----------------------|----|
| <input checked="" type="checkbox"/> Human              | Sensitivity | <input type="range"/> | 50 |
| <input checked="" type="checkbox"/> Motor Vehicle      | Sensitivity | <input type="range"/> | 50 |
| <input checked="" type="checkbox"/> Motorcycle/Bicycle | Sensitivity | <input type="range"/> | 50 |

Counting Reset

Timing   Off

Manual  

2. Enable target counting and select the snapshot type and the detection target.

**Save Panoramic Picture:** If it is enabled, the detected panoramic pictures will be captured and saved to the micro-SD card when the targets cross the pre-defined alarm line.

**Save Target Cutout:** If it is enabled, the detected target cutout pictures will be captured and saved to the micro-SD card when the targets cross the pre-defined alarm line.

**Note:** To save snapshots to the local PC, please enable “Local Smart Snapshot Storage” in the local config interface first. To save snapshots to the micro-SD card, please install an micro-SD card first.

**Detection Target:** Select the target to calculate. Human, motor vehicle and motorcycle/bicycle can be selected.

**Counting Reset:** The current number of the target counting can be reset. You can choose to reset the counting daily, weekly or monthly. Click “Reset” to manually reset the current number of crossing line people/car/bike counting.

3. Set the area of the target counting. Click the “Area” tab to go to the interface as shown below.



Set the alarm line number and direction. Only one alarm line can be added.


**Direction:** A->B and A<-B can be optional. The direction of the arrow is entrance. Click the “Draw Area” button and then drag the mouse to draw a line in the image. Click the “Stop Draw” button to stop drawing. Click the “Clear” button to delete the lines.

**Statistics:** If enabled, you can see the statistical information in the live view interface. If disabled, the statistical information will not be displayed in the live view interface. Check “Statistics” and then move the red box to change the position of the statistical information displayed on the screen. Click the “Save” button to save the settings.

**Note:** If the OSD content4 is enabled, it will be disabled after you enable “Statistics”.

4. Set the schedule of the target counting. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).

5. View the statistical information in the live view interface.

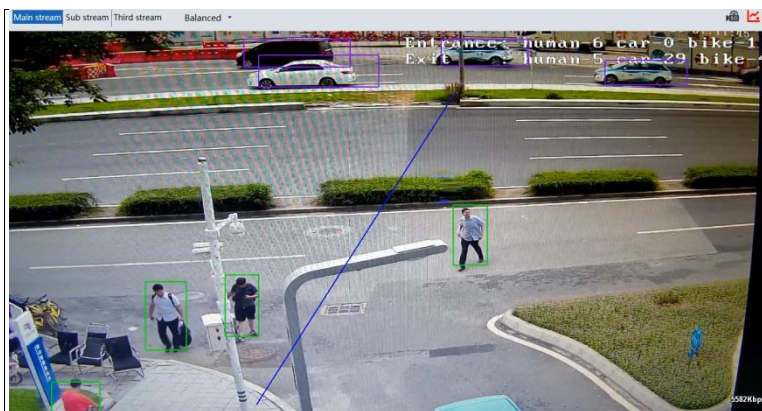

## 5.6 Network Configuration

### 5.6.1 TCP/IP

Go to Config→Network→TCP/IP interface as shown below. There are two ways for network connection.

| IPv4                                                          | IPv6            | PPPoE Config | IP Change Notification Config |
|---------------------------------------------------------------|-----------------|--------------|-------------------------------|
| <input type="radio"/> Obtain an IP address automatically      |                 |              |                               |
| <input checked="" type="radio"/> Use the following IP address |                 |              |                               |
| IP Address                                                    | 192.168.226.201 |              | Test                          |
| Subnet Mask                                                   | 255.255.255.0   |              |                               |
| Gateway                                                       | 192.168.226.1   |              |                               |
| Preferred DNS Server                                          | 210.21.196.6    |              |                               |
| Alternate DNS Server                                          | 8.8.8.8         |              |                               |

**Use IP address (take IPv4 for example)**-There are two options for IP setup: obtain an IP address automatically by DHCP and use the following IP address. Please choose one of the options as needed.

Test: Test the effectiveness of the IP address by clicking this button.

**Use PPPoE**-Click the “PPPoE Config” tab to go to the interface as shown below. Enable PPPoE and then enter the user name and password from your ISP.

| IPv4                                       | IPv6    | PPPoE Config | IP Change Notification Config |
|--------------------------------------------|---------|--------------|-------------------------------|
| <input checked="" type="checkbox"/> Enable |         |              |                               |
| User Name                                  | xxxxxxx |              |                               |
| Password                                   | ●●●●●●  |              |                               |
| <div>Save</div>                            |         |              |                               |

Either method of network connection can be used. If PPPoE is used to connect internet, the camera will get a dynamic WAN IP address. This IP address will change frequently. To be notified, the IP change notification function can be used.

Click “IP Change Notification Config” to go to the interface as shown below.

| IPv4                                   | IPv6 | PPPoE Config | IP Change Notification Config |
|----------------------------------------|------|--------------|-------------------------------|
| <input type="checkbox"/> Trigger Email |      |              |                               |
| <input type="checkbox"/> Trigger FTP   |      |              |                               |
| <div>Save</div>                        |      |              |                               |

**Trigger Email:** when the IP address of the device is changed, the new IP address will be sent to the email address that has been set up.

**Trigger FTP:** when the IP address of the device is changed, the new IP address will be sent to FTP server that has been set up.

## 5.6.2 Port

Go to Config→Network→Port interface as shown below. HTTP port, Data port and RTSP port can be set.

|            |                                   |
|------------|-----------------------------------|
| HTTP Port  | <input type="text" value="80"/>   |
| HTTPS Port | <input type="text" value="443"/>  |
| Data Port  | <input type="text" value="9008"/> |
| RTSP Port  | <input type="text" value="554"/>  |

**HTTP Port:** The default HTTP port is 80. It can be changed to any port which is not occupied.

**HTTPS Port:** The default HTTPS port is 443. It can be changed to any port which is not occupied.

**Data Port:** The default data port is 9008. Please change it as necessary.

**RTSP Port:** The default port is 554. Please change it as necessary.

## 5.6.3 Server Configuration

This function is mainly used for connecting network video management system.

|                                            |                                   |
|--------------------------------------------|-----------------------------------|
| <input checked="" type="checkbox"/> Enable |                                   |
| Server Port                                | <input type="text" value="2009"/> |
| Server Address                             | <input type="text"/>              |
| Device ID                                  | <input type="text" value="1"/>    |
| <input type="button" value="Save"/>        |                                   |

1. Check "Enable".
2. Check the IP address and port of the transfer media server in the Comelit Advance VMS. Then enable the auto report when adding a new device. Next, enter the remaining information of the device in the Comelit Advance VMS. After that, the system will automatically allot a device ID. Please check it in the software.
3. Enter the above-mentioned server address, server port and device ID in the corresponding boxes. Click the "Save" button to save the settings.

## 5.6.4 DDNS

If the camera is set up with a DHCP connection, DDNS should be set for the internet.

1. Go to Config→Network→ DDNS.

|                                     |        |                |      |        |      |      |       |     |       |     |
|-------------------------------------|--------|----------------|------|--------|------|------|-------|-----|-------|-----|
| Port                                | Server | <b>DDNS</b>    | SNMP | 802.1X | RTSP | UPnP | Email | FTP | HTTPS | QoS |
| <input type="checkbox"/> Enable     |        |                |      |        |      |      |       |     |       |     |
| Server Type                         |        | www.dyndns.com |      |        |      |      |       |     |       |     |
| User Name                           |        |                |      |        |      |      |       |     |       |     |
| Password                            |        |                |      |        |      |      |       |     |       |     |
| Domain                              |        |                |      |        |      |      |       |     |       |     |
| <input type="button" value="Save"/> |        |                |      |        |      |      |       |     |       |     |

2. Apply for a domain name.

Enter the related address in the Internet Explorer address bar to visit the website.  
Then Click the “Registration” button.

## 5.6.5 RTSP

Go to Config→Network→RTSP.

|                                                                                   |                                        |       |                                          |
|-----------------------------------------------------------------------------------|----------------------------------------|-------|------------------------------------------|
| <input checked="" type="checkbox"/> Enable                                        |                                        |       |                                          |
| Port                                                                              | 554                                    |       |                                          |
| Address                                                                           | rtsp://IP or domain name:port/profile1 |       |                                          |
|                                                                                   | rtsp://IP or domain name:port/profile2 |       |                                          |
|                                                                                   | rtsp://IP or domain name:port/profile3 |       |                                          |
| Multicast address                                                                 |                                        |       |                                          |
| Main stream                                                                       | 239.0.0.0                              | 50554 | <input type="checkbox"/> Automatic start |
| Sub stream                                                                        | 239.0.0.1                              | 51554 | <input type="checkbox"/> Automatic start |
| Third stream                                                                      | 239.0.0.2                              | 52554 | <input type="checkbox"/> Automatic start |
| Audio                                                                             | 239.0.0.3                              | 53554 | <input type="checkbox"/> Automatic start |
| <input type="checkbox"/> Allow anonymous login (No username or password required) |                                        |       |                                          |
| <input type="button" value="Save"/>                                               |                                        |       |                                          |

Select “Enable” to enable the RTSP function.

**Port:** Access port of the streaming media. The default number is 554.

**RTSP Address:** The RTSP address (unicast) format that can be used to play the stream in a media player.

### Multicast Address

**Main stream:** The address format is

“**rtsp://IP address: rtsp port/profile1?transportmode=mcast**”.

**Sub stream:** The address format is

“**rtsp://IP address: rtsp port/profile2?transportmode=mcast**”.

**Third stream:** The address format is

“**rtsp://IP address: rtsp port/profile3?transportmode=mcast**”.

**Thermal:** The address format is

“**rtsp://IP address: rtsp port/profile4?transportmode=mcast**”.

**Audio:** Having entered the main/sub stream in a VLC player, the video and audio will play automatically.

If “Allow anonymous login...” is checked, there is no need to enter the username and password to view the video.

If “auto start” is enabled, the multicast received data should be added into a VLC player to play the video.

**Note:**1.This camera support local play through a VLC player. Enter the RTSP address (unicast or multicast, eg. rtsp://192.168.226.201:554/profile1?transportmode=mcast) in a VLC player to realize the simultaneous play with the web client.

2. The IP address mentioned above cannot be the address of IPv6.

3. Avoid the use of the same multicast address in the same local network.

4. When playing the video through the multicast streams in a VLC player, please pay attention to the mode of the VLC player. If it is set to TCP mode, the video cannot be played.

5. If the coding format of the video of the main stream is MJPEG, the video may be disordered at some resolutions.

## 5.6.6 802.1X

If it is enabled, the camera's data can be protected. When the camera is connected to the network protected by the IEEE802.1x, user authentication is needed.

|                                            |         |
|--------------------------------------------|---------|
| <input checked="" type="checkbox"/> Enable |         |
| Protocol Type                              | EAP_MD5 |
| EAPOL Version                              | 1       |
| User Name                                  | test    |
| Password                                   | •••••   |
| Confirm Password                           | •••••   |

To use this function, the camera shall be connected to a switch supporting 802.1x protocol. The switch can be reckoned as an authentication system to identify the device in a local network. If the camera connected to the network interface of the switch has passed the authentication of the switch, it can be accessed via the local network.

Protocol type and EAPOL version: Please use the default settings.

**Username and Password:** The user name and password must be the same with the username and password applied for and registered in the authentication server.

## 5.6.7 UPnP

If this function is enabled, the camera can be quickly accessed through the LAN.

Go to Config→Network→UPnP. Enable UPnP and then enter UPnP name.




The image shows a configuration window for UPnP. At the top, there is a checkbox labeled "Enable" which is checked. Below it is a text field labeled "UPnP Name" which is currently empty. At the bottom right of the window is a "Save" button.

## 5.6.8 Email

If you need to trigger Email when an alarm happens or IP address is changed, please set the Email here first.

Go to Config→Network →Email.

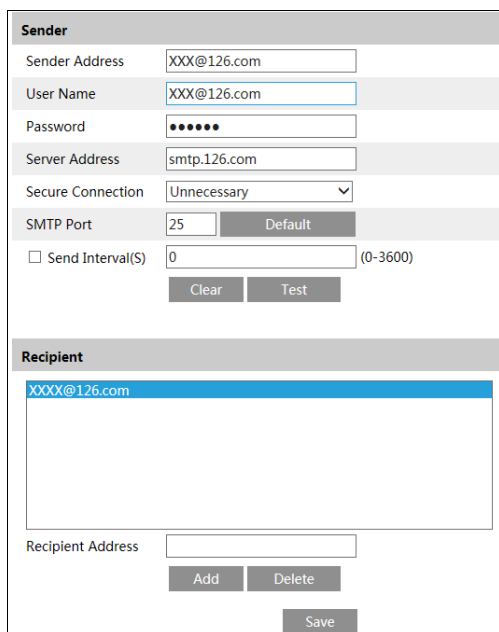

The image shows an "Email" configuration window. It is divided into two main sections: "Sender" and "Recipient".

**Sender Section:**

- Sender Address: XXX@126.com
- User Name: XXX@126.com
- Password: Masked with dots (••••••)
- Server Address: smtp.126.com
- Secure Connection: Unnecessary (dropdown menu)
- SMTP Port: 25 (with a "Default" button next to it)
- Send Interval(S): 0 (with a range of 0-3600 and a checkbox for "Send Interval(S)")
- Buttons: "Clear" and "Test"

**Recipient Section:**

- Recipient Address: XXXX@126.com (highlighted in blue)
- Buttons: "Add" and "Delete" (below the list)
- Save button (at the bottom of the window)

**Sender Address:** sender's e-mail address.

**User name and password:** sender's user name and password.

**Server Address:** The SMTP IP address or host name.

Select the secure connection type at the "Secure Connection" pull-down list according to what's required.

**SMTP Port:** The SMTP port.

**Send Interval(S):** The time interval of sending email. For example, if it is set to 60 seconds and multiple motion detection alarms are triggered within 60 seconds, they will be considered as only one alarm event and only one email will be sent. If one

motion alarm event is triggered and then another motion detection alarm event is triggered after 60 seconds, two emails will be sent. When different alarms are triggered at the same time, multiple emails will be sent separately.  
Click the “Test” button to test the connection of the account.

**Recipient Address:** receiver’s e-mail address.

### 5.6.9 FTP

After an FTP server is set up, captured pictures from events will be uploaded to the FTP server.

Go to Config→Network →FTP.

| Server Name                                                                                                                                                                                                                                                                                                               | Server Address | Port | User Name | Upload Path |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|------|-----------|-------------|
| <div><div>Add FTP</div><div><div>Server Name</div><div>Server Address</div><div>Upload Path</div><div>Port</div><div>User Name</div><div>Password</div></div><div><div>Example/Dir/folder</div><div>21</div><div></div><div><input type="checkbox"/> Anonymous</div></div><div><div>OK</div><div>Cancel</div></div></div> |                |      |           |             |
| <div><div>Add</div><div>Modify</div><div>Delete</div><div>Test</div><div>Save</div></div>                                                                                                                                                                                                                                 |                |      |           |             |

- Server Name:** The name of the FTP server.
- Server Address:** The IP address or domain name of the FTP.
- Upload Path:** The directory where files will be uploaded to.
- Port:** The port of the FTP server.
- User Name and Password:** The username and password that are used to login to the FTP server.

### 5.6.10 HTTPS

HTTPS provides authentication of the web site and protects user privacy.  
Go to Config →Network→HTTPS as shown below.

|                                            |                                                                                                                                                                                                                                                                                               |
|--------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <input checked="" type="checkbox"/> Enable |                                                                                                                                                                                                                                                                                               |
| Certificate installed                      | C=CN, ST=GD, L=SZ, O=embeddedsoftware, OU=IPC, H=localhost, E=com.cn, Issued to: C=CN, ST=GD, L=SZ, O=embeddedsoftware, OU=IPC, H=localhost, E=com.cn, Issuer: C=CN, ST=GD, L=SZ, O=embeddedsoftware, OU=IPC, H=localhost, E=com.cn, Validity date: 2017-07-26 01:02:07 ~ 2022-07-26 01:02:07 |
| Attribute                                  |                                                                                                                                                                                                                                                                                               |
| Delete Save                                |                                                                                                                                                                                                                                                                                               |

There is a certificate installed by default as shown above. Enable this function and save it. Then the camera can be accessed by entering https://IP: https port via the web browser (eg. https://192.168.1.150:443).

A private certificate can be created if users don't want to use the default one. Click "Delete" to cancel the default certificate. Then the following interface will be displayed.

|                                 |                                                                                                                                                                                        |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <input type="checkbox"/> Enable |                                                                                                                                                                                        |
| Installation type               | <input checked="" type="radio"/> Have signed certificate, install directly<br><input type="radio"/> Create a private certificate<br><input type="radio"/> Create a certificate request |
| Install certificate             | <input type="text"/> Browse Install                                                                                                                                                    |
| Save                            |                                                                                                                                                                                        |

\* If there is a signed certificate, click "Browse" to select it and then click "Install" to install it.

\* Click "Create a private certificate" to enter the following creation interface.

|                                 |                                                                                                                                                                                        |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <input type="checkbox"/> Enable |                                                                                                                                                                                        |
| Installation type               | <input type="radio"/> Have signed certificate, install directly<br><input checked="" type="radio"/> Create a private certificate<br><input type="radio"/> Create a certificate request |
| Create a private certificate    | Create                                                                                                                                                                                 |
| Save                            |                                                                                                                                                                                        |

Click the "Create" button to create a private certificate. Enter the country (only two letters available), domain (camera's IP address/domain), validity date, password, province/state, region and so on. Then click "OK" to save the settings.

\* Click "Create a certificate request" to enter the following interface.

☐ Enable

Installation type
 

☐ Have signed certificate, install directly
   
☐ Create a private certificate
   
☒ Create a certificate request

Create a certificate request
 

Create
 Download
 Delete

Click “Create” to create the certificate request. Then download the certificate request and submit it to the trusted certificate authority for signature. After receiving the signed certificate, import the certificate to the device.

### 5.6.11 QoS

QoS (Quality of Service) function is used to provide different quality of services for different network applications. With the deficient bandwidth, the router or switch will sort the data streams and transfer them according to their priority to solve the network delay and network congestion by using this function.

Go to Config→Network→QoS.

|                  |    |
|------------------|----|
| Video/Audio DSCP | 13 |
| Alarm DSCP       | 35 |
| Manager DSCP     | 53 |

Video/Audio DSCP: The range is from 0 to 63.

Alarm DSCP: The range is from 0 to 63.

Manager DSCP: The range is from 0 to 63.

Generally speaking, the larger the number is, the higher the priority is.

## 5.7 Security Configuration

### 5.7.1 User Configuration

Go to Config→Security→User interface as shown below.

| Add Modify Delete |           |               |             |
|-------------------|-----------|---------------|-------------|
| Index             | User Name | User Type     | Binding MAC |
| 1                 | admin     | Administrator |             |

#### Add user:

1. Click the “Add” button to pop up the following textbox.

**Add User** [X]

User Name

Password

Level     
 9~15 characters, including at least two of the following categories: numbers, special characters, upper case letters, lower case letters.

Confirm Password

User Type  ▼

Bind MAC  ☐

[OK] [Cancel]

2. Enter user name in “User Name” textbox.

3. Enter the password in the “Password” and “Confirm Password” textbox. Please set the password according to the requirement of the password security level (Go to Config→Security→Security Management→Password Security interface to set the security level).

It is recommended to set a high level password that shall be composed of numbers, special characters, upper or lower case letters for your account security.

4. Choose the **user type**. **Administrator** has all permissions. **Normal** user can only view the live video. **Advanced** user has the same permissions as an Administrator except for; user, backup settings, factory reset, and upgrading the firmware.

5. Enter the MAC address of the PC in the “Bind MAC” textbox.

If this option is enabled, only the PC with the specified MAC address can access the camera for that user.

6. Click the “OK” button and then the newly added user will be displayed in the user list.

### Modify user:

1. Select a user to modify password and MAC address if necessary in the user configuration list box.

2. The “Edit user” dialog box pops up by clicking the “Modify” button.

**Edit User** [X]

☒ Modify Password

User Name:

Old Password:

New Password:

Level:    
 9~15 characters, including at least two of the following categories:  
 numbers, special characters, upper case letters, lower case letters.

Confirm Password:

Bind MAC:  ☐

OK Cancel

3. Enter the old password of the user in the “Old Password” text box.
4. Enter the new password in the “New password” and “Confirm Password” text box.
5. Enter computer’s MAC address as necessary.
6. Click the “OK” button to save the settings.

**Note:** To change the access level of a user, the user must be deleted and added again with the new access level.

#### Delete user:

1. Select the user to be deleted in the user configuration list box.
2. Click the “Delete” button to delete the user.

**Note:** The default administrator account cannot be deleted.

## 5.7.2 Online User


Go to Config→Security→Online User to view the user who is viewing the live video.

| Index | Client Address | Port  | User Name | User Type     |          |
|-------|----------------|-------|-----------|---------------|----------|
| 1     | 192.168.17.232 | 55760 | admin     | Administrator | Kick Out |

An administrator user can kick out all the other users (including other administrators).

## 5.7.3 Block and Allow Lists

Go to Config→Security→Block and Allow Lists as shown below.

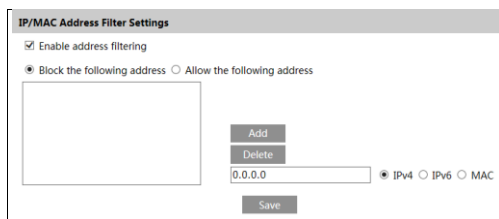

The screenshot shows the 'IP/MAC Address Filter Settings' window. It has a title bar with the same text. Inside, there is a checked checkbox for 'Enable address filtering'. Below it, there are two radio buttons: 'Block the following address' (selected) and 'Allow the following address'. A large empty rectangular box is provided for listing addresses. To the right of this box are 'Add' and 'Delete' buttons. Below these is a text input field containing '0.0.0.0'. To the right of the input field are three radio buttons: 'IPv4' (selected), 'IPv6', and 'MAC'. At the bottom right is a 'Save' button.


The setup steps are as follows:

Check the “Enable address filtering” check box.

Select “Block/Allow the following address”, IPv4/IPv6/MAC and then enter IP address or MAC address in the address box and click the “Add” button.

## 5.7.4 Security Management


Go to Config→Security→Security Management as shown below.

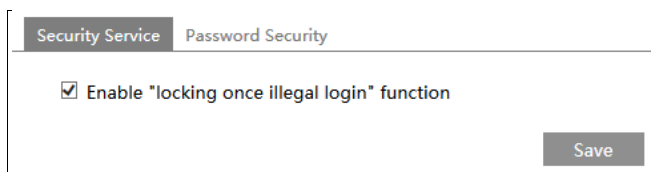

The screenshot shows the 'Security Service Password Security' settings page. It has two tabs: 'Security Service' and 'Password Security', with the latter being active. Below the tabs, there is a checked checkbox for 'Enable "locking once illegal login" function'. At the bottom right is a 'Save' button.

In order to prevent against malicious password unlocking, “locking once illegal login” function can be enabled here. If this function is enabled, login failure after trying six times will make the login interface locked. The camera can be logged in again after a half hour or after the camera reboots.

### ● Password Security

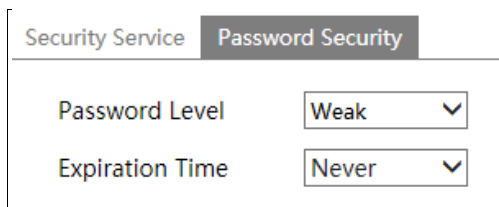

The screenshot shows the 'Password Security' settings page. It has two tabs: 'Security Service' and 'Password Security', with the latter being active. Below the tabs, there are two settings: 'Password Level' with a dropdown menu set to 'Weak', and 'Expiration Time' with a dropdown menu set to 'Never'.

Please set the password level and expiration time as needed.

Password Level: Weak, Medium or Strong.

Weak level: Numbers, special characters, upper or lower case letters can be used. You can choose one of them or any combination of them when setting the password.

Medium Level: 9~15 characters, including at least two of the following categories: numbers, special characters, upper case letters, lower case letters.

Strong Level: 9~15 characters. Numbers, special characters, upper case letters and lower case letters must be included.

For your account security, it is recommended to set a strong password and change your password regularly.

## 5.8 Maintenance Configuration

### 5.8.1 Backup and Restore

Go to Config→Maintenance→Backup & Restore.

The screenshot shows a web interface for 'Backup and Restore' settings. It is divided into three main sections: 'Import Setting', 'Export Settings', and 'Default Settings'. The 'Import Setting' section has a 'Path' label, a text input field, a 'Browse' button, and an 'Import Setting' button. The 'Export Settings' section has an 'Export Settings' button. The 'Default Settings' section has a 'Keep' label and a list of three checkboxes: 'Network Config', 'Security Configuration', and 'Image Configuration'. Below these checkboxes is a 'Load Default' button.

- **Import & Export Settings**

Configuration settings of the camera can be exported from a camera into another camera.

1. Click “Browse” to select the save path for import or export information on the PC.
2. Click the “Import Setting” or “Export Setting” button.

- **Default Settings**

Click the “Load Default” button to restore all system settings to the default factory settings except those you want to keep.

### 5.8.2 Reboot

Go to Config→Maintenance→Reboot.


Click the “Reboot” button to reboot the device.

### Timed Reboot Setting:

If necessary, the camera can be set up to reboot on a time interval. Enable “Time Settings”, set the date and time and then click the “Save” button to save the settings.

## 5.8.3 Upgrade

Go to Config→Maintenance→Upgrade. In this interface, the camera firmware can be updated.



Local upgrade

Path


1. Click the “Browse” button to select the save path of the upgrade file
2. Click the “Upgrade” button to start upgrading the firmware.
3. The device will restart automatically

**Caution!** Do not close the browser or disconnect the camera from the network during the upgrade.

## 5.8.4 Operation Log

To query and export log:

1. Go to Config→Maintenance→Operation Log.

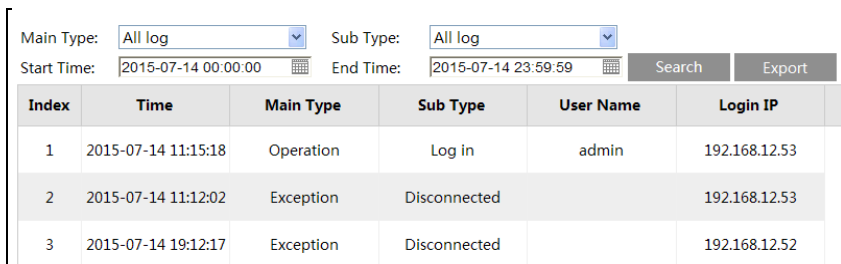


| Main Type:  | All log             | Sub Type: | All log             |                                       |                                       |
|-------------|---------------------|-----------|---------------------|---------------------------------------|---------------------------------------|
| Start Time: | 2015-07-14 00:00:00 | End Time: | 2015-07-14 23:59:59 | <input type="button" value="Search"/> | <input type="button" value="Export"/> |
| Index       | Time                | Main Type | Sub Type            | User Name                             | Login IP                              |
| 1           | 2015-07-14 11:15:18 | Operation | Log in              | admin                                 | 192.168.12.53                         |
| 2           | 2015-07-14 11:12:02 | Exception | Disconnected        |                                       | 192.168.12.53                         |
| 3           | 2015-07-14 19:12:17 | Exception | Disconnected        |                                       | 192.168.12.52                         |

2. Select the main type, sub type, start and end time.
3. Click “Search” to view the operation log.
4. Click “Export” to export the operation log.

# 6 Search

## 6.1 Image Search

Click Search to go to the interface as shown below. Images that are saved on the micro-SD card can be found here.

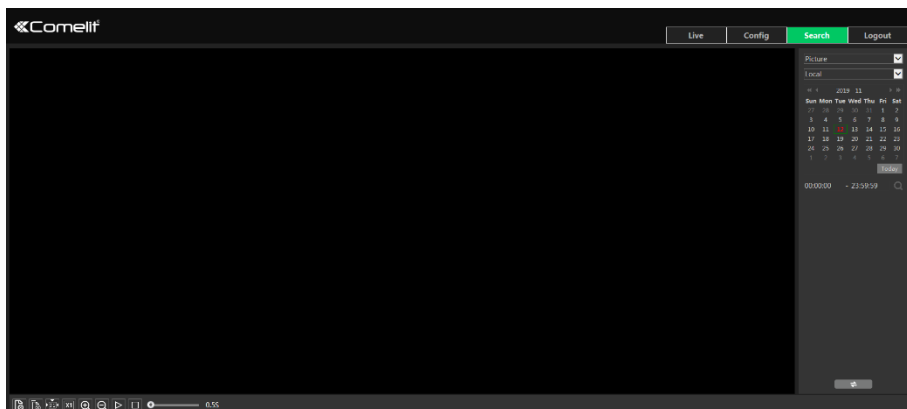


### ● Local Image Search

1. Choose “Picture”—“Local”.
2. Set time: Select date and choose the start and end time.
3. Click  to search the images.
4. Double click a file name in the list to view the captured photos.  
Click  to return to the previous interface.


### ● SD Card Image Search

1. Choose “Picture”—“SD Card”.

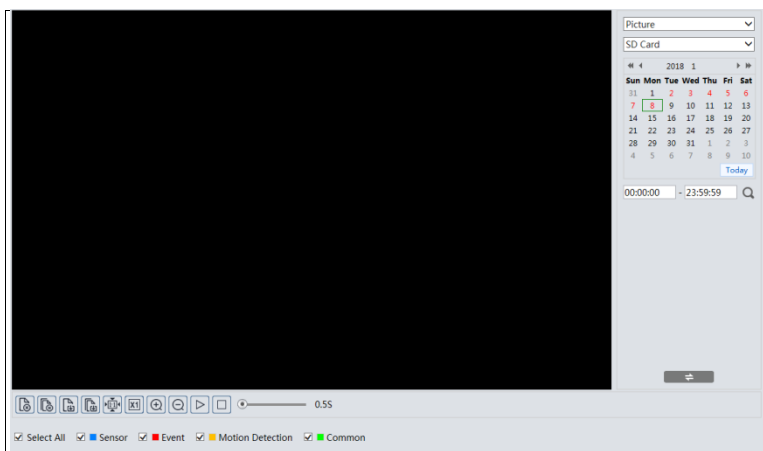

2. Set time: Select date and choose the start and end time.
3. Choose the alarm events at the bottom of the interface.
4. Click  to search the images.
5. Double click a file name in the list to view the captured photos.  
Click  to return to the previous interface.


The descriptions of the buttons are shown as follows.

| Icon                                                                                | Description                                                                | Icon                                                                                | Description                                                                       |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
|    | Close: Select an image and click this button to close the image.           |    | Close all: Click this button to close all images.                                 |
|   | Save: Click this button to select the path for saving the image on the PC. |   | Save all: Click this button to select the path for saving all pictures on the PC. |
|  | Fit size: Click to fit the image on the screen.                            |  | Actual size: Click this button to display the actual size of the image.           |
|  | Zoom in: Click this button to digitally zoom in.                           |  | Zoom out: Click this button to digitally zoom out.                                |
|  | Slide show play: Click this button to start the slide show mode.           |  | Stop: Click this button to stop the slide show.                                   |
|   | Play speed: Play speed of the slide show.                                  |                                                                                     |                                                                                   |


# 6.2 Video Search

## 6.2.1 Local Video Search

Click Search to go to the interface as shown below. Videos were recorded locally to the PC can be played in this interface.

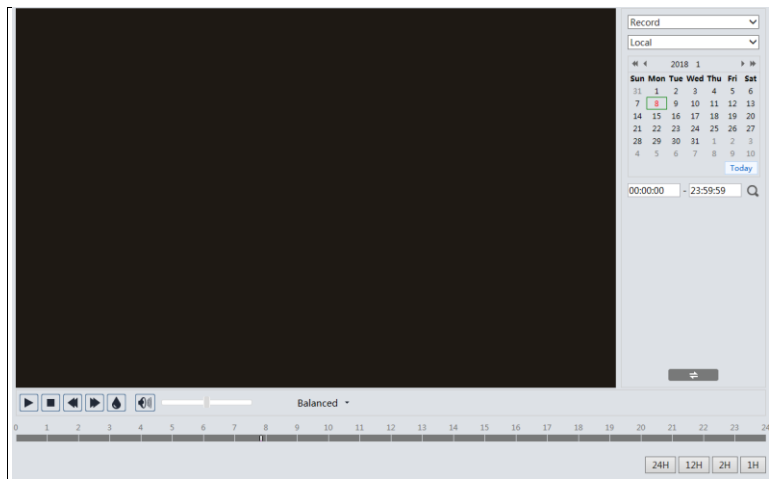

- 1. Choose “Record”—“Local”.
- 2. Set search time: Select the date and choose the start and end time.
- 3. Click  to search the images.
- 4. Double click on a file name in the list to start playback.

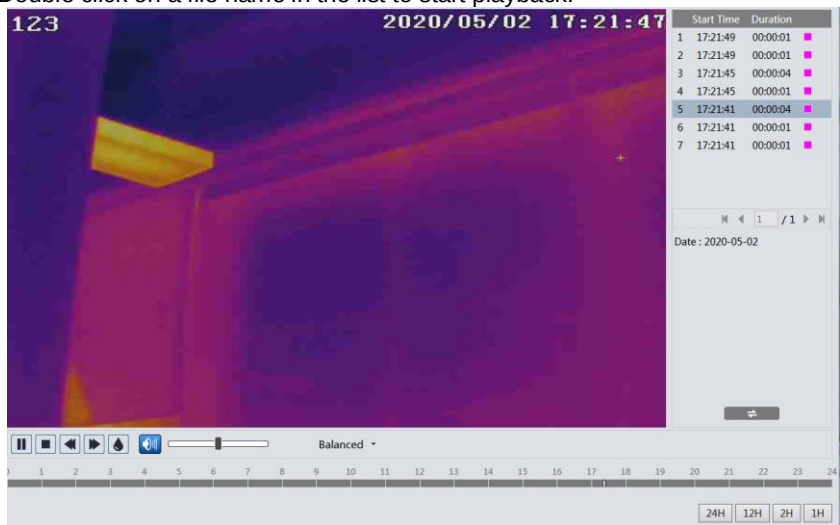


Thermal image or optical image can be searched.

| Icon                                                                              | Description                                                                        | Icon                                                                              | Description       |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------|
|  | Play button. After pausing the video, click this button to continue playing.       |  | Pause button      |
|  | Stop button                                                                        |  | Speed down        |
|  | Speed up                                                                           |  | Watermark display |
|  | Enable / disable audio; drag the slider to adjust the volume after enabling audio. |                                                                                   |                   |


6.2.2 Micro-SD Card Video Search

Click Search to go to the interface as shown below. Videos that were recorded on the micro-SD card can be played in this interface.

- 1. Choose “Record”—“SD Card”.
- 2. Set search time: Select the date and choose the start and end time.
- 3. Click  to search the images.

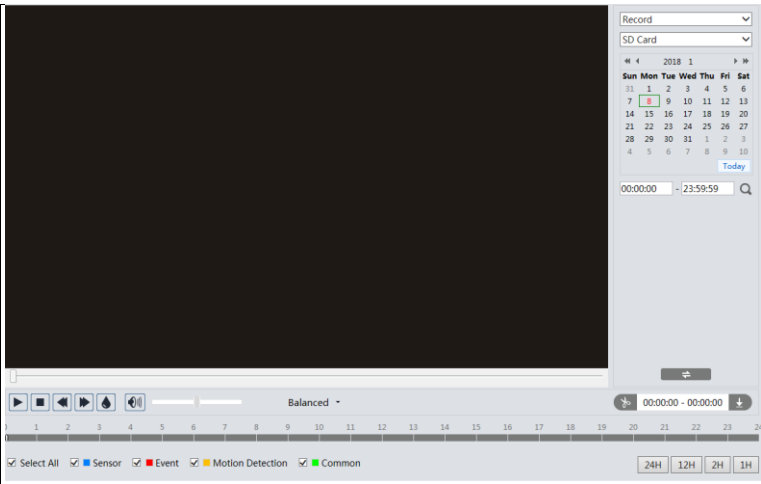

- 4. Select the alarm events at the bottom of the interface.
- 5. Select mix stream (video and audio stream) or video stream as needed.
- 6. Double click on a file name in the list to start playback.

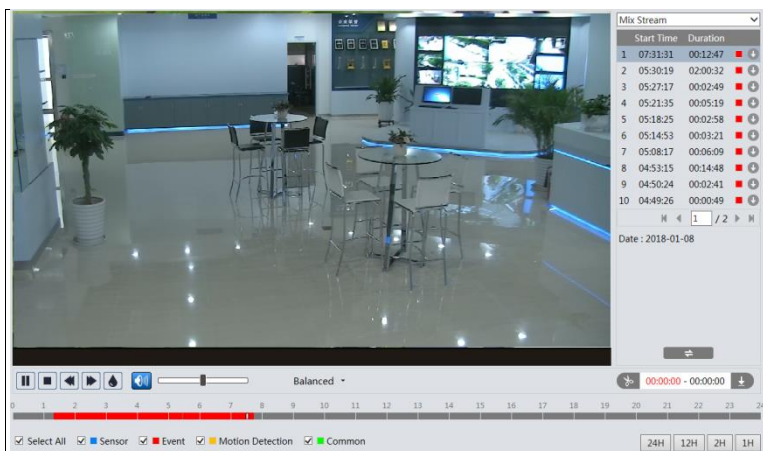

The time table can be shown in 24h/12h/2h/1h format by clicking the corresponding buttons.

Video clip and downloading

1. Search the video files according to the above mentioned steps.
2. Select the start time by clicking on the time table.
3. Click  to set the start time and then this button turns blue (  ).
4. Select the end time by clicking on the time table. Then click  to set the end time.
5. Click  to download the video file in the PC.

| Index | Process | Record | Start Time         | End Time           | Path                      | Operate              |
|-------|---------|--------|--------------------|--------------------|---------------------------|----------------------|
| 1     | 100%    | Cut    | 2018-01-16 01:1... | 2018-01-16 01:1... | <a href="#">Favorites</a> | <a href="#">Open</a> |

Set up D:\Favorites
Clear List
Close

Click “Set up” to set the storage directory of the video files.

Click “Open” to play the video.

Click “Clear List” to clear the downloading list.

Click “Close” to close the downloading window.

## 6.3 Data Record Search

The wrist temperature and the face picture of the person passing through can be recorded to the micro-SD card. Click “Data Record” in the live view interface to go to the following interface.

### Face recognition result



2020-05-23 02:03:02 34.2°C



2020-05-23 02:02:59 34.3°C



2020-05-23 02:02:14 34.1°C



2020-05-23 02:02:13 34.4°C



2020-05-23 02:02:06 34.3°C



2020-05-23 02:01:13 34.4°C



2020-05-23 02:00:42 34.3°C



2020-05-23 02:00:36 34.2°C



2020-05-23 01:56:43 34.1°C



2020-05-23 01:49:07

1

/ 1

15

View 1 - 10 of 10

### Search

Start Time  
2020-05-23 00:00:00

End Time  
2020-05-23 23:59:59

Search

Tips: A maximum of 20000 face pictures can be searched at a time.

Export

### Result

Number of Queries  
10

Start Time  
2020-05-23 02:03:02

End Time  
2020-05-23 01:43:02

Set the start and end time and then click “Search” to view the face detection results and the corresponding temperature records. Click “Export” to export the face pictures and the temperature records.

# Appendix - Troubleshooting

## Password forgot

A: Reset the device to the default factory settings.

Default IP: 192.168.1.150; Username: admin; Password: admin

## Fail to connect devices through Internet Explorer browser.

A: Network is not well connected. Check the connection.

B: IP address is not available. Change the IP address.

C: Web port number has been changed: contact administrator to get the correct port number.

D: Exclude the above reasons. Restore to default setting by Comelit Advance IP Tool.


## Comelit Advance IP tool cannot search devices.

The anti-virus software in your computer may cause it. Please stop it and try to search device again.

## Internet Explorer cannot download ActiveX control.

A. Internet Explorer browser may be setup to block ActiveX. Follow the steps below.

① Open the browser and then click Tools → Internet Options.

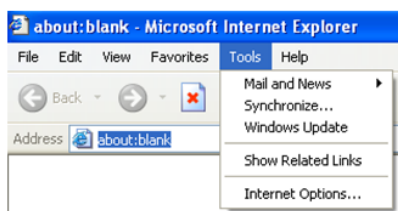


② Select Security → Custom Level....

③ Enable all the options under "ActiveX controls and plug-ins".

④ Click OK to finish setup.

B. Other plug-ins or anti-virus blocks ActiveX. Please uninstall or close them.

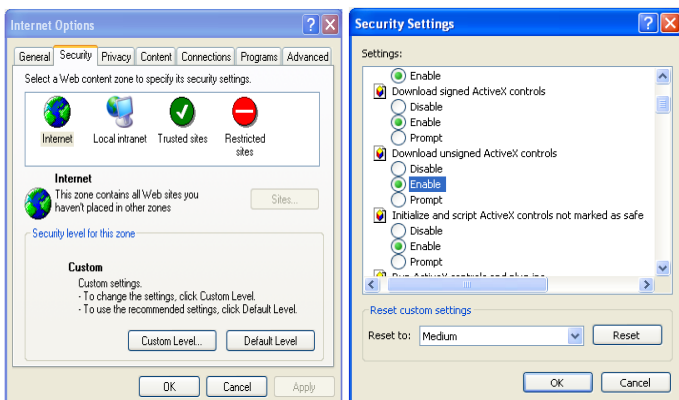

## No sound can be heard.

A: Audio input device is not connected. Please connect and try again.

B: Audio function is not enabled at the corresponding channel. Please enable this function.

[www.comelitgroup.com](http://www.comelitgroup.com)



Via Don Arrigoni, 5 - 24020 Rovetta (BG) - Italy