

INSTALLATION & MAINTENANCE MANUAL
LEDF12CHS



IP
20

12V



57

GENERAL INSTRUCTIONS

These instructions should be read carefully and retained after installation by the end user for future reference and maintenance.

These instructions should be used to aid installation of the following product:
LEDF12CHS

SAFETY

- Installation of this product should only be carried out by a qualified electrician or competent person to the current Building and IEE Wiring Regulations (BS7671)
- Please isolate mains prior to installation/maintenance
- Check the total load on the circuit (including when this product is fitted) does not exceed the rating of the circuit cable, fuse or circuit breaker
- Please note the IP (Ingress of Protection) rating of this product when deciding the location for installation
- This product is Class III
- This product is IP20 rated
- This product is fully controllable when used with LEDFR3 controller

INSTALLATION

- Provide power to the point of installation
- Decide on the desired layout of the LED Flex taking into consideration the following:
 - a) The cables are long enough to connect to the driver
 - b) The LED Flex is not going to be installed in a position where it is at risk of being cut, trapped or damaged
 - c) The total maximum length does not exceed the max power rating of the LED driver (see website for more details)
- When cutting the LED Flex, ensure it is only cut along the line indicated between the copper connections, approximately every 100mm along the strips' length (see Fig 1)

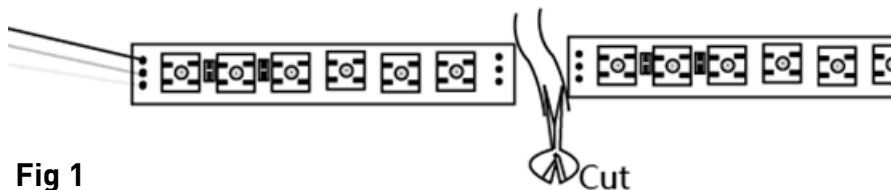


Fig 1

- The LED Flex is provided with self-adhesive backing - ensure the surface application is clean and dust free before installation
- Ensuring correct polarity is observed connect the 230V mains supply to the primary side of the 12V constant voltage driver, Live (brown), Neutral (blue)
- From the secondary side of the driver connect a red and black cable to the input side of the RGB Chaser controller ensuring correct polarity is observed (+ Red) (- Black) (see Fig 2)
Terminate cables from the RGB Chaser Flex to the RGB Chaser controller
- Connect RGB Chaser Flex to RGB Chaser controller using the push-fit connector provided

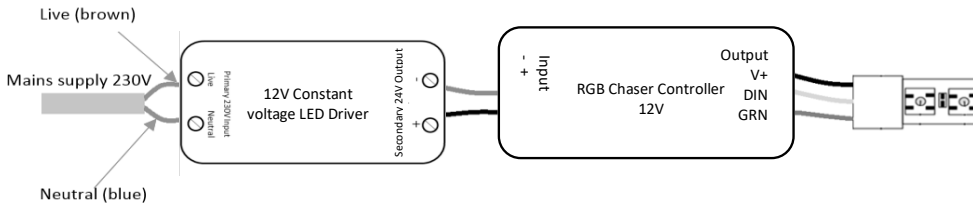


Fig 2

- Switch on power and test for correct operation

Note: a soldering iron is required for re-connecting RGB Chaser LED Flex, please see website for more details

Light Connection

The maximum distance that can be run is 10m for 12V LED flex when connected in series (see Fig 3). To power additional LED flex (depending on LED driver capacity) it is recommended that a signal amplifier is used to avoid volt drop and increase signal strength. This should be connected in parallel up to the maximum power of the LED driver and dependent on the RGB Chaser being used.

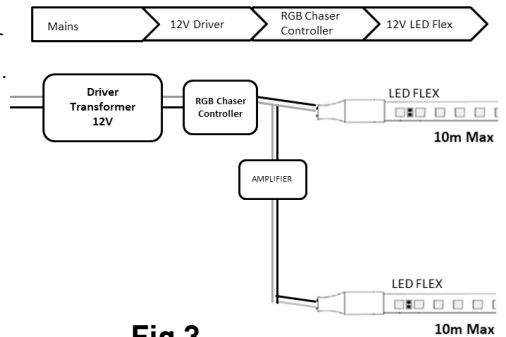


Fig 3

WARNING

This product must be disconnected from the circuit if subjected to any high voltage or insulation resistance testing. Irreparable damage will occur if this instruction is not followed.

GENERAL

The unit should be recycled in the correct manner when it reaches the end of its life. Check local authorities for where facilities exist.

Clean with a soft dry cloth only, do not use aggressive cleaning products or solvents which may damage the product.

WARRANTY

This product has a warranty of 3 years from date of purchase. Failure to install this product in accordance with the current edition of the IEE Wiring Regulations, improper use, or removal of the batch codes will invalidate the warranty. If this product should fail within its warranty period it should be returned to the place of purchase for a free of charge replacement. ML Accessories does not accept responsibility for any installation costs associated with the replacement product. Your statutory rights are not affected. ML Accessories reserve the right to alter product specification without prior notice.



ML Accessories Limited
LU5 5TA
www.mlaccessories.co.uk

SBDEC17_V1